



Platinum E-Series

Operator's Manual

LA/4700E

4700-010
Revision D

Diagraph, an ITW company, continually improves its products, and reserves the right to change or discontinue specifications and designs shown in this manual without notice and without incurring obligation. Diagraph has made every effort to verify the information contained in this manual, but reserves the right to correct any error at the time of the manual's next revision.

**© 2012 Illinois Tool Works Inc. All rights reserved.
Printed in the United States of America**

1.0 Introduction



1.1 The LA/4700 Label - Applicator

The LA/4700 is a next generation label applicator designed for modularity, continuous labeling, self-diagnostics, and ease of use. Modularity of design provides the basis for ease of installation, setup, and maintenance. The electronics system employs a hardware-specific design, thus increasing reliability and throughput. The hardware was developed to simplify construction, and increase longevity by using durable materials. These units will perform 24/7 operation in harsh environments and operate trouble-free, given that the appropriate preventative maintenance is performed on regular service intervals.

1.2 Product Safety

Safety awareness is critical when working with equipment that contains moving parts and extending electric actuators. Please read all warnings and cautions thoroughly before operating this device.

This product meets the requirements of CAN/CSA-22.2 NO.60950-00 * UL 60950 using Diagraph an ITW Company approved items. Units are only tested and qualified with Diagraph an ITW Company approved parts and accessories. Use of other parts or accessories may introduce potential risks that Diagraph an ITW Company can assume no liability for.

WARNINGS

- **WARNING - Moving parts of this machine can present hazards. Components that cannot be guarded because of loss of functionality are marked with a warning symbol.**
- **Be aware of the actuator extension distance, and avoid accidental triggering of the photosensor.**
- **When servicing the unit's electronic assemblies, always remove the power cord from the unit to prevent accidental shock.**
- **When running for extended periods of time, use caution when accessing the drive module circuitry. The motor drive power transistors, motor case, and motor heatsink can become hot under constant use.**
- **Wear personal protective equipment, as instructed by your supervisor, when operating or working near this device.**

COMPLIANCE

- **CAUTION: Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer/ Data Processing Equipment, ANSI/NFPA 75.**
- **ATTENTION: Ne peut être utilisé dans une salle d'ordinateurs telle que définie dans la norme. ANSI/NFPA 75 Standard for the Protection of Electronic Computer/ Data Processing Equipment**
- **This unit has been tested and found to comply with the limits for a Class A device, pursuant to part 15 of the FCC Rules.**

- This unit has been tested to comply with CE Standards.
- This unit is equipped with an Emergency Stop switch. Depressing this switch will cause all machine operations to cease.
- This unit was tested and it was determined that a potential for tipping exists in certain orientations. **In compliance with UL safety standards, the stand must be secured to the surface where it is located.** Additionally, this type of securing will result in greater product application accuracy.

1.3 Warranty Information

The LA/4700 labeler, including all components unless otherwise specified, carry a limited warranty. For all warranty terms and conditions, contact Diagraph, an ITW Company, for a complete copy of the Limited Warranty Statement.

1.4 Specifications

General Specifications

Category		Parameter
Dimensions (with Yoke)		31 in. (787 mm) L x 27 in. (686 mm) H x 26 in. (660 mm) D
Weight	WIPE E-TAMP, E-WASA E-FASA Chi-Stand	74 lbs (33.6 kg) (includes yoke, no stand) 72 lbs (32.7 kg) (includes yoke, no stand) 82 lbs (37.2 kg) (includes yoke, no stand) 96 lbs (43.5 kg)
Accuracy		±0.06 in. (±1.6 mm)
Certifications		CE, CSA, FCC approved, Listed (UL 60950)
Supply Roll Capacity		14 in. (355.6 mm) OD with a 3 in. (76.2 mm) ID Core
Label Length		0.5 in. (12.7 mm) Min. to 14.0 in. (355.6 mm) Max.
Label Width		0.5 in. (12.7 mm) Min. to 6.5 in. (165.1 mm) Max.
Label Caliper	Standard Gap Sensor	150 mils. (3.81 mm)
Product Rate	WIPE E-TAMP E-TAMP/BLOW E-FASA E-WASA	XXX PPM Max. XXX PPM Max. 55 PPM Max. Single Apply: 52 PPM Max. Dual Apply: 28 PPM Max. Dependent on Label Length, Feed Speed, and Product Spacing





General Specifications

Category	Parameter
Linespeed WIPE E-TAMP E-TAMP/BLOW E-FASA E-WASA	300 FPM Max. 150 FPM Max. 150 FPM Max. 75 FPM Max. 125 FPM Max.
Temperature	41°F - 104°F (5°C - 40°C)
Humidity	10 to 85% RH, Non-Condensing


Electrical Specifications

Category	Nominal	Minimum	Maximum
AC Voltage Supply	100 - 240 VAC, 1.6A 50/60 Hz	90 VAC 47 Hz	264 VAC 63 Hz
Product Detector	Low: 0 to 3 VDC High: 3 to 5 VDC Supplies 24VDC	0 VDC	24 VDC
Product Detector Pulse Width	10 mS	1 mS	Infinite
Auxiliary Output Warning Tower	0 and 24 VDC 1 Amp sinking	0 VDC 0 mA	24 VDC 3 Amps sinking
Discrete Inputs (Optional)	Low: 0 to 10 VDC High: 10 to 24 VDC	0 VDC	26 VDC
Discrete Input Pulse Width Detection	10 mS	1 mS	Infinite
Discrete Outputs (Optional)	0 - 24 V AC/DC at 150 mA	0 V AC/DC, 13 ohms	30 V AC/DC at 400 mA






1.5 System Dimensions - Wipe

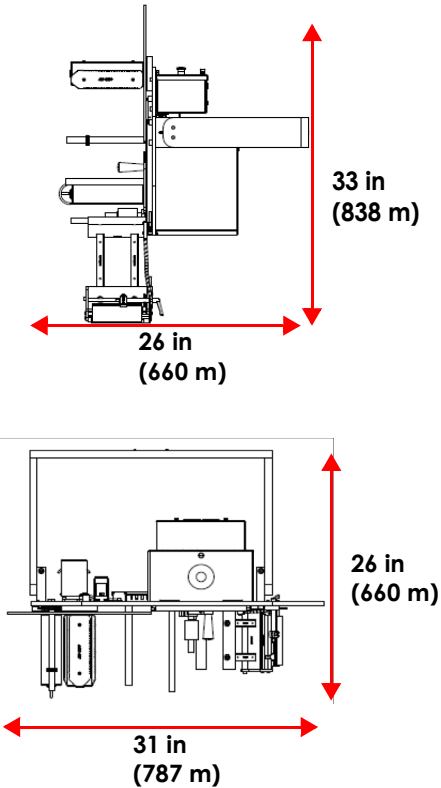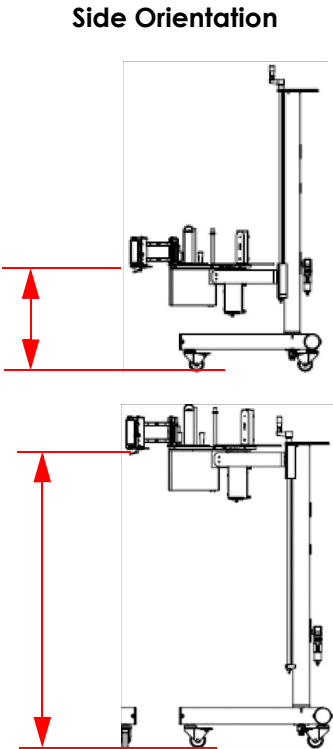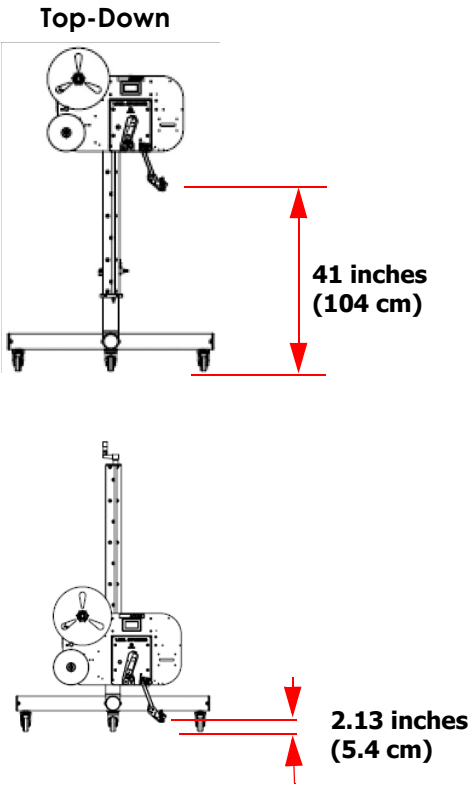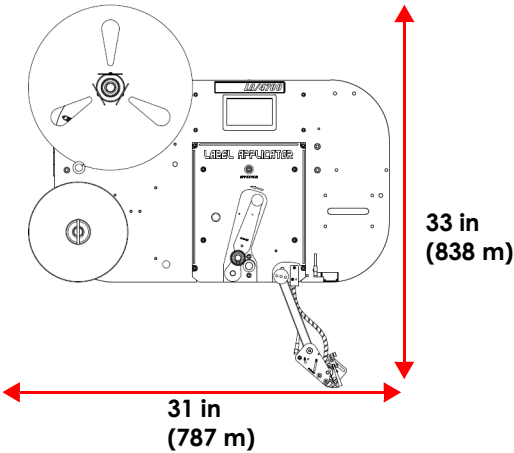


1.6 System Dimensions - E-TAMP & E-TAMP/BLOW

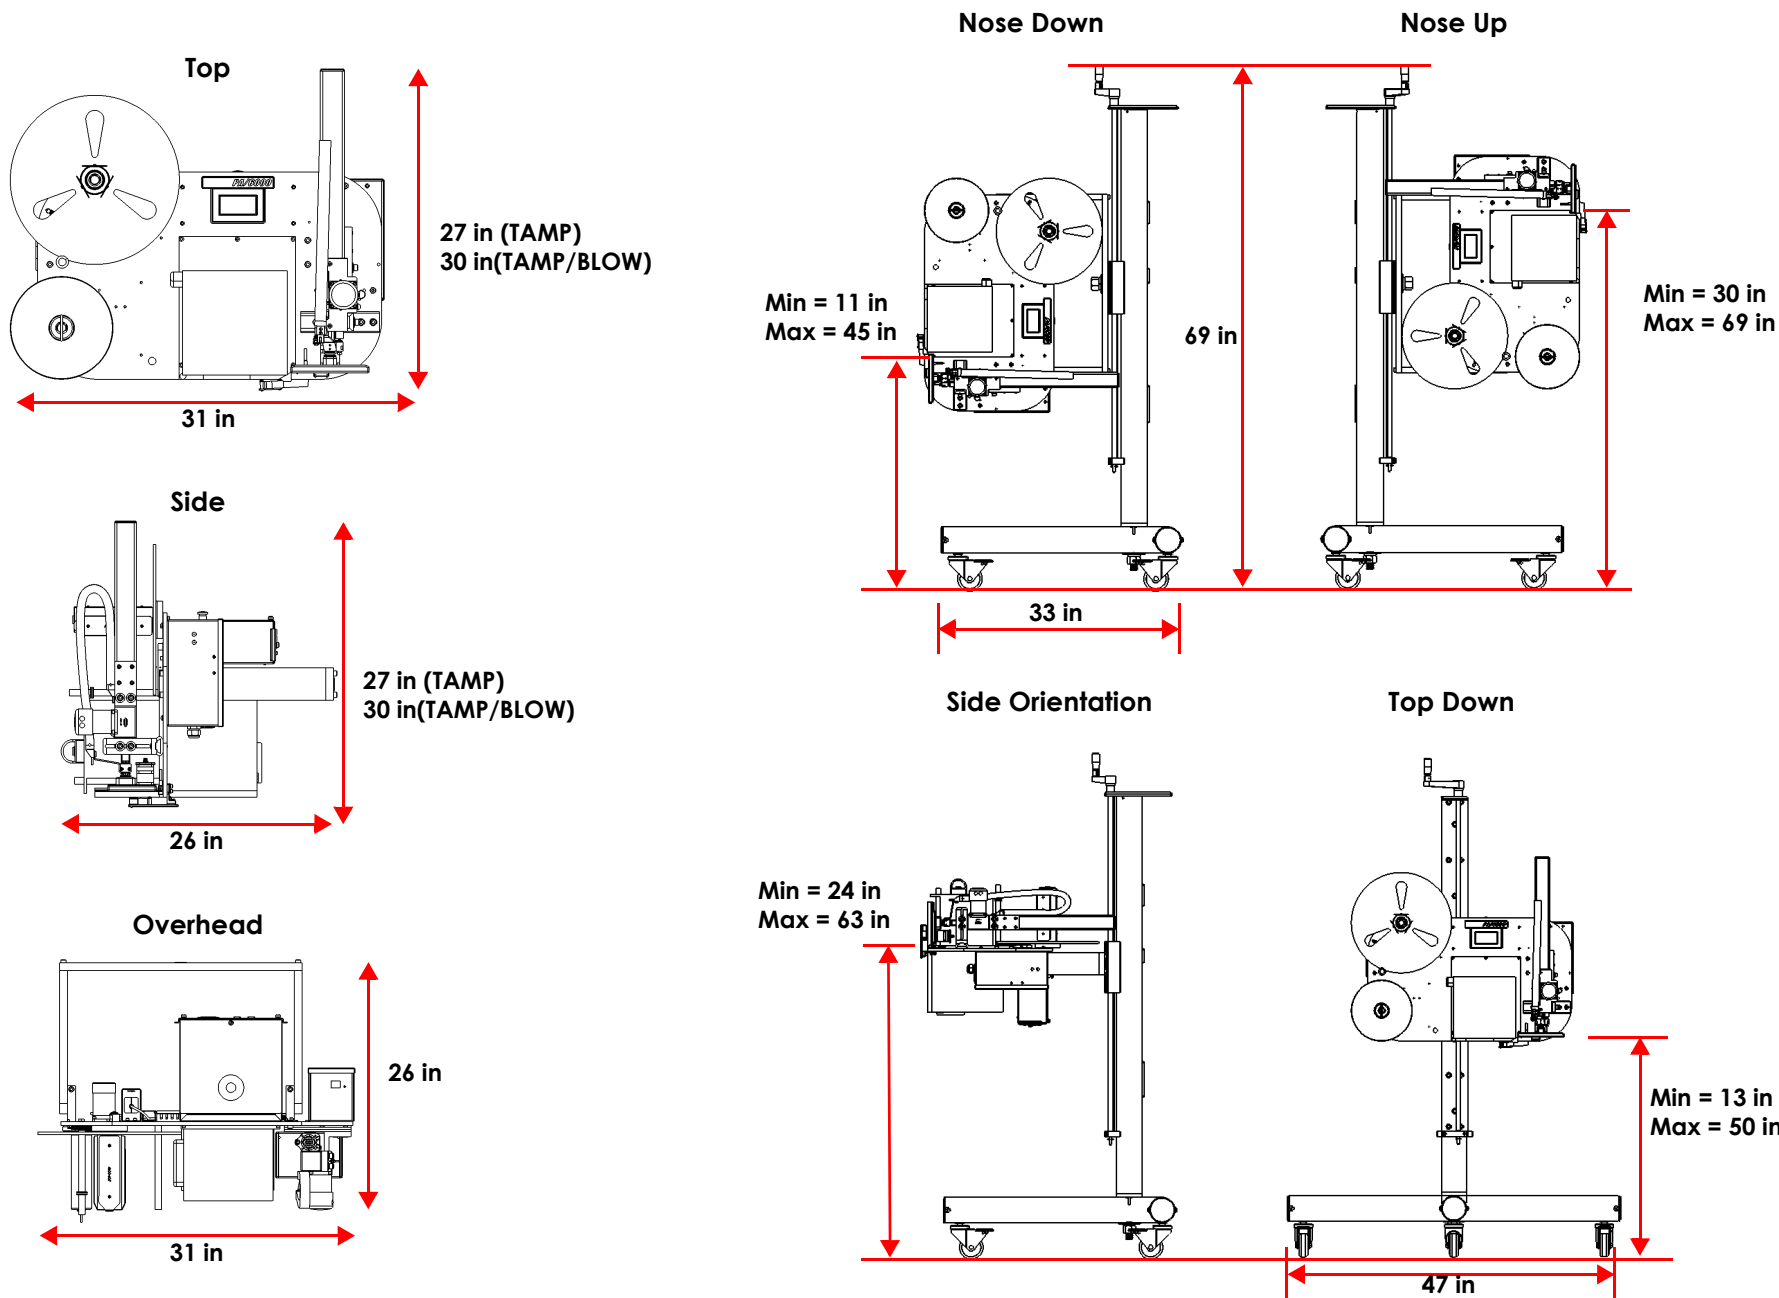


1.7 System Dimensions - E-FASA 10in.

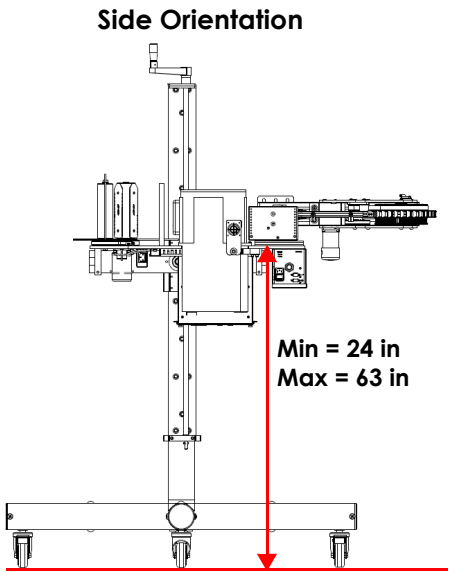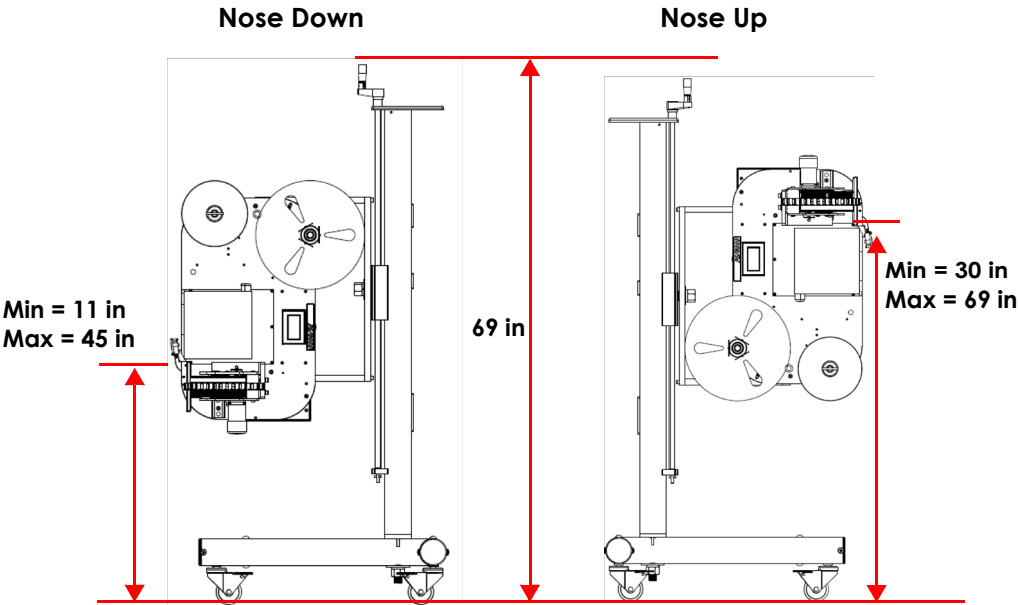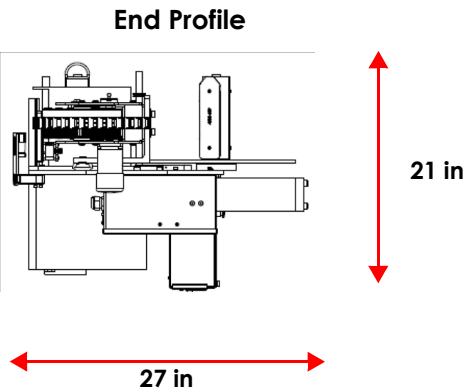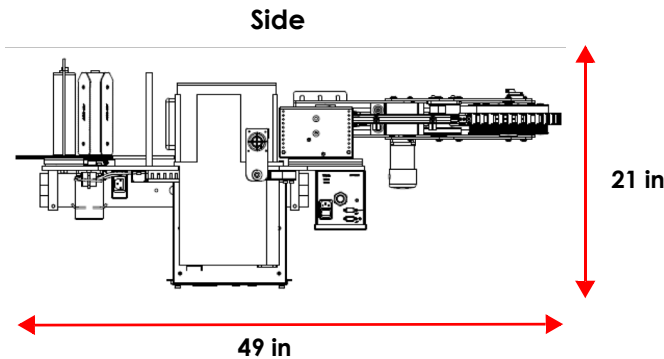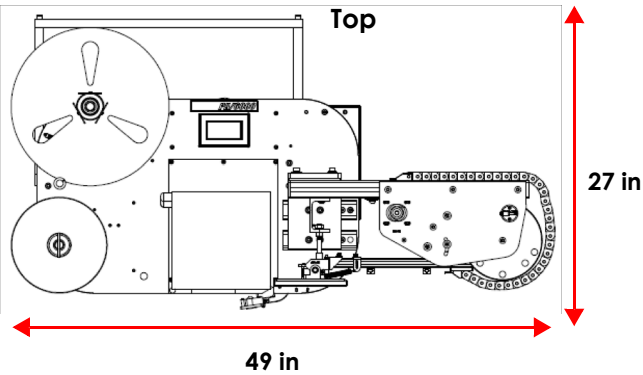


1.8 System Dimensions - E-FASA 20in.

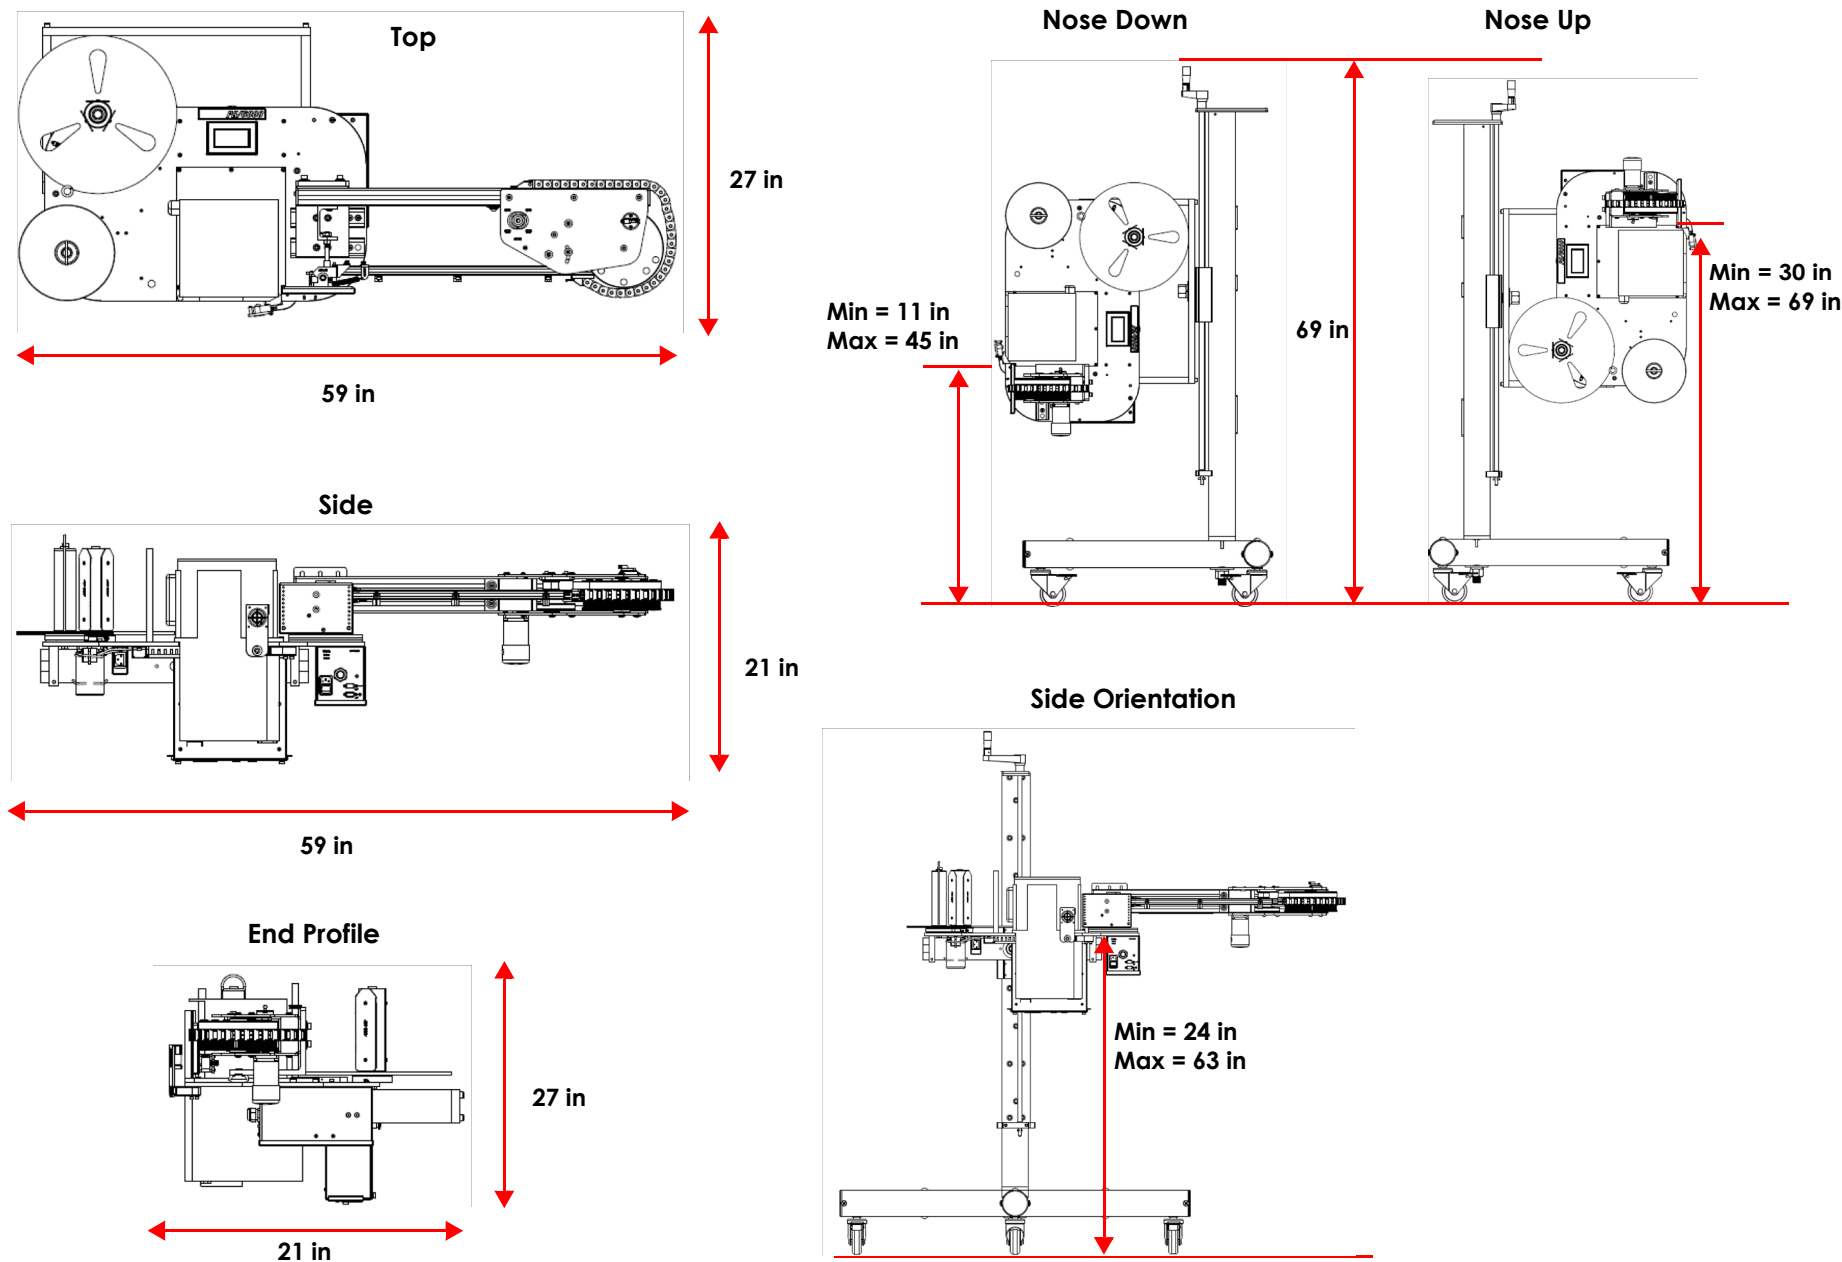


1.9 System Dimensions - E-WASA

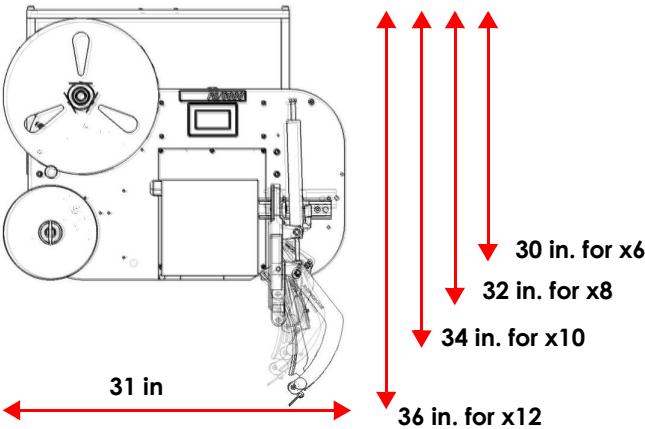


Side

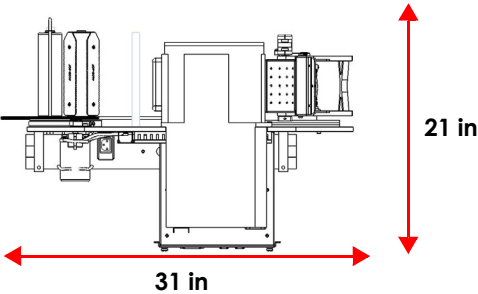


End Profile

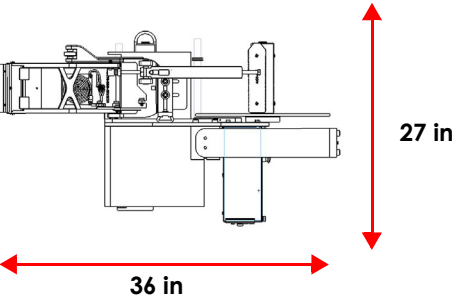

Side Orientation

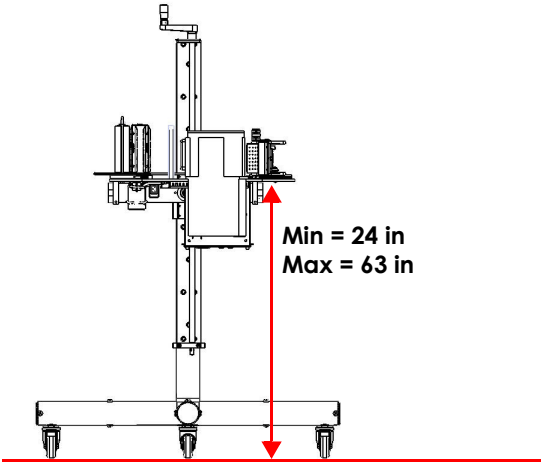


Top- Down

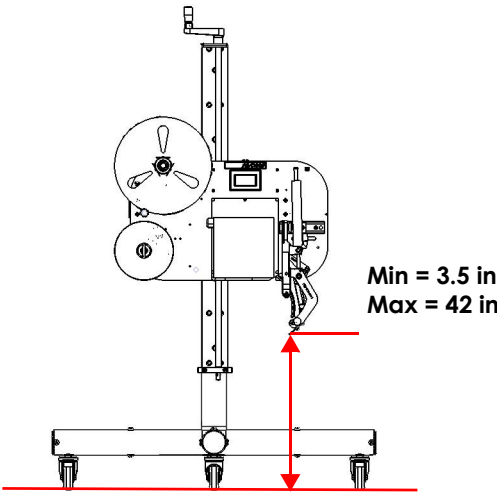


2.0 System Modules - E-TAMP & E-TAMP/BLOW

FRONT

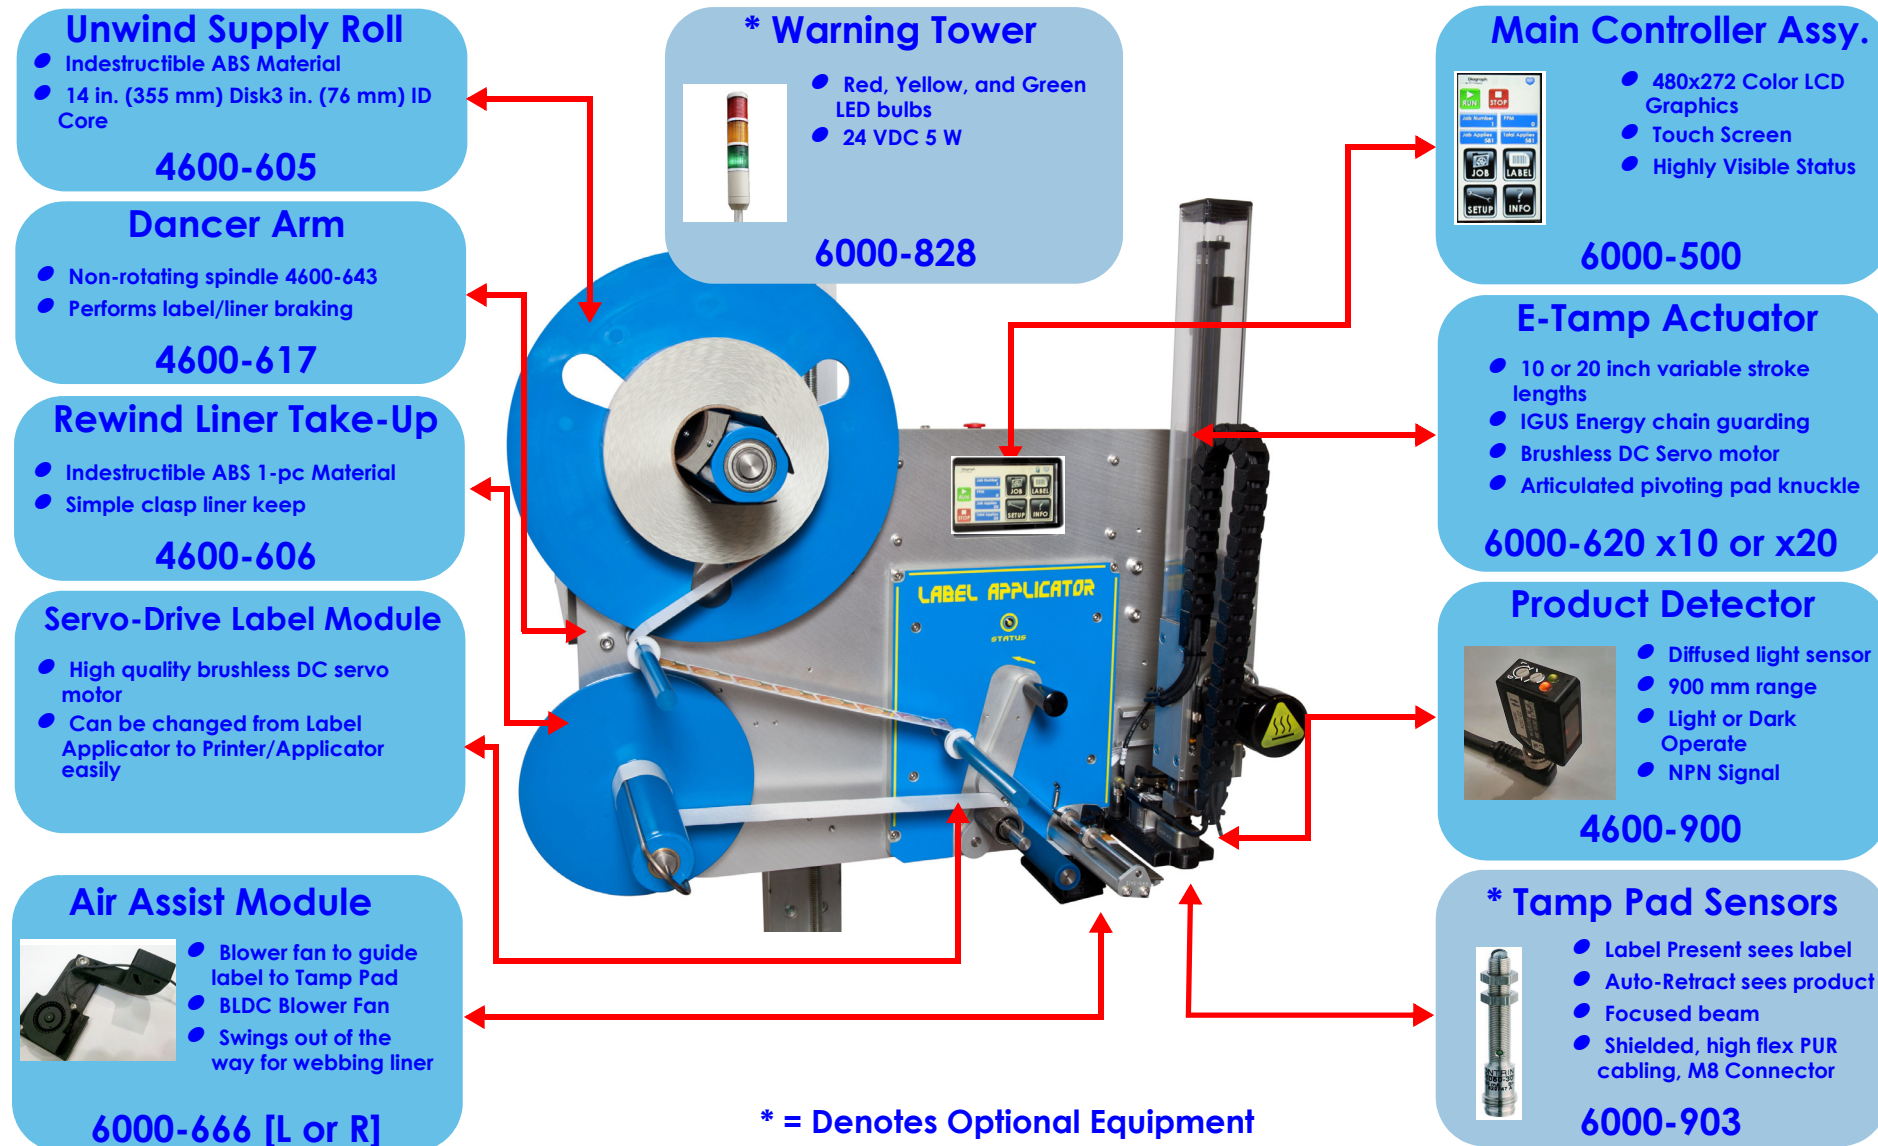

REAR

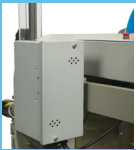MCM


- Motor Control Module
- Handles actuator and fan controls
- Has internal power supply for high-speed movements

6000-550*** Tube Stand**

- T-Base stand w/casters
- High Tensile Strength Steel
- Aluminum travel plate
- Mounting locations for options, such as remote user interface

6160-329*** Stand Cleats**

- Allows labeler to easily be removed and replaced at the line by locating the casters in position
- Prevents any accidental tipping of the labeler stand

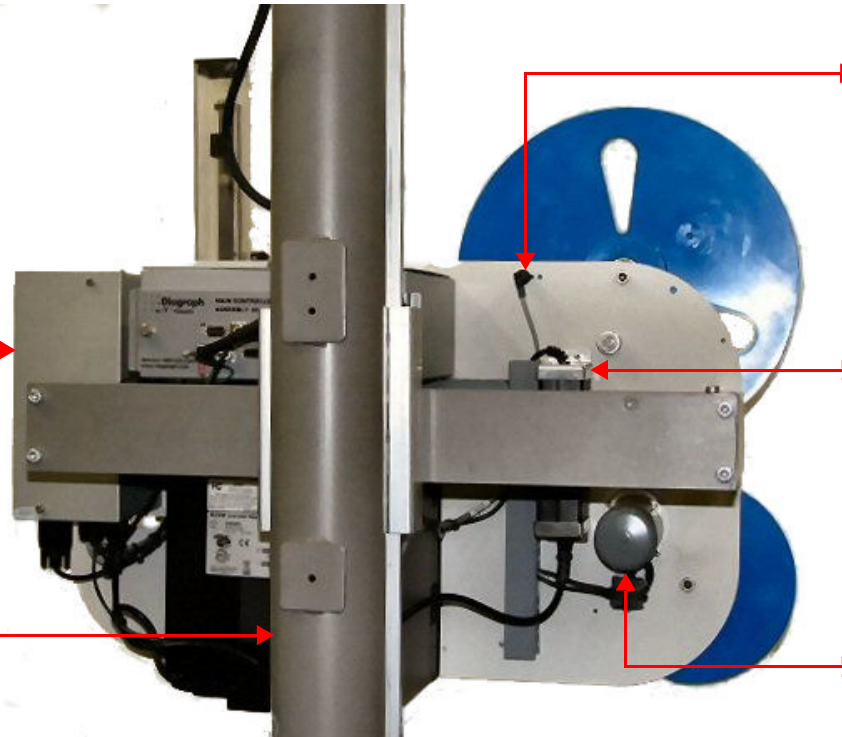4600-622*** Label Low Sensor**

- Signals warning when supply roll is reaching the end
- Adjustable positions for triggering sooner or later into the roll

6000-903**Power Supply**

- AutoRanging Voltage
- Protected against surges, spikes, and transients
- Low voltage to electrical enclosure for greater safety

4600-522**Rewind Motor**

- Brushless DC Motor
- No clutch rewind eliminates adjustments and wear items
- Keeps up with the fastest print speeds

4600-503*** = Denotes Optional Equipment**

3.0 System Modules - E-WASA



Overview

System Modules

Fan Box

- Curved surface to allow system to be positioned at line in minimal space
- Moves away from the product to avoid wear

* 6170-502-WxL (R/L)

Mount

- Mounts the support arms to the dovetail track

* 6170-501-WxL (R/L)

Support Arms

- 4 and 6 inch widths
- Retains brush and roller
- Performs the product's corner wrap

* 6170-505-WxL

Fan Assembly


- Fan generates the label holding force prior to application
- Easily removed for service and cleaning

6170-509

Adjustable Cylinder

- Adjusts for various weight products
- Maximizes the wrap around the corner
- Allows the corner wrap fan assembly to come settle at home

6170-515

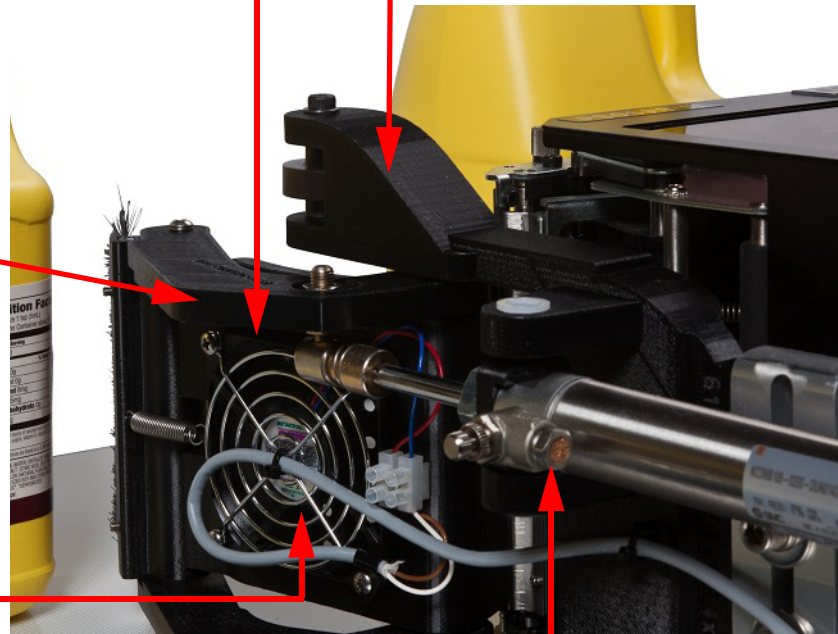



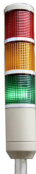

* **Note** - W in the part number is width
Standard widths: 2, 4, 6

L in the part number is length
Standard lengths: 6, 8, 10, 12

4.0 Optional Equipment

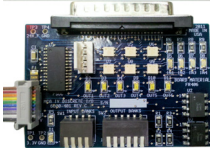


<div>6000-405</div> <div></div>	<div>Discrete I/O Module</div> <div>This module provides four (4) optically-isolated inputs and six (6) isolated solid-state outputs. These I/O lines are event driven by selections made by the operator through the user interface.</div>
<div>6000-903</div> <div></div>	<div>Auto Retract, Label Present, and Label Low Sensors</div> <div>The <u>Auto Retract</u> sensor detects the product's surface before contact to allow light touch or varying size (height or width) applications. The <u>Label Present</u> sensor detects the label on the pad to stop the labeler from applying the wrong label to a sequenced product. It will generate another label if one is removed from the pad prior to application, and stops the generation of another label if one is already on the pad. The <u>Label Low</u> sensor is used to signal the operator that the consumable label roll is low and will require replacement soon.</div>

<div>6000-828 6000-828AUD</div> <div></div>	<div>Warning Tower</div> <div>The three (3) segment warning tower visually displays Online-Running in green, Warning-Offline in yellow, and Error-Offline in red. The tower comes with LED bulbs. The tower is offered with an audible alarm siren for the error condition with the 6000-828AUD part number.</div>
<div>4600-901 4600-902</div> <div></div>	<div>Product Detectors - Break-Beam & Laser</div> <div>The standard diffuse light sensor works well for standard corrugate, but for shrink wrapped pallets the <u>4600-901 Break-Beam</u> sensor is a better choice. For small products, or better accuracy the <u>4600-902 Laser</u> sensor is ideal. All sensors have a quick disconnect M8 connector, shielded cable, and can be mounted on the baseplate or on-line with included brackets.</div>

5.0 Theory of Operation

The LA/4700 system has several application methods transfer the label to the product.

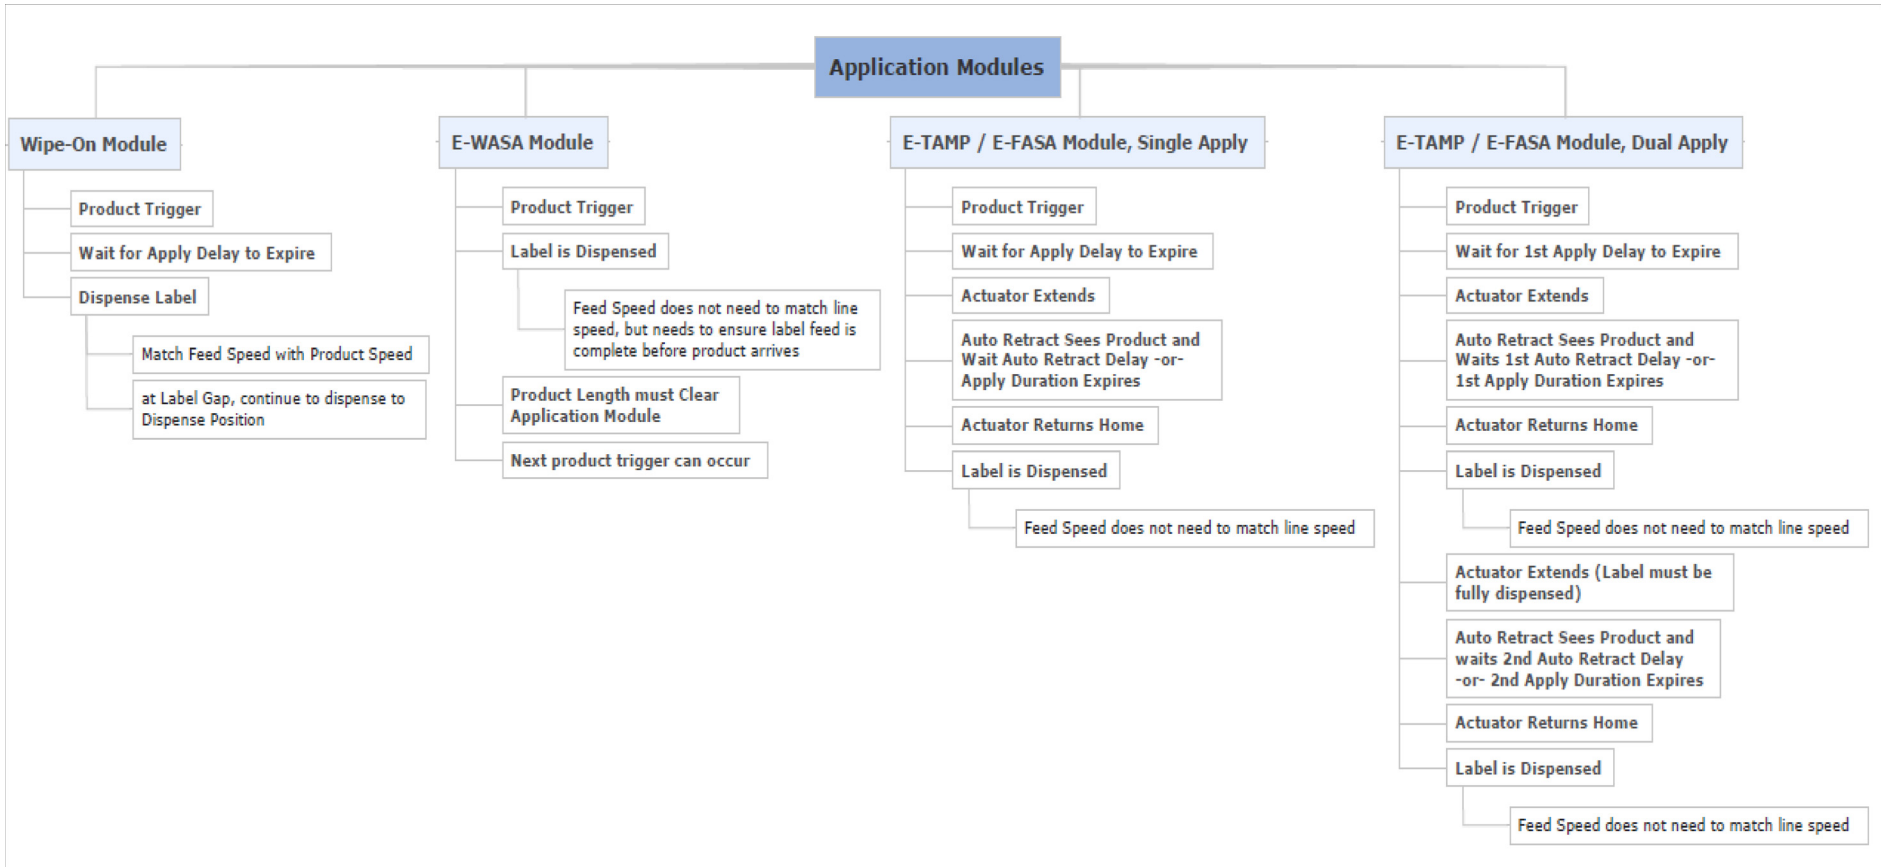

6.0 Setup

STEP 1

Determine Labeler Orientation

Orientation




Nose-Down Apply

- Side panel of product is to be labeled
- Placing label close to top edge of product
- Conveyor is low to ground, thus keeping unwind/rewind change out within reach



- Not for applying label toward lower edge of product
- Not for tall conveyors where roll change out would be difficult


View



Nose-Up Apply

- Side panel of product is to be labeled
- Placing label close to bottom edge of product
- Conveyor is standard height, thus keeping unwind/rewind change out within reach


- Not for applying label toward upper edge of product
- Not for lower height conveyors
- Not for label lengths greater than 6 inches (153 mm.)



Side Orientation

- Side panel of product is to be labeled
- Corner wrapped panels
- Label is to be applied in landscape orientation


- Not for tall conveyors where roll change out would be difficult

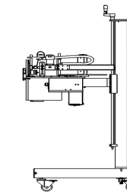

Top-Down / Bottom-Up Apply

- Top or Bottom panel of product is to be labeled

- More material handling is required for Bottom-Up applications


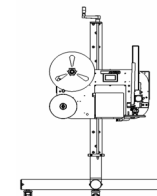


STEP 2**Labeler Alignment with Product****Optimum Labeling Head Positioning**

The labeler should be adjusted for position to the product through the yoke, which rotates about two axes. The labeler must be rotated on these axes to obtain a parallel surface contact when the tamp pad meets the product's surface. The systems are equipped with an articulated knuckle to accommodate some product skew and variances. The setup should not depend on this small amount of pivoting to avoid the proper alignment of the yoke.


Label Supply Roll Positioning

The labeler will not work properly if the label supply angle is beyond 90 degrees, with respect to the ground. This will allow the label roll to slip off of the labeler and can cause liner tracking problems within the printer.

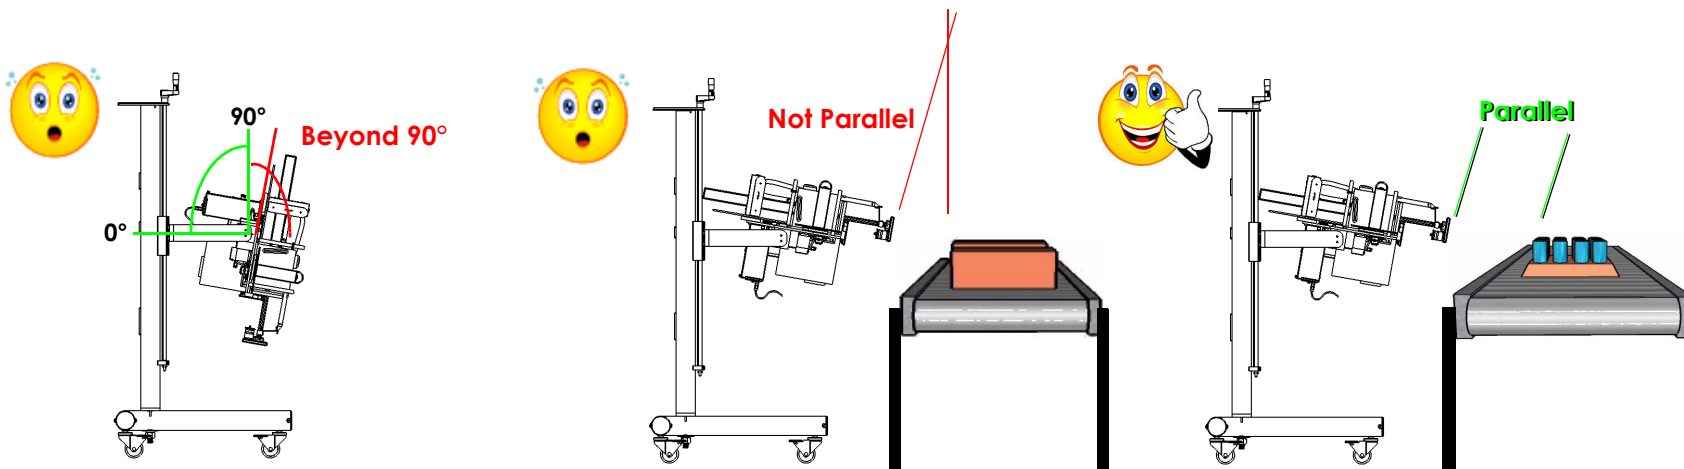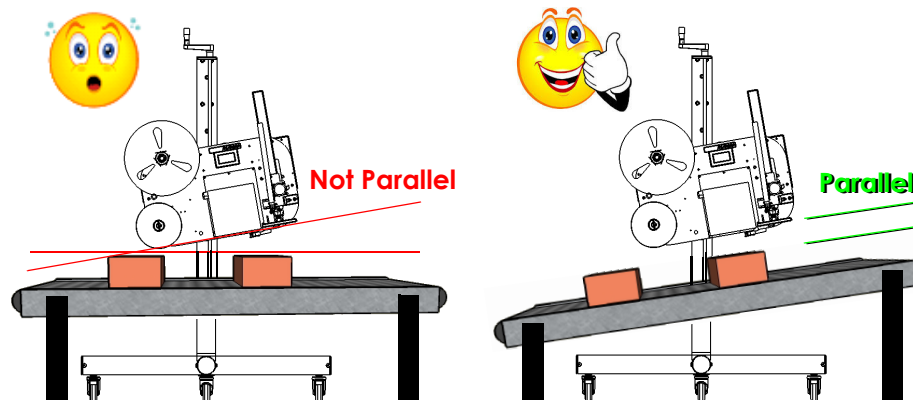

STEP 3**Basic User Interface Screens****The User Interface**

The MCA IV uses a micro computer to handle all of the user interface graphics, USB and microSD file actions, Ethernet and serial communication, and real time clock. It employs a dedicated I/O controller processor to handle all of the time-critical events and maintain timing accuracies to less than 1 millisecond. Since the system settings are located on the internal microSD card, the user must return to the Home Screen to save changes to the settings.

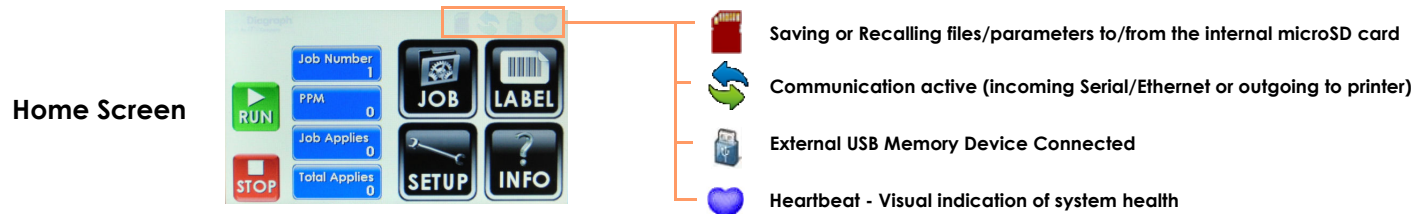**Passcode**

The factory default passcode is 00000000, which can be individually set for Administrator and User access levels. Administrator access allows for changes to all settings and parameters, while the user access allows for job parameter changes. Run/stop operation and Informational Menus are not passcode protected. Setting the Admin passcode to "0" allows unrestricted access to all settings. Setting the User passcode to "0" allows unrestricted access to Job Parameters, but not the higher level Admin settings.

Job Menu

From the Home Screen, there are four Menu choices that subdivide all of the system controls. The Job Menu allows immediate access to change all of the parameters that are particular to a product run by selecting the job number. This menu is passcode protected by the User and Admin codes.

USR SUP



Recall a job by either using the up/down arrows or press the Job button to use a keypad

The job will be recalled when the Home button is pressed

If the job number is new, the default values will be recalled

There are other methods to automated switching jobs. Another method is through the label format. A control code can be used switch the job within the label format

STEP 3

Basic User Interface Screens (Cont.)

Label Menu

From the Home Screen, the second main menu choice is the Label Menu. The Label Menu allows immediate access to change any of the parameters that are particular to the label. This menu is passcode protected by the User and Admin codes.



Label Shape sets the type of label to be detected by the label gap sensor

Std (Standard) will detect the gap for rectangular-shaped labels that have a standard 1/8th inch gap

Odd will detect various shapes of labels where at least one edge passes underneath the gap sensor fork. In this mode, it is acceptable to have the final resting position of the liner gap to be under the gap sensor fork. Otherwise, in Standard mode, the system would determine this to be a missing label condition.

Rewind Tension sets the “electric clutch” for the label take-up. There are five settings, which are toggled with each keypress. This setting will depend on the feed speed, label length, and the liner material type.

Make Label sets the time when the next label is dispensed.

At Home immediately feeds a label when the actuator returns to the home position

P1 Defect feeds a label when product detector 1 is triggered. This is used for slower throughput lines that benefit from minimizing label adhesive exposure before application time. In this mode, the Product Delay must be long enough to allow the label to feed out before the delay expires.

P2 Detect feeds a label when product detector 2 is triggered. Similar to above, but the label trigger and apply trigger are separate. Used to keep placement accuracy as high as possible, while allowing the label to be fed on demand. Requires two sensors.

Force Feed immediately feeds a label to the pad. The vacuum, air assist, and rewind are activated. Will not feed if there is already a label on the tamp pad

Gap Sensor is used to enter the Screen for Gap Calibration

Dispense Position sets the distance the label is advanced after the label gap is sensed. This is measured in 1/100th of an inch. Usually a value of 55 to 65 (0.55" to 0.65") for a rectangular label on a standard peel blade length

Feed Speed sets the dispense speed of the label from the peel blade. This is measured in Feet per Minute (FPM). Setting is dependent of on the application and angle to the product.


Missing Label determines if the detection of a missing label allows continued operation (Warn) or the system to halt (Error). In Warn mode, the system will advance to the next label as quickly as possible to avoid an unlabeled product.

Setup Menu


From the Home Screen, the third main menu choice is the Setup Menu. The Setup Menu contains the majority of system controls. Most of these controls require a one time setup, and therefore are made accessible to the Administrator only. This menu is passcode protected by the Admin code, and is not accessible to the User.



Job Settings

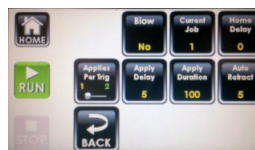


Smart Settings

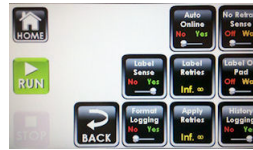


File Operations




Power Off/On

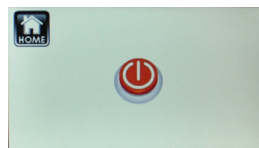

Ethernet Settings

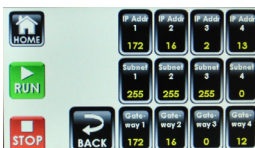

System Settings



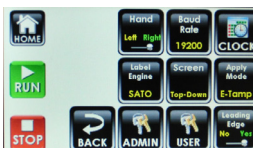


I/O Settings



STEP 3**Basic User Interface Screens (Cont.)****Information ("INFO") Menu**

From the Home Screen, the last main menu choice is the Info (Information) Menu. This menu is not passcode protected. From this menu, the system Web Path, Information and Diagnostic screens are accessible.

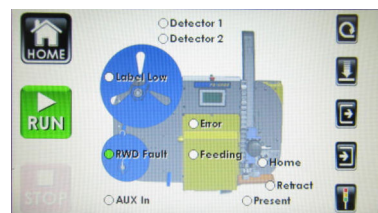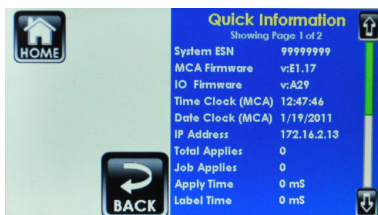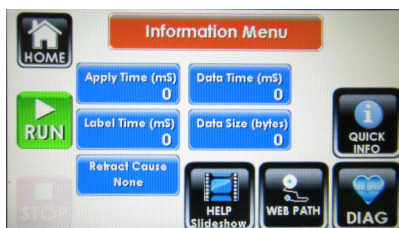

Apply Time displays the round-trip time in milliseconds that it takes to apply the label to the product

Label Time displays the time in milliseconds that it takes to fully feed out the label

Retract Cause shows the reason why the actuator returned to the home position. Possible reasons are Duration and Auto Retract. Used to ensure that the Auto Retract sensor is controlling the return versus a timeout of the Apply Duration.

Data Time displays the time in milliseconds that has elapsed sending command queries to the system

Data Size shows the message size in bytes of the data transmission.


Web Path provides views of the system and printer to illustrate the label liner path through the system

Quick Info contains a list of system values for versions, clock, and measured times

Diag is a troubleshooting screen that visually shows all of the system sensor states and allows for activation of output signals (when offline). The sensors can be monitored while the system is running online, or tested manually when the system is offline

STEP 4**Job Settings Overview****Entering the Job Setting Parameters**

The system can be either online or offline to access the Job Settings menus. If the labeler is using the passcode protection, the correct value must be entered to proceed to making changes to the Job Settings.

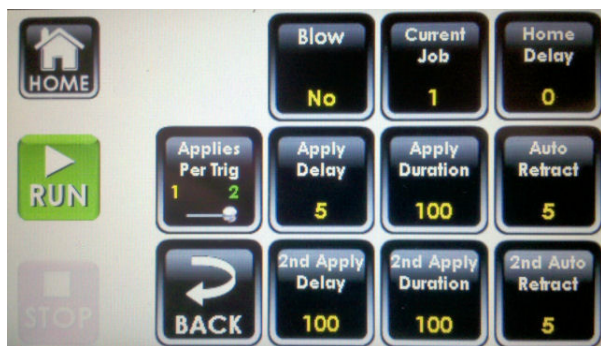**Blow**

There are three blow modes. Blow set to **No** will deactivate the Blow output. Blow set to **Sensor** will only blow the label onto the product if the product is seen by the Auto Retract Sensor. This prevents a mis-trigger from blowing a label into the air, since it will return with the pad on retract. Blow set to **Retract** will activate the blow function upon retracting the actuator. That can be due to the auto retract sensor or apply duration.

Current Job

The labeler has a total of 99 jobs that can be recalled. When changes are made to any of the following job settings, they are automatically stored under the current job number. When the Select Job value is changed, all of the parameters are recalled and loaded as the current settings.

Home Delay

In this screen, a waiting period between the actuator returning home and the next label printed can be adjusted. This delay can be useful for allowing the tamp pad to settle, before the next label is printed.

Applies Per Trig

Determines if the system will apply one or two labels for each product trigger. Used for dual panel labeling applications, such as E-FASA swing arms or to place two labels on one panel

with an E-Tamp system. Selecting 2 Applies Per Trigger will add another row of second application parameters.

Apply Delay

This time value is the delay between product detector trigger and application start. This delay can be calculated by taking $(5000 / \text{linespeed in FPM}) \times \text{the distance from the product detector to peel blade edge in inches}$. This will yield the delay in milliseconds to be entered on the screen. Some adjustment of this value will be required to position the label on the product at the desired location on the product.

2nd Apply Delay (only if Applies Per Trig is 2)

Calculated the same as above, but include extra time to allow the second label to print and be ready for the second application. If the second label is not ready in time, a **Timing Violation** warning will be given. Increase the delay to avoid this warning.

Apply Duration

This setting controls the extension stroke time. If the auto-retract sensor is not used, this is the only setting that controls the retract of the actuator. Make sure the apply duration does not allow the actuator to stroke to the maximum extension position.

2nd Apply Duration (only if Applies Per Trig is 2)

This controls the second application extension time.

Auto Retract

The optional auto retract sensor will detect the product surface before contact. This allows the lightest touch of the label to the product, which can accomplish nearly the same effect as a tamp/blow on many products and have the benefit of positive contact to ensure label transfer onto the product surface. Since the speed of the actuator can vary, based on the actuator profile setting, the auto retract employs an adjustable delay. This delay is started when the sensor first "sees" the product, and allows additional time to contact the product. If the delay is set too short, the tamp pad may never hit the product. If set too long, it will hit the product too hard. If it is set to zero, the auto-retract will be disabled, and the labeler will only use the apply duration timer to cause retract.

2nd Auto Retract (only if Applies Per Trig is 2)


This controls the second auto retract delay time.

STEP 5


Load the Media

Webbing the Media

Wipe-On Webbing

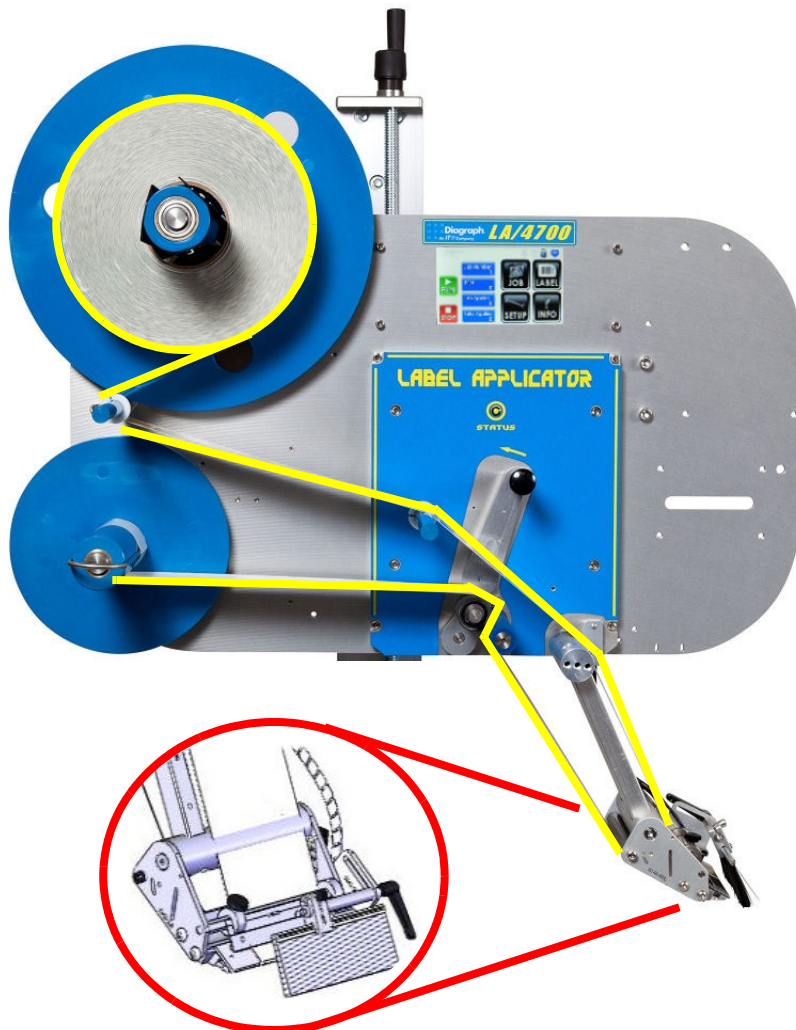


E-TAMP, E-WASA, E-FASA Webbing

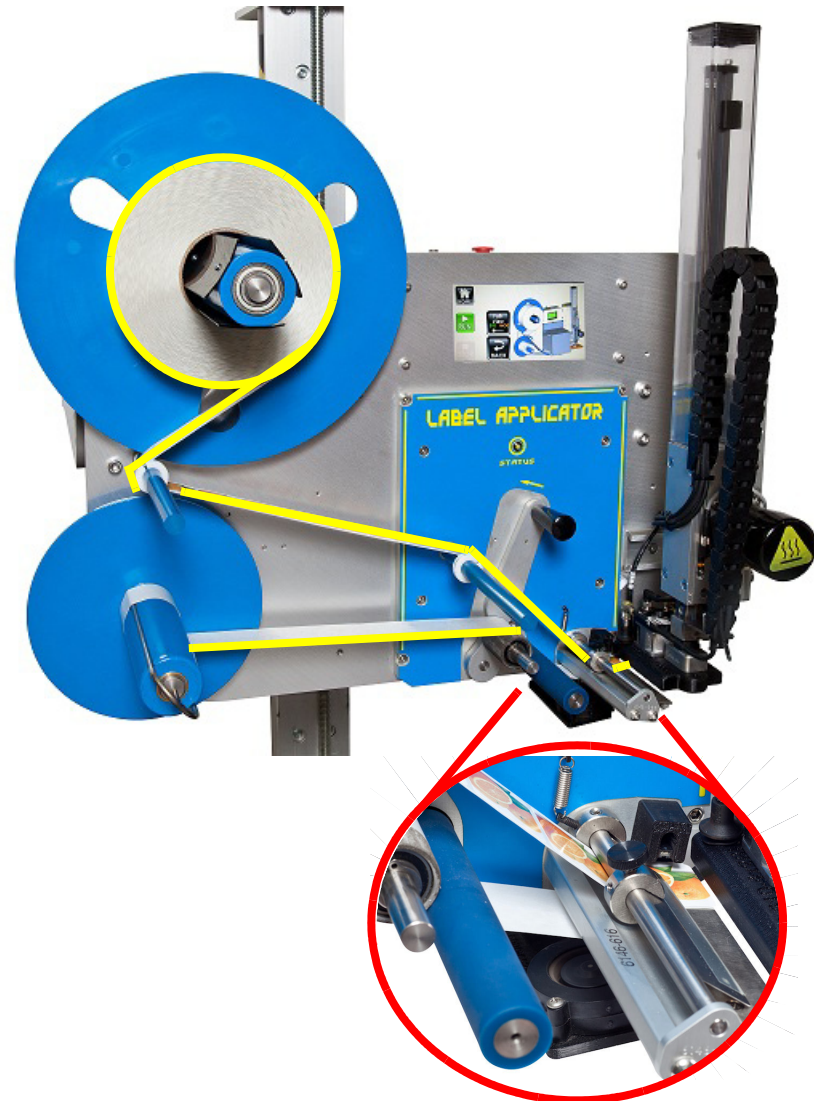


STEP 6**Web Alignment Setup****Nip Roller Positioning**

To ensure that the liner tracks straight through the system, position the nip roller on the mid-point of the liner. This is accomplished by using a set of snap ring pliers. First, remove the outer snap ring and washer. Remove the nip roller. Position the inner snap ring and washer to allow the nip roller to be placed in the center of the liner. Re-install the roller, followed by the washer and then snap ring. Seat the ring snug.

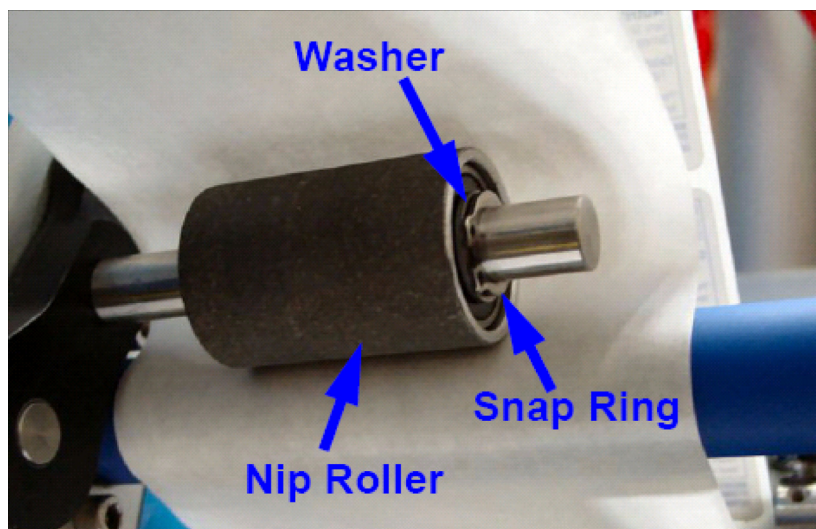**Hold Down Plate**

To create tension across the peel blade to separate the label from the liner, the hold down plate presses onto the label liner under spring tension. This can be adjusted by loosening the setscrew on the inner collar and rotating the collar toward the support plate for greater tension.

Brush and holder removed for clarity

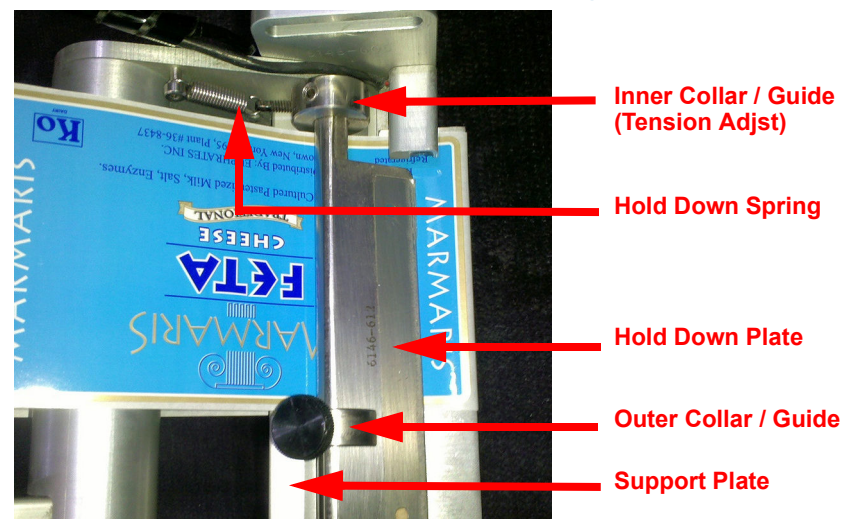**Inner and Outer Guides**

Set the position of the inner guide by loosening the setscrew. Be aware that this controls the hold down plate tension, so keep the spring anchor in relative position while the guide is moved across the hold down plate bar. The inner guide usual does not need adjustment. It prevents the web from tracking too far to the inside edge, which could damage the gap sensor.

The outer guide adjustment is important to ensure the liner does not track in and out of the gap sensor detection area. It should be adjusted to the end of the liner material by loosening the finger knob. This guide does not set the web alignment for the system. Overall web tracking should be set in the Nip Roller position in the prior step. The outer guide will prevent lateral web wandering as the liner is under greater tension when dispensing and less tension once the liner has relaxed at the end of feeding.

WIPE

The next 2 steps are for Wipe Only

WIPE STEP 7

Angle of the Snorkel Head

Overview

The angle of the snorkel head to the product is important for wrinkle and bubble-free application of the label. The usable range of angles for the snorkel head to the product is between 10 and 60 degrees. Angles less than 10 degrees add drag to the liner from other stationary mounting points, while angles above 60 degrees result in labels feeding away from the product's surface.


The system is designed to apply labels at an optimum angle of 45 degrees. Angles greater or less than this value will require a feed speed offset to compensate for the difference in speed matching, due to angle. As seen in the 10 degree image on the right, the label is feeding more perpendicularly to the product, and therefore requires a feed speed setting less than the true line speed of the conveyance.

Tools Required:


- 4 mm Allen Wrench

Angle Adjustment


- Loosen the two screws (A) [use 4 mm Allen wrench] on snorkel head. The screws are on opposite sides of the snorkel mounting brackets (one pictured on right, the other is next to the conveyor side).
- Align the head so that the peel blade support edge is parallel to the product. This is the optimum feed angle for most applications
- Increase the angle to the product (more parallel feeding of label to product's surface) for surfaces that have an outward bow, such as product pictured on right.
- Decrease the angle to the product (more perpendicular to the product's surface) for recessed areas or plastic-based labels that tend to trap air pockets.
- Never position the head at an angle that would force the liner to drag over the aluminum support (0° degree pictured below).
- Never position the head at an angle that would position the head too close to the product (~90° degree pictured below).
- Tighten the two screws (A) when the proper angle is selected.

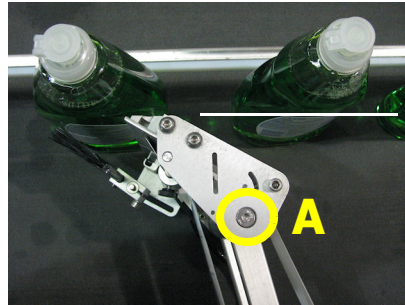


10° Degree

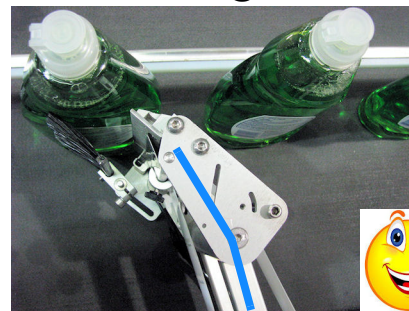


45° Degree

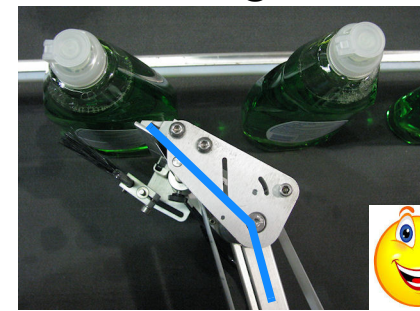

0° Degree

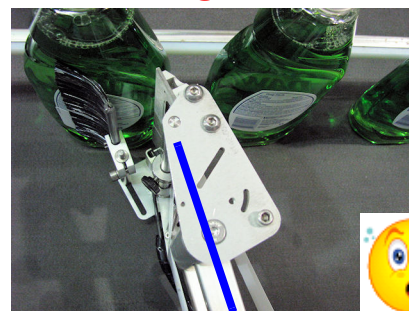

~90° Degree

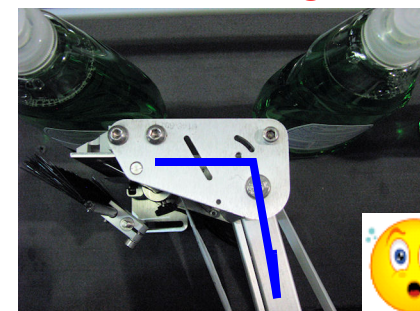

WIPE - STEP 8**Brush / Hold Down Adjustments****Overview**

One of the most overlooked adjustments is the brush position to the peel blade and angle to the product. The brush functions to merge the label onto the product surface and minimize the slip of the label on the product, which can affect the position. The brush should be positioned at the point the label will make contact with the product. Most common mistakes are from positioning the brush to perform a secondary process of wiping the label after it has already adhered to the product or little to no contact of the brush to the product. For short length labels, the brush position must be move to the point of contacting the peel blade. The Hold Down Plate adjusts the peel tension for separating the label from the liner. This is kept at a constant force by setting the spring distance to the peel blade support. Too much force will result in inconsistent feed dispense speeds while too little force will prevent all labels from peeling over the peel blade.

Tools Required:

- 4 mm Allen Wrench (to change brush mount position)
- 2 mm Allen Wrench (to change brush position in mount)
- 2.5 mm Allen Wrench (to adjust hold down tension collar)

Brush Angle and Position Adjustment


- Loosen the quick release lever to make adjustments
- Position the brush to match the point of contact between the label and the product
- For short labels, the brush should be position next to or contacting the peel blade (product will push bristles back when in contact)
- If the brush is positioned too far away from the merge point, the label position consistency can change due to label slippage. In addition, the brush can curl up the front edge and even remove the label in certain conditions.

Hold Down Plate Adjustment

- Loosen the 2.5 mm setscrew in the inner collar guide, which is under spring tension
- Keep the hold down plate engaged to the liner and rotate the collar to extend the spring. This places tension on the hold down plate to create constant peeling tension
- If the spring anchor screw is pressing against the peel blade support, it's adjusted too far. The optimal position will be somewhere near the mid position
- Tighten the setscrew when the tension position has been determined

Correct Position


Brush is positioned at label/product merge location

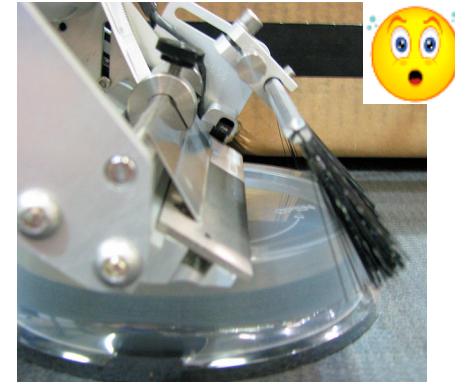Incorrect Position

Brush too far out preventing good positioning and less effective

Adjust Brush Mount

Brush may need to be repositioned to gain access to web guide knob

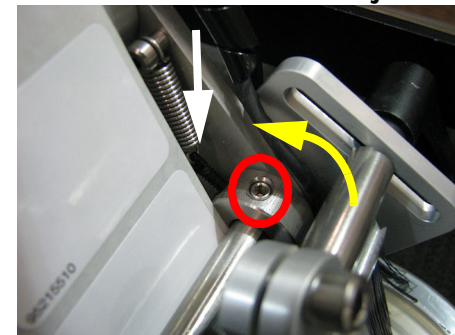Hold Down Adjust

Loosen setscrew and rotate collar while keeping hold down plate on liner to set peel tension

E-TAMP

The next 3 steps are for E-TAMP Only



E-TAMP - STEP 7 Alignment of the E-TAMP Assembly

Tools Required:

- 6 mm Allen Wrench
- 7 mm Open End Wrench

Lineal (X) Position Adjustment

- Loosen the two screws (A) [use 6 mm Allen wrench] on the dovetail slider
- Slide assembly in and out from the drive module until there is approximately 1/8th inch (3 mm.) of space between drive module peel blade and tamp pad edge
- Tighten the two screws (A) on the dovetail slider

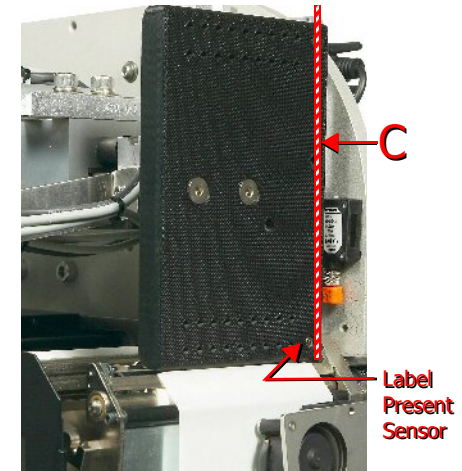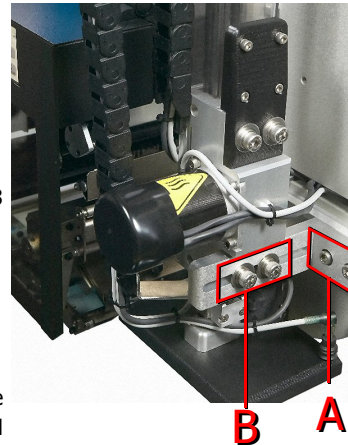


Lateral (Y) Position Adjustment

- Loosen the two screws (B) [use 6 mm Allen wrench] on the tamp actuator L-bracket
- Slide the assembly in and out from the baseplate until the label present sensor is within the feed position of the label. Line (C) shows the projected path of the label where the label present sensor would be fully covered once the label is fed
- Tighten the two screws (B) on the tamp actuator L-bracket. Keep the actuator parallel to the baseplate during tightening

Height (Z) Position Adjustment

- Loosen the 7 mm square head jam screw on the actuator rod end located by the tamp pad
- Turn the rubber bumper by hand to adjust the tamp pad height position. Turn clockwise to decrease height, counter-clockwise to extend height
- The optimum position will be an 1/16th inch (1.5 mm) below the peel blade. This is important in order to stop the label rotation upon actuator extension
- With the E-Tamp controller on, check the resting position of the pad. Once the proper position is set, tighten the square-headed jam screw to lock the bumper in position. **Failure to re-tighten the jam screw will cause feed errors over time as the bumper becomes loose.**

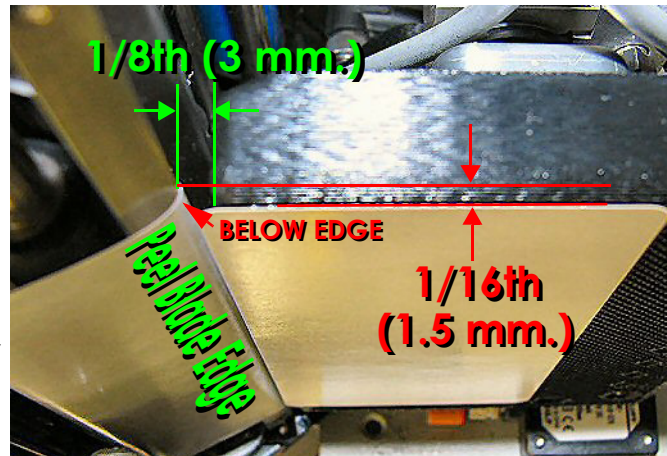

E-TAMP - STEP 8 Configure the Motor Control Module

Overview

The Motor Control Module and E-TAMP System is comprised of these subsystems:

- Linear belt-driven actuator rod with motor housing, bearings, and end travel stop
- Brushless DC Servo motor (same as used on Applicator Rewind)
- High velocity vacuum fan and tamp pad
- Motor Control Module Electronics Assembly
- Air Assist Blower Fan Assembly

As the label is feeding out of the printer, the air assist blower and vacuum fan are activated to draw the label to the pad and hold it in place for application. When the MCA sends the tamp signal, the actuator is extended to the product. The actuator is returned when the MCA ends the tamp signal or upon product contact, if the Hit Contact mode is enabled. When there is no label detected on the pad for over 5 seconds, the vacuum fan reduces speed to an idle. The blower fan is always active.

Actuator Speed Profile Setting [Ax]

There are five actuator speed settings to match the application requirement. See following chart for recommended setting

Ax Profile	Application
A1	Pallets, PPM less than 40
A2	Pallets, PPM 20 to 60
A3	Pallets, PPM 20 to 60
A4	PPM greater than 60
A5	PPM greater than 80

Vacuum Fan Profile Setting [Fx]

There are five vacuum fan profile settings to match the application label size. See following chart for recommended setting

Fx Profile	Label
F1	Label length > 8 inches
F2	Label length > 8 inches
F3	Label size closely matches pad size (i.e.- 4x6 label on 4x6 pad)
F4	Label area is smaller than pad size by 50% (i.e.- 4x2 label on 4x4 pad)
F5	Label area is smaller than pad area by 70% (may require custom pad to accommodate)

Hit Contact Mode Setting [Hx]

There are two modes of operation for hit contact mode. A value of '1' enables the mode, which will return the actuator to home if product contact is made, thus stopping further extension. This is only useful for Actuator speeds A1, A2, and A3. For speeds that are greater than these, the preferred method is to use the Auto-Retract sensor. The Tamp Duration must be set close to the expected contact point with the product to work properly. If the actuator returns home while it should be extending, the system will generate an error. A value of '0' disables this sensing mode.



To change profiles in the Motor Control Module

Press SET button for 1 second for Actuator Speed

Once the profile number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value. Re-adjust the Tamp Duration after making speed changes to avoid stroking actuator to the maximum position.

Press SET button for 2 seconds for Vacuum Fan Speed

Once the profile number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value.

Press SET button for 3 seconds for Contact Hit Sense

Once the mode number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value.

Press SET button momentarily to view settings

E-TAMP - STEP 9 E-TAMP Parameter Setup

Setup Overview

E-Tamp applications allow the label to be placed on the Top, Side, or Bottom of a product. Typically, these are applying only one label to a product, but two can be applied as well.

Key Settings

Home > Setup > Job



Apply Delay

keep as small as possible by locating the product sensor as close to the peel blade as possible. Exception - if label on demand is used

Apply Duration

With Auto Retract, this should be used as a backup retract timer. Set Auto Retract to zero to properly adjust this time, then re-enable AR

Auto Retract


If installed, the Auto Retract (AR) time depends on the actuator speed. Speeds higher than A3 should not use the AR. Speeds of A1 to A3 benefit from AR, and typical values range from 1 mS to 100 mS

Home Delay

Most E-Tamp applications will not need much Home Delay. Large label sizes will benefit with a minimal delay of 20 to 100 mS

Job Screen

Home > Setup > System

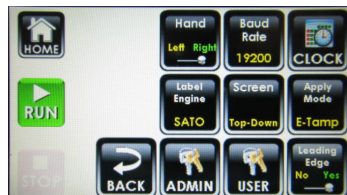

Apply Mode


E-Tamp for this application

Leading Edge

Typically leading edge product triggers will offset the label placement from the front. If the product lengths vary, and the label needs to be placed off of the trailing edge of the product, set this value to No

System Screen

Home > Setup > Smart

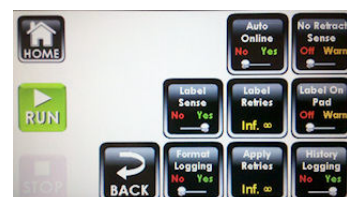

Label Sense

Determines if the system is being used with the optional Label Present sensor

Label Retries

Determines how many times the label will be dispensed without an application. To ensure a 1 Label to 1 Product match, set this to 1

Label On Pad


Provides a warning if the system is online with a prior label on the tamp pad. Helps avoid a potential label to product mis-match

Apply Retries

Determines how many times the system will attempt to apply the same label. To ensure a 1 Label to 1 Product match, set this to 1

Smart Screen

Home > Label

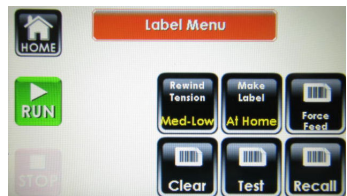

Rewind Tension

Sets the amount of tension applied to the rewind on a feed cycle. Set lower for feed speeds less than 100 FPM or labels shorter than 4 inches

Make Label

Determines the label generation mode. For slow applications, like pallets, make this **P1 Detect**. This will reduce the time the label adhesive is exposed to air and drying. For highest throughput, use **At Home**, for batch runs. User **P2 Detect** for the highest accuracy (by using two detectors) when print on demand is required

Label Screen

E-TAMP/BLOW

***The next 3 steps are for
E-TAMP/BLOW Only***



E-TAMP/BLOW - STEP 7 Alignment of the E-TAMP/BLOW Assembly

Tools Required:

- 6 mm Allen Wrench
- 7 mm Open End Wrench

Lineal (X) Position Adjustment

- Loosen the two screws (A) [use 6 mm Allen wrench] on the dovetail slider
- Slide assembly in and out from the printer until there is approximately 1/8th inch (3 mm.) of space between printer peel blade and tamp pad edge
- Tighten the two screws (A) on the dovetail slider

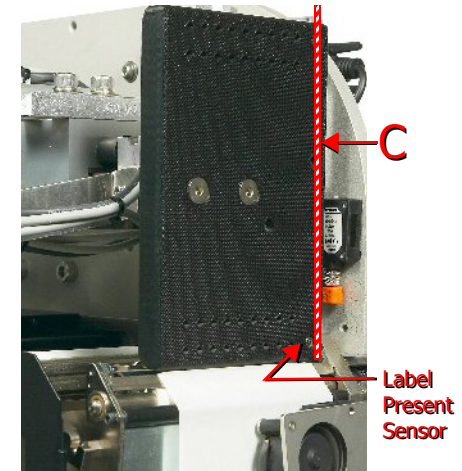
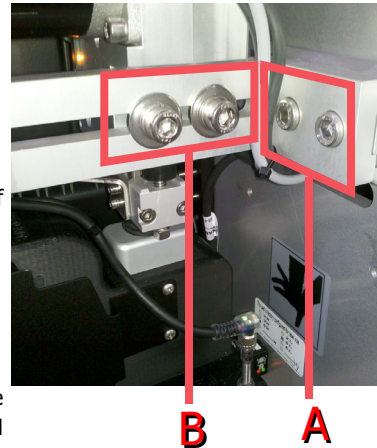


Lateral (Y) Position Adjustment

- Loosen the two screws (B) [use 6 mm Allen wrench] on the tamp actuator L-bracket
- Slide the assembly in and out from the baseplate until the label present sensor is within the feed position of the label. Line (C) shows the projected path of the label where the label present sensor would be fully covered once the label is printed
- Tighten the two screws (B) on the tamp actuator L-bracket. Keep the actuator parallel to the baseplate during tightening

Height (Z) Position Adjustment

- Loosen the 7 mm square head jam screw on the actuator rod end located by the tamp pad
- Turn the rubber bumper by hand to adjust the tamp pad height position. Turn clockwise to decrease height, counter-clockwise to extend height
- The optimum position will be an 1/16th inch (1.5 mm) below the peel blade. This is important in order to stop the label from backfeeding into the printer and prevent label rotation upon actuator extension
- With the E-Tamp controller on, check the resting position of the pad. Once the proper position is set, tighten the square-headed jam screw to lock the bumper in position. **Failure to re-tighten the jam screw will cause feed errors over time as the bumper becomes loose.**

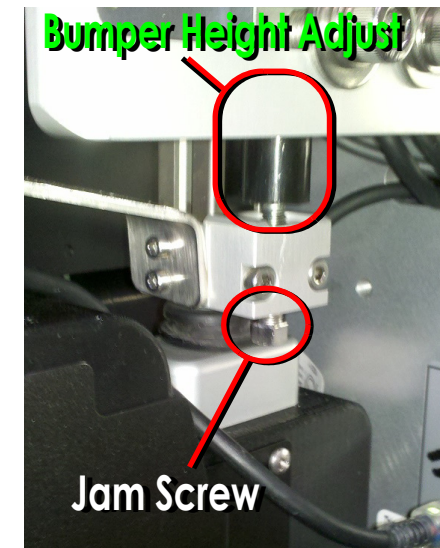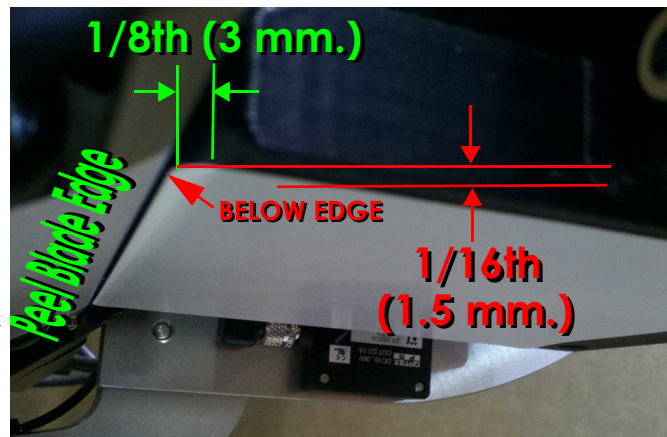

E-TAMP/BLOW - STEP 8**Configure the Motor Control Module****Overview**

The Motor Control Module and E-TAMP/BLOW System is comprised of these subsystems:

- Linear belt-driven actuator rod with motor housing, bearings, and end travel stop
- Brushless DC Servo motor (same as used on Applicator Rewind)
- High velocity vacuum fan and specialized tamp/blow pad
- Blow Valve DC motor
- Motor Control Module Electronics Assembly
- Air Assist Blower Fan Assembly

As the label is feeding out of the printer, the air assist blower and vacuum fan are activated to draw the label to the pad and hold it in place for application. When the MCA sends the tamp signal, the actuator is extended to the product. Depending on the Blow setting in the Job Menu, the Blow Valve is activated either when the apply duration expires or when the Auto Retract senses a product surface.

When there is no label detected on the pad for over 5 seconds, the vacuum fan reduces speed to an idle. The blower fan is always active.

Actuator Speed Profile Setting [Ax]

There are five actuator speed settings to match the application requirement. See following chart for recommended setting

Ax Profile	Application
A1	All
A2	All
A3	Not to be Used
A4	Not to be Used
A5	Not to be Used

Vacuum Fan Profile Setting [Fx]

There are five vacuum fan profile settings to match the application label size. See following chart for recommended setting

Fx Profile	Label
F1	Not to be Used
F2	Not to be Used
F3	Not to be Used
F4	Note: Adjust the Blow Flap to decrease vacuum on label
F5	Note: Adjust the Blow Flap to decrease vacuum on label

Hit Contact Mode Setting [Hx]

Should not be used with E-TAMP/BLOW application module.

**To change profiles in the Motor Control Module****Press SET button for 1 second for Actuator Speed**

Once the profile number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value. Re-adjust the Tamp Duration after making speed changes to avoid stroking actuator to the maximum position.

**Press SET button for 2 seconds for Vacuum Fan Speed**

Once the profile number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value.

**Press SET button for 3 seconds for Contact Hit Sense**

Once the mode number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value.

Press SET button momentarily to view settings


E-TAMP/BLOW - STEP 9 E-TAMP/BLOW Parameter Setup

Setup Overview

E-TAMP/BLOW applications allow the label to be placed on the Top or Side of a product. Typically, the label is transferred in a contact-less manner to the product. Alternatively, the tamp pad can make contact with the product and then blow (tamp-touch-blow) to help place a label into a recess or void area.

Key Settings

Home > Setup > Job

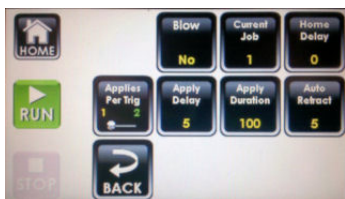

Blow

Choices of No, On Sensor, or On Retract. No disables the Blow function. On Sensor only activates the Blow function when the product is detected in front of the Auto Retract Sensor. On Retract activates the Blow function when the actuator is returning due to Apply Duration expiring.


Apply Duration

With Auto Retract, this should be used as a backup retract timer. Set Auto Retract to zero to properly adjust this time, then re-enable AR

Auto Retract

If installed, the Auto Retract (AR) time depends on the actuator speed (A1 or A2 ONLY for ETB). Typical values range from 1 mS to 100 mS

Home > Setup > System

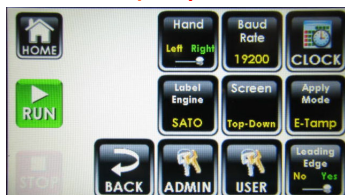


Apply Mode

E-Tamp for this application

Leading Edge

Typically leading edge product triggers will offset the label placement from the front. If the product lengths vary, and the label needs to be placed off of the trailing edge of the product, set this value to No

Home > Setup > Smart

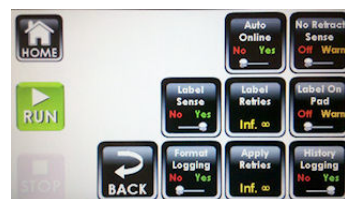

Label Sense

Determines if the system is being used with the optional Label Present sensor

Label Retries

Determines how many times the label will be dispensed without an application. To ensure a 1 Label to 1 Product match, set this to 1

Label On Pad

Provides a warning if the system is online with a prior label on the tamp pad. Helps avoid a potential label to product mis-match

Apply Retries

Determines how many times the system will attempt to apply the same label. To ensure a 1 Label to 1 Product match, set this to 1

Home > Label



Rewind Tension

Sets the amount of tension applied to the rewind on a fed cycle. Set lower for feed speeds less than 100 FPM or labels shorter than 4 inches

Make Label

Determines the label generation mode. For slow applications, like pallets, make this **P1 Detect**. This will reduce the time the label adhesive is exposed to air and drying. For highest throughput, use **At Home**, for batch runs. User **P2 Detect** for the highest accuracy (by using two detectors) when print on demand is required

Job Screen

System Screen

Smart Screen

Label Screen

E-FASA

The next 3 steps are for E-FASA Only

E-FASA - STEP 7a Alignment of the E-FASA Assembly


Tools Required:

- 6 mm Allen Wrench
- 17 mm Open End Wrench

Lineal (X) Position Adjustment

The X adjustment provides the in-out adjustment of the E-FASA arm

- Loosen the four screws (A) [use 6 mm Allen wrench] on the dovetail slider
- Slide assembly in and out from the printer until there is approximately 1/8th inch (3 mm) of space between printer peel blade and tamp pad edge
- Tighten the four screws (A) [use 6 mm Allen wrench] on the dovetail slider

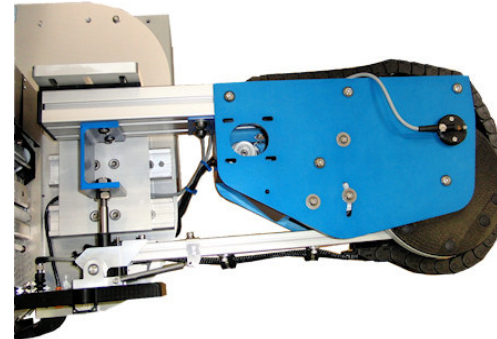


Lateral (Y) Position Adjustment


The Y adjustment provides the alignment of the label feed to the pad for centering

- Loosen the four screws (B) [use 6 mm Allen wrench] on the E-FASA actuator L-bracket
- Slide the assembly in and out from the baseplate until the label present sensor is within the feed position of the label. Line (C) shows the projected path of the label where the label present sensor would be fully covered once the label is printed
- Tighten the four screws (B) [use 6 mm Allen wrench] on the tamp actuator L-bracket. Keep the actuator parallel to the baseplate during tightening

X-Adjust

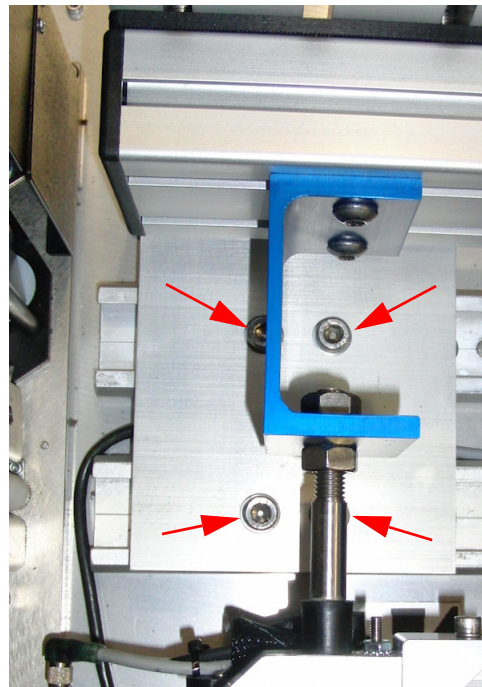

Y-Adjust

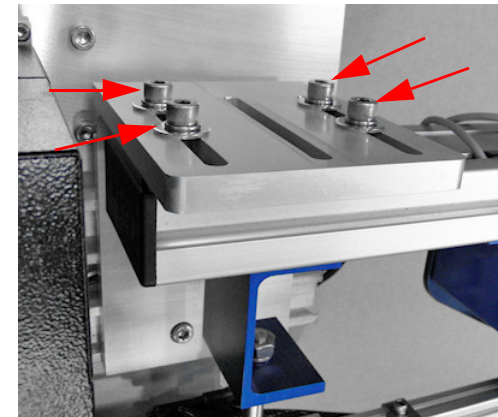



E-FASA - STEP 7b Alignment of the E-FASA Assembly

Height (Z) Position Adjustment

The Z adjustment controls the pad alignment in relation to the Drive Module

- Loosen the 17mm top bumper jam nut, and then rotate the lower nut to set the height
- Turn clockwise to decrease height, counter-clockwise to extend height
- The optimum position will be an 1/16th inch (1.5 mm) below the peel blade. This is important in order to stop the label from backfeeding into the drive module and prevent label rotation upon actuator extension
- With the E-FASA MCM on, check the resting position of the pad. Once the proper position is set, tighten the jam nuts to lock the bumper in position.

Z-Adjust

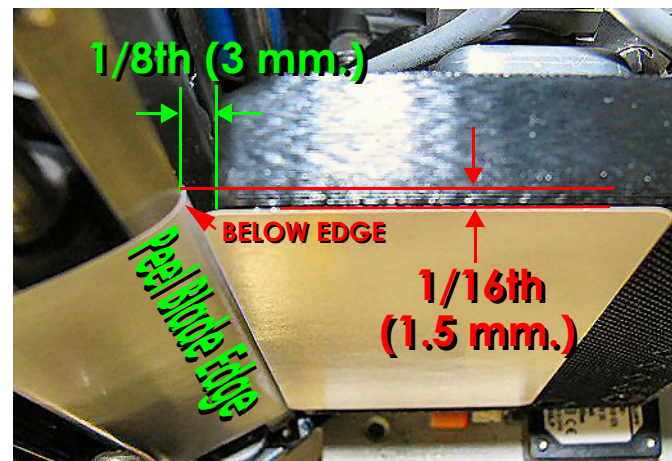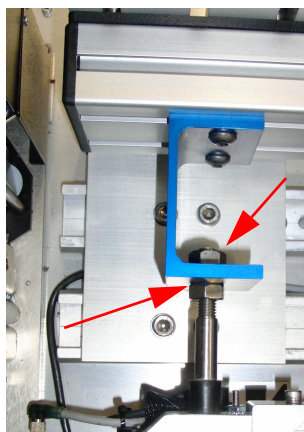


Pad Level Adjustment


This adjustment allows the pad to be leveled to the label feed path and to correct for the rotation of the arm that occurs from the above adjustment

- Loosen the 11/32" nut on the bumper shaft
- Turn clockwise to decrease height, counter-clockwise to extend height
- The optimum position will level out the pad and keep it even with the feed of the label

Pad Level

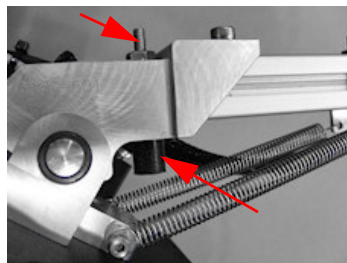

Home Sensor

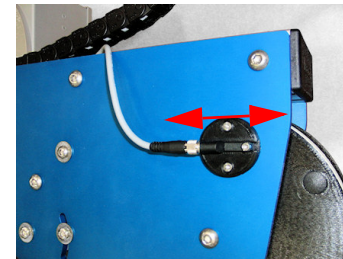

Spring Pivot Tension Adjustment

This adjustment increases or decreases the rigidity of pad movement for pivoting. Adjust to avoid "slapping" the label onto the side of the product


- Loosen the screw [4 mm Allen wrench] on the spring anchor bracket
- Slide the bracket closer to the pivot to decrease tension, further away to increase the tension
- Tighten the screw once the desired tension is set

Home Sensor Adjustment

This adjustment allows the system to recognize when the arm is home, and feed the next label. It also reduces power to the motor once home.

- Loosen the setscrew on the Home Sensor Body with either a 2.5 mm. Allen wrench or a #1 flat blade screw driver.
- With the arm in the home position, start with the sensor slide out away from the system (until light goes off), and then slowly slide the sensor inward until the home sensor lights. Tighten the setscrew.
- Verify that the light goes out when the arm leaves the home position and is approximately an inch away from the bumper stop.

Spring Pivot Tension

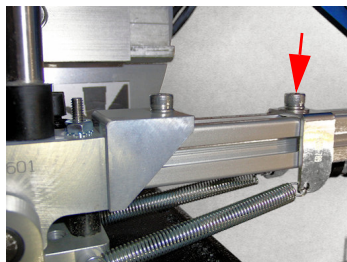

E-FASA - STEP 8**Configure the Motor Control Module****Overview**

The Motor Control Module and E-FASA System is comprised of these subsystems:

- Rotational belt-driven actuator rod with motor housing, bearings, and end travel stop
- Brushless DC Servo motor (same as used on Applicator Rewind)
- High velocity vacuum fan and tamp pad
- Motor Control Module Electronics Assembly
- Air Assist Blower Fan Assembly

As the label is feeding out of the printer, the air assist blower and vacuum fan are activated to draw the label to the pad and hold it in place for application. When the MCA sends the tamp signal, the actuator is extended to the product. The actuator is returned when the MCA ends the tamp signal or upon product contact, if the Hit Contact mode is enabled. When there is no label detected on the pad for over 5 seconds, the vacuum fan reduces speed to an idle. The blower fan is always active.

Actuator Speed Profile Setting [Ax]

There are five actuator speed settings to match the application requirement. See following chart for recommended setting

Ax Profile	Application
A1	Pallets, PPM less than 10
A2	Pallets, PPM 10 to 40
A3	Pallets, PPM 20 to 60 DO NOT USE FOR 20 INCH
A4	PPM greater than 60 DO NOT USE FOR 20 INCH
A5	PPM greater than 80 DO NOT USE FOR 20 INCH

Vacuum Fan Profile Setting [Fx]

There are five vacuum fan profile settings to match the application label size. See following chart for recommended setting

Fx Profile	Label
F1	Label length > 8 inches
F2	Label length > 8 inches
F3	Label size closely matches pad size (i.e.- 4x6 label on 4x6 pad)
F4	Label area is smaller than pad size by 50% (i.e.- 4x2 label on 4x4 pad)
F5	Label area is smaller than pad area by 70% (may require custom pad to accommodate)

Hit Contact Mode Setting [Hx]

There are two modes of operation for hit contact mode. A value of '1' enables the mode, which will return the actuator to home if product contact is made, thus stopping further extension. This is only useful for Actuator speeds A1, A2, and A3. For speeds that are greater than these, the preferred method is to use the Auto-Retract sensor. The Tamp Duration must be set close to the expected contact point with the product to work properly. If the actuator returns home while it should be extending, the system will generate an error. A value of '0' disables this sensing mode.

**To change profiles in the Motor Control Module**

Press SET button for 1 second for Actuator Speed

Once the profile number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value. Re-adjust the Tamp Duration after making speed changes to avoid stroking actuator to the maximum position.

Press SET button for 2 seconds for Vacuum Fan Speed

Once the profile number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value.

Press SET button for 3 seconds for Contact Hit Sense

Once the mode number is flashing, press the SET button momentarily to advance through the profile settings. When the desired value appears, wait for the display to stop flashing to set the value.

Press SET button momentarily to view settings

E-FASA - STEP 9


E-FASA Parameter Setup

Setup Overview

The E-FASA application module allows for either one or two product panel applications. In single label applications, either the front or rear panels can be labeled. In dual label applications, either the front and side or side and rear panels can be labeled.

Key Settings

Home > Setup > Job

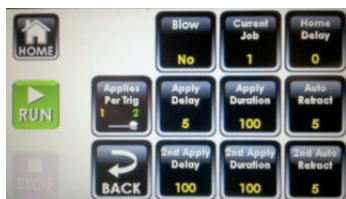

Apply Delay

If the application requires two labels, side and rear panels, the delay can be kept minimal. If the application is side and rear panels, the product sensor will have to be relocated, and the delay will therefore need to increase

Apply Duration

Should be incrementally set from low values higher to adjust the contact point with the product. For the front or rear panels, the optimum contact point is a little beyond 90 degrees. This allows the pad to pivot, and place the label squarely on the product.

Auto Retract

Not very useful for the front and rear panels, but mainly used for the side application. Values between 1 and 50 mS are typical

2nd Apply Delay

Time value here should be greater than the time to print two labels and the first apply cycle

2nd Apply Duration

Same as Apply Duration above


2nd Auto Retract

Values between 1 and 50 mS are typical

Home Delay

Most E-FASA applications benefit from some minimal delay between 50 to 200 mS, to allow the pad to settle when arriving home


Home > Setup > System

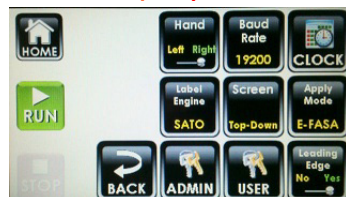

Job Settings

System Settings

Home > Setup > Smart

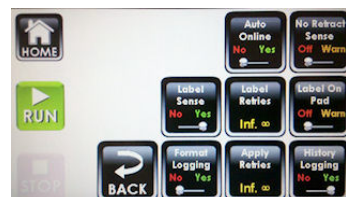

Apply Mode

E-FASA for this application

Leading Edge

Typically leading edge product triggers will offset the label placement from the front. If the product lengths vary, and the label needs to be placed off of the trailing edge of the product, set this value to No

Smart Settings

Label Sense

Determines if the system is being used with the optional Label Present sensor

Label Retries

Determines how many times the label will be fed without an application. To ensure a 1 Label to 1 Product match, set this to 1

Label On Pad

Provides a warning if the system is online with a prior label on the tamp pad. Helps avoid a potential label to product mis-match

Apply Retries

Determines how many times the system will attempt to apply the same label. To ensure a 1 Label to 1 Product match, set this to 1

Home > Label



Label Menu

Rewind Tension

Sets the amount of tension applied to the rewind on a fed cycle. Set lower for feed speeds less than 100 FPM or labels shorter than 4 inches

Make Label


Determines the label generation mode. For slow applications, like pallets, make this **P1 Detect**. This will reduce the time the label adhesive is exposed to air and drying. For highest throughput, use **At Home**, for batch runs. User **P2 Detect** for the highest accuracy (by using two detectors) when print on demand is required

E-WASA


The next 3 steps are for E-WASA Only

E-WASA STEP 7**Alignment of the E-WASA****Tools Required:**




6 mm Allen Wrench, 13 mm open-end wrench, 24 mm open-end wrench

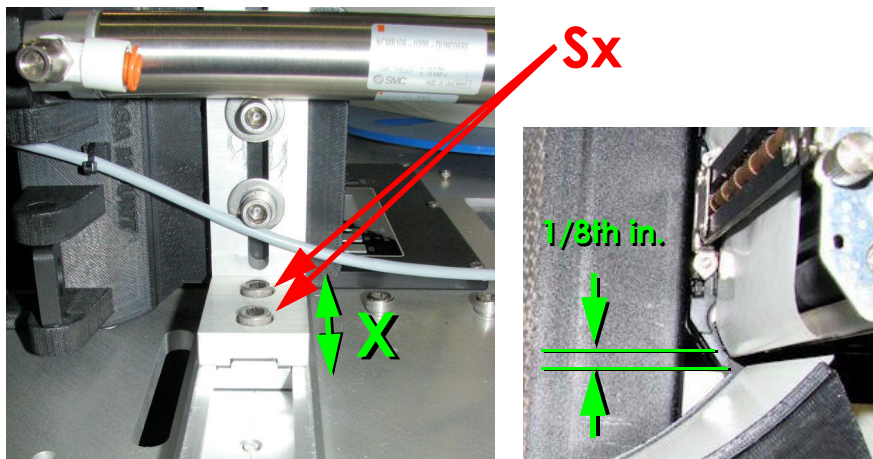Adjust X Position:

- Start by loosening the two screws "**Sx**" on the slider track
- Slide the WASA module over to the printer until there is approximately an 1/8th inch between the printer's peel blade and the edge of the Fan Box
- Tighten the screws in place once the position is set

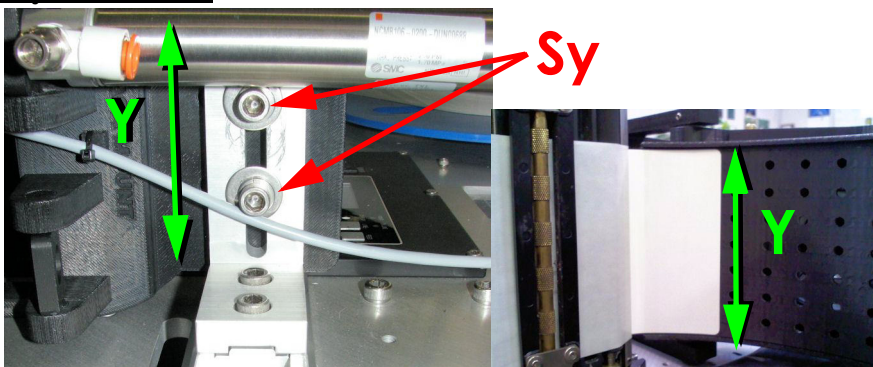Adjust Y Position:


- Loosen the screws "**Sy**" to adjust the WASA module across the width of the label
- With the label liner threaded through the system, feed the label out to the fan box
- Determine if the WASA module needs to be moved up or down to align the bottom edge of the WASA (closest to the baseplate) with the feed position of the label
- The label must not ride up on the raised edge of the Fan Box
- Ensure that the WASA module is aligned parallel with the baseplate

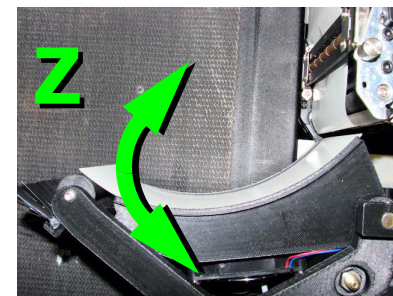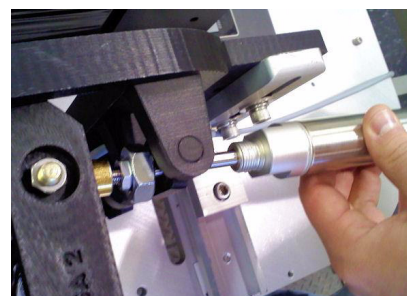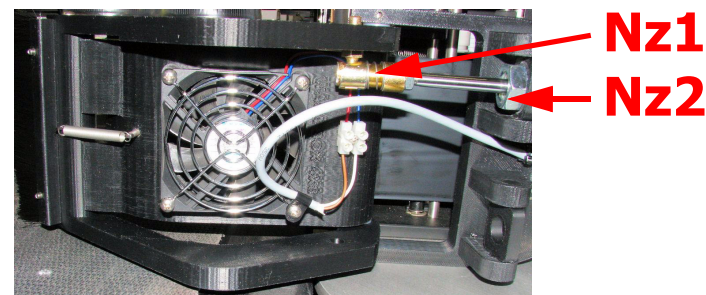Adjust Rotation Angle Position:

- Loosen nuts "**Nz1**" (13 mm.) and "**Nz2**" (24 mm.) on the cylinder
- Turn the cylinder body to thread the rod in or out of the coupling to adjust the Z rotational position of the Fan Box
- Adjust the rotation so that the label feeds out to the Fan Box without stalling on the surface of the face
- Tighten both nuts and feed a few labels to determine if position is ideal

E-WASA STEP 8**Runtime Adjustments****Tools Required:**

13 mm. Open-End Wrench, 14 mm. Open-End Wrench, Flat blade screwdriver

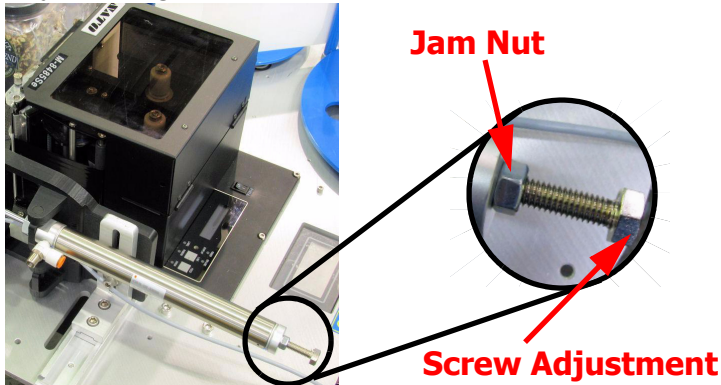Adjust Spring Rate:

- Loosen the Jam Nut with the 13 mm. open-end wrench
- Turn the screw (14 mm.) clockwise to increase the spring force and counter-clockwise to reduce it. Products that are under 5 ~ 10 lbs require less spring force, in order to allow the label to be wrapped without making the product stall on the conveyor. Too light of a spring tension will result in a poorly wrapped label. The full range of spring tension is accomplished within a 2 inch screw threading distance.
- **WARNING** - Do not decrease the spring tension so far that the WASA Fan Box does not consistently return home. If the spring is too weak, friction and product placement will begin to effect the performance of the label wrap.
- Once the WASA travel has been checked for the swing range of motion, lock in the spring tension position by tightening the jam nut.

Adjust Return Flow Control:**Flow Control Setscrew**

- Loosen the thumb wheel jam nut and turn the flow control clockwise to reduce the speed that the WASA returns to the home position. Increase the flow by turning the control counter-clockwise, which will allow the WASA box to return home faster
- **WARNING** - The adjustment on the return speed will determine the maximum throughput rate. If the application can tolerate a slower return rate, it will result in a smoother and gentler return which will result in longer life.

NOTE:

The E-WASA is highly dependent on a rear guide rail for optimal performance. Since the E-WASA is spring-loaded to apply pressure to the front and side of the product, the guide rail prevents possible product skew. Operation without the proper material handling will result in poor wrap angle or label wrinkle.

E-WASA - STEP 9 E-WASA Parameter Setup

Setup Overview

E-WASA applications allow the label to be placed on two adjacent panels, typically front and side, but front and top is also possible. Since the E-WASA cannot accept the next label until the arm returns home, it is a label print on demand by default.

Key Settings

Home > Setup > Job



Apply Delay

Determines the amount of time to delay from the product detector trigger to the label printing. Usually kept at a minimum value

Job Settings

Apply Mode

E-WASA for this application

System Settings

Label Sense

Currently, no Label Sense (Label Present) is available on the E-WASA

Smart Settings

Rewind Tension


Sets the amount of tension applied to the rewind on a print cycle. Set lower for feed speeds less than 100 FPM or labels shorter than 4 inches

Label Menu

Home > Setup > System



Home > Setup > Smart

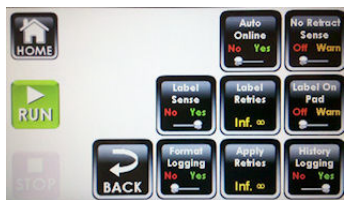

Home > Label



The next steps are for All Systems

STEP 10 Product Detector

Product Detector for the Application

The standard product detector offered is the Diffuse Light 4600-900 sensor. There are two optional sensor types, one is a break-beam sensor, and the other is a laser with background suppression. The proper product detector can make the difference in label placement and operation.

Product Detector Selector			
Application Detail	Diffuse Light (4600-900)	Break-Beam (4600-901)	Laser (4600-902)
Corrugated brown case, no pre-print	✓	✓	✓
Corrugated brown case, pre-print	x	✓	✓
Tray packs with product gaps in pack	x	✓	✓
Pallets	✓	✓	x
Shrink wrapped products	x	✓	✓
Primary product	✓	✓	✓
Primary product, high speed, high accuracy	x	x	✓

NOTE:

When using two product detectors for "Print On Demand Mode" or Make Label on Prod Sens 2, a y-cable must be used to provide connections to both detectors. The y-cable is part number 6000-518.

Product Detector Mounting Location

The product detector is mounted on the baseplate from the factory. This location ensures that any movement of the equipment will not effect the Product Delay. There are application set ups where this location will not work, and there are brackets included for remotely mounting the product detector elsewhere. Listed below are the applications that will require the detector to be relocated:

- Using Demand Mode for print (Label Activation is set to Prod Sens 1 or Prod Sens 2)
- High line speeds (greater than 75 FPM) and desired label placement close to the front edge of the product, or FASA swing arms performing a leading edge application
- Triggering off of the trailing edge for the product

Product Detector Adjustments


All three of the sensors have the same controls for adjustment. Setting S2 (as shown to the right) controls the sensitivity of the detector. With a sample target product in front of the sensor, adjust this setting. The output LED, L2 in the image, will illuminate with the sensitivity adjustment is correct. The power LED, L1 in the image, will show the signal return strength when the output LED is on. Make sure the sensitivity is set so the green LED is on solid so that slightly less reflective products will still cause a trigger. Once the product is removed from the field of view of the sensor, the green LED will return to indicating power, and will be strongly illuminated.


For break-beam applications using the 4600-902 sensor, the Light/Dark setting S1 should be changed. This inverts the output signal mode to the applicator. Since a break-beam application will normally have an active output for no product detected, the change of S1 will allow the triggering to react to the presence of the product.

Sensor Notes

The break-beam sensor has a polarized retro-reflective lens. This means that it requires a suitable reflector that can provide the correct light phase shift to satisfy the sensor. This prevents reflective products (shrink-wrap, glass, etc.) from falsely triggering the sensor.

The laser sensor incorporates a triangulation method to receive the reflected beam. Using this method, the sensor detects true distance rather than product reflectivity. The setting made on S1 will determine distance to the target product. If products will range in distance, the furthest distance product should be used for adjustment. Ensure that objects beyond the target product range are not detected to avoid false triggers.

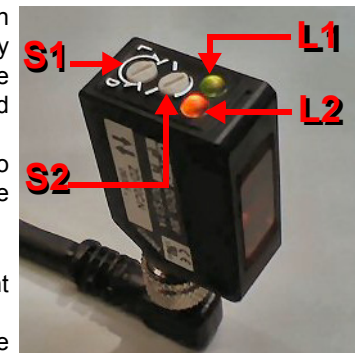

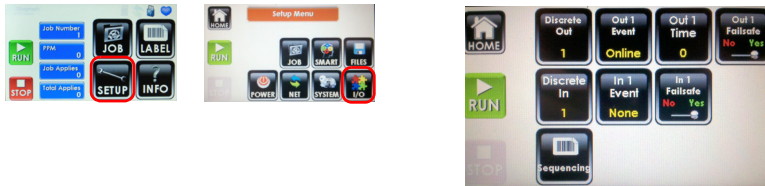STEP 11a**Configure I/O Settings (optional)****Entering the I/O Menus****Discrete Outputs Electrical Characteristics**

There are six (6) solid state isolated outputs that are each capable of switching up to 400 mA of current with a maximum voltage of 24 Volts AC or DC. Since these outputs are “closing contacts” in nature, they require a power source on one lead of the contact to flow current to the circuit it is connected to. The Discrete I/O module provides a fused 24 VDC source, limited to 0.5 Amps for this purpose. The bank of 6 dipswitches on the IO Card allow the common side (B-side) of the relay to be connected to the fused 24 VDC internal power.

Discrete Output Events

The individual output line can be selected with the **Discrete Out** toggle button. The predefined events are listed below, and are selected with the **Out # Event** button. The output duration can be set to a value in milliseconds, or set to zero, using the **Out # Time** button. For certain events, this may not be useful, because they may have multiple occurrences. The final output selection is **Out # Failsafe**, which inverts the closure method. A setting of Yes normally closes the contact, and opens the contact when the event occurs. The opposite is true when set to No.

Output Event	Description	Out Time
• None	No output event selected	None
• Media Out	Label supply is exhausted	0 or time acceptable
• Media Low	Label supply is low	0 best, can multiple trigger
• Online	Unit is online (ready to feed and apply)	0 or time acceptable
• No Format	N/A for a label applicator	0 or time acceptable
• Error	Unit is offline, due to error. This includes: Media Out, MCM Error, Drive Module Errors, Repeat Label or Apply threshold exceeded, etc.	0 or time acceptable
• Warning	Unit has experienced a condition that requires attention, but it is still able to run online.	0 best, can multiple triggers
• Cycle End	The apply cycle is finished	0 or time acceptable
• Cycle Start	The apply cycle is beginning	0 or time acceptable
• Pad Label	The label is present on the tamp pad	0 best, can multiple triggers

Discrete Input Electrical Characteristics

There are four (4) optically-isolated inputs that are activated by supplying them a voltage source between 5 to 24 VDC with 25 mA minimum current. Each input has two differential lines that require a source of current to flow to activate an input event. The Discrete I/O Module's built-in 24 VDC source is a good choice for powering an input, utilizing an external relay or solid state output from the connecting device to open and close the contact and control the event input. The bank of 4 dipswitches on the IO Card allow one side of the input channel to be connected to ground, to reduce external connections.

Discrete Input Events


Of the four (4) input signal lines, any of them can be configured for any of the predefined system events using **In # Event**. Multiple inputs can be configured to the same event for various application reasons. For example, if there is an application where a bad scan signal from a barcode scanner can stop the system and there is an E-Stop chain that does the same, Input A can be assigned to “Error” for the scanner and Input B can be assign to “Error” for the E-Stop. Now, either conditions can stop the labeler without interfering with each other. Each input can be individually set to Failsafe mode, where the trigger is an absence of the signal voltage to the input. Use **In # Failsafe** set to Yes for this mode selection.

Input events should remain energized for a minimum of 10 mS.


Input Event	Description
• None	No input event assigned
• Online	Enter online mode. Pulse activated. Cannot enter online mode if there is an error.
• Offline	Enter offline mode. Pulse activated.
• Product Detector 1	Trigger product detector 1 signal. This can start the print cycle (if print activation is set for Prod Sens 1), and start the apply cycle. Pulse activated.
• Product Detector 2	Trigger product detector 2 signal. This can start the print cycle (if print activation is set for Prod Sens 2). Pulse activated.
• Error	This input allows an external device to halt operation, resulting in an error. Pulse activated.
• Warning	This input allows an external device to flag a warning, resulting in a yellow warning tower and display state. Pulse activated.

STEP 11b**Configure I/O Settings (optional)****Interfacing the Outputs**


Typical Output Circuit on Discrete I/O Module

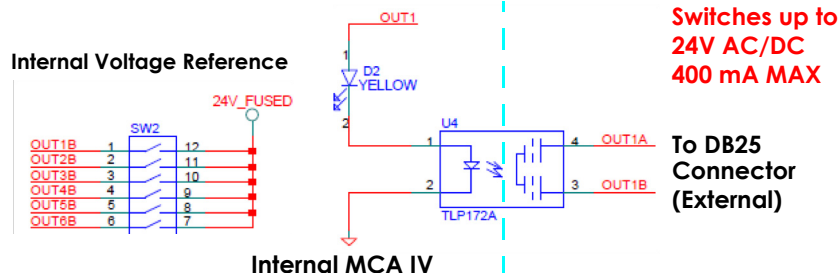**Example Hook-Ups**


Connection to PLC from MCA IV Output, MCA IV Sourcing Power

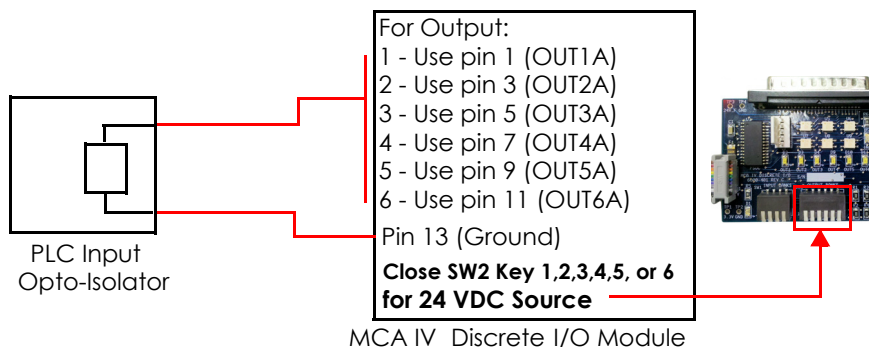


Connection to High Power Relay from MCA IV Output

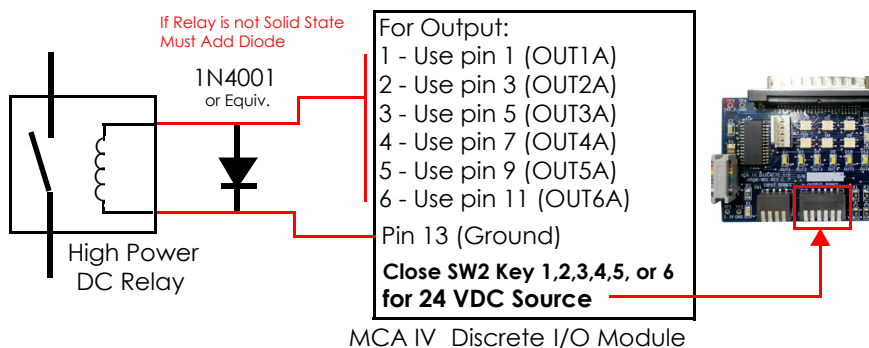**Interfacing the Inputs**


Typical Input Circuit on Discrete I/O Module

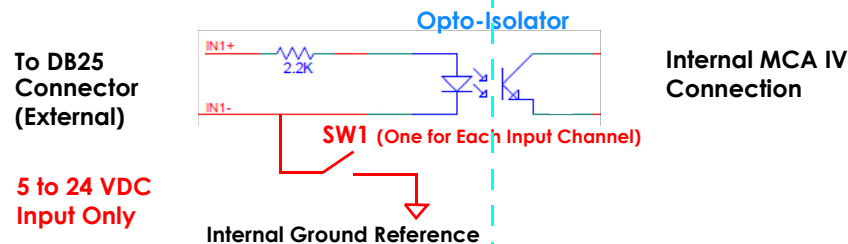**Example Hook-Ups**

Connection to PLC or Pushbutton triggering MCA IV Input, MCA IV Sourcing Power

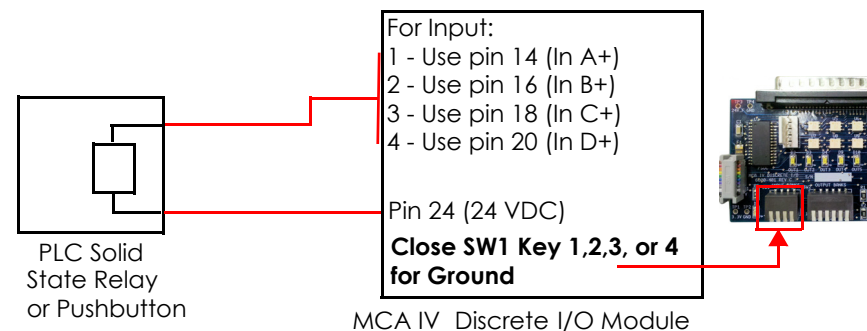

Connection to PLC triggering MCA IV input, PLC Sourcing Power

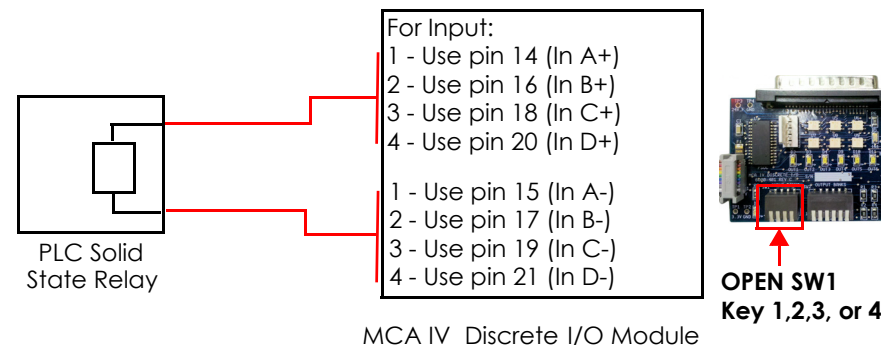


STEP 12**Runtime Adjustments**

Observed	Reason	How to Correct
Label is not feeding out far enough or it is feeding too far	<ul style="list-style-type: none"> Label Dispense Position Inadequate hold down plate tension 	<ul style="list-style-type: none"> In the Label Menu, change the Dispense Position to control the final stopping position of the label Increase the hold down plate tension as described in the setup section of this manual. If the tension is too light, the label stopping position will be very random. I
Label buckles on Tamp Pad	<ul style="list-style-type: none"> Vacuum Fan Speed too high Tamp pad position to peel blade is incorrect 	<ul style="list-style-type: none"> Decrease vacuum fan to minimum setting. Increase vacuum setting if label falls off pad prior to application. Adjust height of pad to be slightly below the edge of the peel blade. This forces the label to "snap" off of the edge of the tamp pad and avoids the label from relaxing back onto the peel blade
Label is not getting out to the pad or is falling off	<ul style="list-style-type: none"> Air Assist Blower is rotated out of the way Air Assist Blower is damaged Vacuum Fan Speed too low Vacuum Fan is damaged 	<ul style="list-style-type: none"> Rotate the Air Assist Blower under the printer and aim at the tamp pad Using a flashlight, check that the blower fan is rotating Try increasing the fan speed to the next higher setting. Make sure that the label is aligned well with the pad Using a flashlight, check that the fan blades are rotating. Use the lowest setting to see if there is a stationary blade
Double label feed regularly or every so often	<ul style="list-style-type: none"> Gap sensor requires calibration Rewind Profile is set too high Label Present sensor adjustment required Label Present and AUto-Retract Sensor cables are switched at the tamp pad or inside the MCA 	<ul style="list-style-type: none"> Calibrate Gap sensor. - Clean optics if necessary This can be adjusted in the Label Menu. Select a lower profile The label present sensor (if installed) could be mounted either too far back from the surface of the tamp pad or too close to (or beyond) the edge of the face surface. Loosen the 7 mm jam nut, remove the M8 quick disconnect cable, and screw the sensor in/out to find the optimal position. Verify cabling connections by viewing sensors in Diagnostics

7.0 User Interface

7.1 MCA (Main Controller Assembly) User Interface

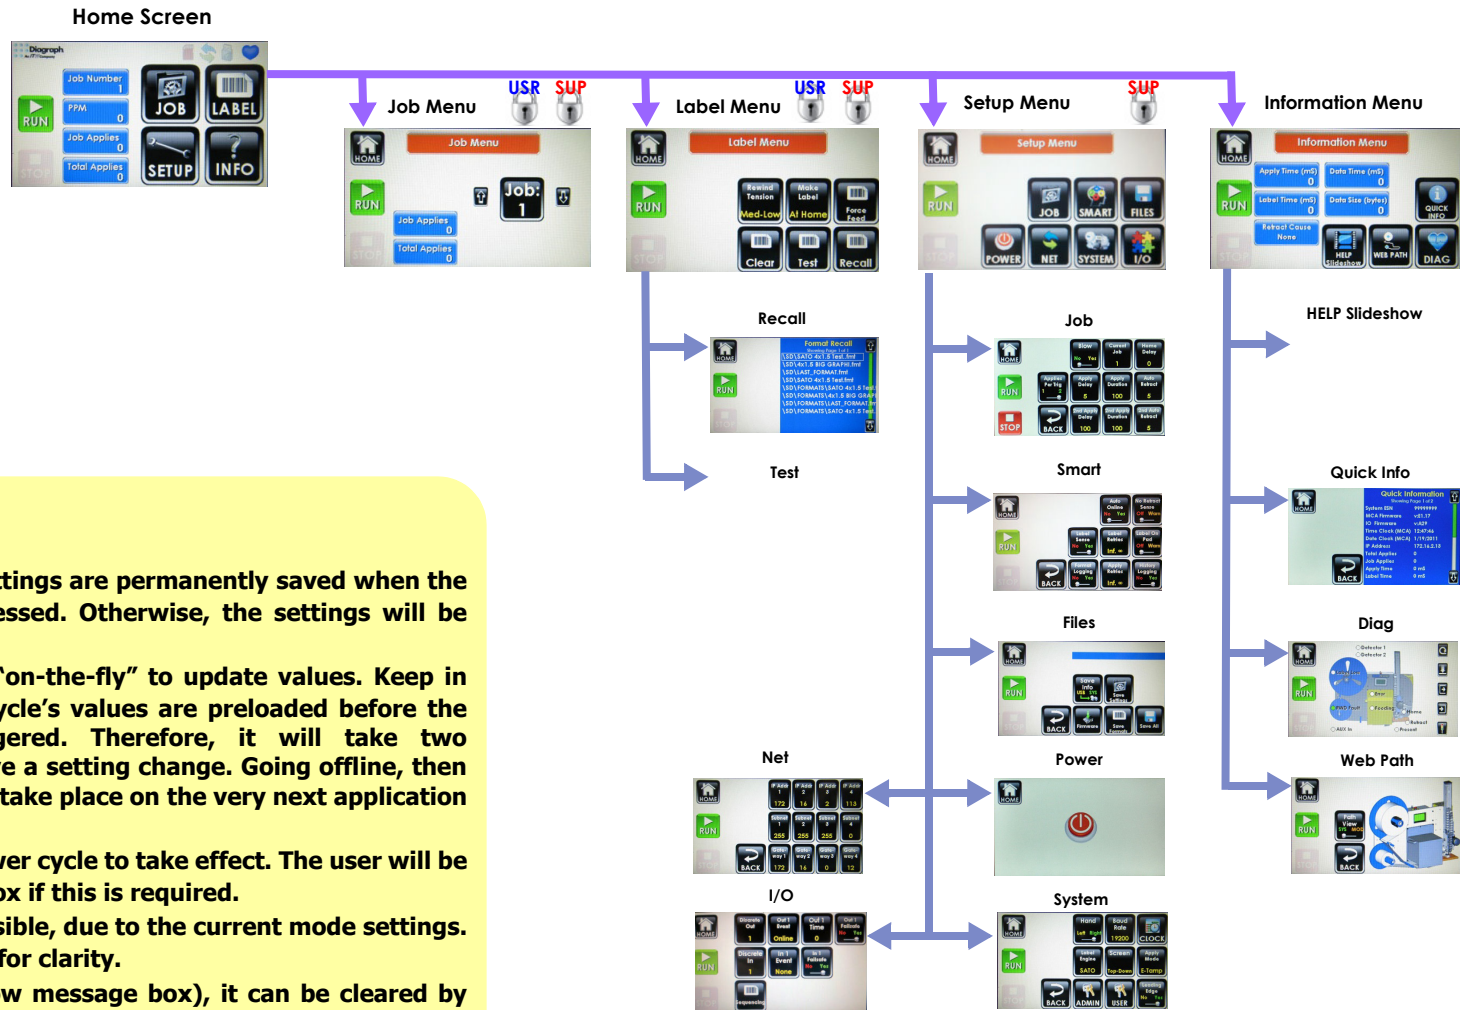

Notes:

- Any change made to the settings are permanently saved when the Home Screen button is pressed. Otherwise, the settings will be temporary.
- Job settings can be made "on-the-fly" to update values. Keep in mind that an application cycle's values are preloaded before the product detector is triggered. Therefore, it will take two application cycles to observe a setting change. Going offline, then online forces the change to take place on the very next application cycle.
- Some settings require a power cycle to take effect. The user will be informed with a message box if this is required.
- Some buttons will not be visible, due to the current mode settings. All buttons are shown here for clarity.
- If there is a warning (yellow message box), it can be cleared by pressing the message box. Press the Run button to change the mode back to Online OK, which resets message warnings and the warning tower to green.

7.2 User Interface How To

How Do I...	Solution	Screen	Screen Shot
Have the system power up in an Online mode?	Switch the Auto Online to YES	SMART	
Maintain a one-to-one label to product synchronization?	Using the optional Label Present sensor capabilities, set the Label Retries to 1 and Apply Retries to 1. This utilizes two prevention methods: 1. Only one label will be fed and if the label is removed prior to application, the system will halt in an Error condition. 2. If the label is not applied to the product, it will not be applied to the next product.	SMART	
Upgrade the firmware?	First, download the MCA_IV.hex file from the Diagraph website. Place this file on a USB Memory device in the root directory. Insert the USB device in the MCA. Under the FILES menu, the Firmware button will be visible if the hex file is located. Press this button, and the system will reboot into the Bootloader Mode. If the load is interrupted, power cycle the unit. It will attempt to load the new firmware. Once the load is interrupted, it will not be able to the run the old firmware, so it will require the MCA_IV.hex load to complete successfully. Do not remove the USB Memory device until it successfully loads, or the load will end in failure with an inoperable system.	FILES	 
Get notified that the system's Auto Retract Sensor is not seeing the product, and returning home due to duration or another reason?	By switching the No Retract Sense to Warn , the System will display an Informational message box when the actuator returns home for another event, such as Apply Duration or Hit Contact Sense. This is useful to ensure the system is seeing the product, and that the time duration set is not too short, where the system is alternating the return response.	SMART	

7.3 Information, Warning, Error, and Diagnostic Codes

MCA (Main Controller Assembly) Codes.

Message Number	Type	Message	Reason(s)
MSG 1	Error	ACTUATOR NOT HOME	1. Product Delay expired, but not home 2. Actuator commanded to return home, but after 5 seconds has not returned 3. Going online, but not home
MSG 2	Error	ACTUATOR AT HOME	Actuator commanded to return home, but it never left home
MSG 3	Error	APPLICATION MODULE	
MSG 4	Informational	AUTO RETRACT SENSOR	Upon extending the actuator, the Auto Retract is already detecting
MSG 5	Warning	LABEL LOW	Label Low sensor sees breaks in the signal from the unwind disk and the labels depleting
MSG 6	Error	LABEL OUT	Printer has detected the end of the label supply
MSG 7	Warning	RIBBON LOW	Printer reports the ribbon is at the low level
MSG 8	Error	RIBBON OUT	Printer reports the ribbon is depleted
MSG 9	Informational	MISSING LABEL DETECT	Used for Label Applicator Mode
MSG 10	Error	LABEL MODULE	Used for Label Applicator Mode
MSG 11	Error	PRINT ENGINE	Printer reports an error condition
MSG 12	Informational	NO FORMAT	Printer End of Print signal will not toggle, indicating the label has not started printing
MSG 13	Informational	NO USB DRIVE	The MCA does not detect a Mass Storage Device in the USB slot
MSG 14	Warning	NO microSD CARD	The MCA does not detect a microSD card in the internal connector
MSG 15	Error	LABEL NOT APPLIED	The repeat apply threshold was exceeded
MSG 16	Error	REPEAT LABEL REQUEST	The repeat label threshold was exceeded
MSG 17	Error	REWIND TAKE-UP	The rewind detected a freewheel spin during online take up of the liner
MSG 18	Error	SECOND APPLY ERROR	In a dual apply mode, the first application was not complete before the Second Apply Delay expired. Can't apply second label since the placement would be random. Increase the 2nd Apply Delay
MSG 19	Warning	SYSTEM NOT READY	System was triggered to apply, but the label was not available to apply. Usually due to demand mode printing not allowing enough time to print or product trigger and no label format in the printer

Message Number	Type	Message	Reason(s)
MSG 20	Informational	IO CONTROLLER FAILURE	U2 in the MCA IV is not responding to communication.
MSG 21	Informational	E-STOP	E-Stop previously occurred
MSG 22	Informational	PASSCODE ERROR	Incorrect passcode entered
MSG 23	Informational	PASSCODE LEVEL	Incorrect passcode for that level
MSG 24	Error	REWIND MOTOR FAULT	Motor driver IC reports one or more issues: 1. Disconnected cables 2. Incorrect cable pinout 3. Stalled motor
MSG 25	Informational	POWER CYCLE	Indicates the system will require a soft or hard reset to have settings take effect
MSG 26	Warning	LABEL ON PAD	System detects a label on the pad when going online
MSG 27	Informational	Total Count/Time	These values are non-resettable, so pressing them will display this message
MSG 28	Informational	Job Count/Time	These values can be cleared, but only in the Job Number menu
MSG 29	Informational	OUTPUT TEST	The output diagnostic tests can only be performed when the system is offline
MSG 30	Informational	FORMAT ISSUE	The format sent to the printer contains control codes that can impact the interface of the labeler and the printer
MSG 31	Informational	NVMEM Cleared	The system's non-volatile memory has been erased by the user
MSG 32	Informational	FILE(S) NOT FOUND	System files are not found on the internal microSD card. Affects part number and web path views, as a minimum
MSG 33	Warning	DISCRETE IN WARNING	One or more of the discrete inputs assigned to warning has been triggered
MSG 34	Error	DISCRETE IN ERROR	One or more of the discrete inputs assigned to error has been triggered
MSG 35	Informational	NO RETRACT SENSE	Actuator returned home for a reason other than the auto-retract sensor seeing the product.
MSG 36	Informational	GAP SENSOR CALIBRATION	The system instructions for calibrating the gap sensor
MSG 37	Informational	CALIBRATION SUCCESS	The Gap Sensor was successfully calibrated
MSG 38	Informational	CALIBRATION FAILURE	The Gap Sensor was unsuccessfully calibrated



MCM (Motor Control Module) Codes

These codes are displayed on the 2-digit display of the MCM during operation

2-Digit Display	Meaning
8'8'	Power-up LED check
Pb	Push button is stuck on
Ur..... XX	Version (Vr) followed by 2-digit firmware version
E1	Error - Motor controller overcurrent, undervoltage, hall sensor error upon actuator return
E2	Error - Movement time-out. Actuator did not return home after 15 seconds
E3	Error - Motor controller driver damaged, hall sensors not connected or intermittent, power source error check at time of power-up
Eh or Pulsing Eh	Error - MCA is in E-Stop, so MCM is paused and locked out from movement
t..... tc	Tamping, then as movement begins, the c appears to indicate a compensation measurement
r.....rh	Retracting, then as the actuator reaches home, the h appears to indicate the actuator is now home



8.0 Electrical Interfacing

J4 - Module Control	
PIN	Pin Description
1	Ground
2	MODULE 5 VDC
3	Label Start
4	Label End
5	Label Out
6	Reprint
7	Ribbon Out
8	Module Error
9	Ribbon Low

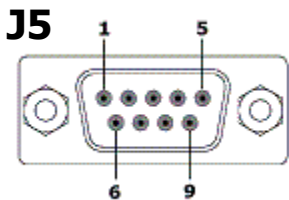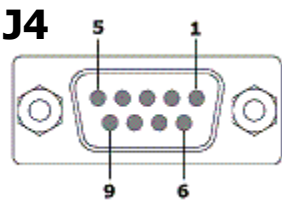


J5 - Module Serial	
PIN	Pin Description
1, 4, 6	N/C
2	RS232 TX (to Module)
3	RS232 RX (from Module)
5	Ground
7	RS232 RTS
8	RS232 CTS
9	+ 5 VDC


JA1 - Discrete I/O {Optional Connector Presence}			
PIN	Pin Description	PIN	Pin Description
1,2	Out Relay 1A, 1B	13	Ground
3,4	Out Relay 2A, 2B	14,15	In A+, In A-
5,6	Out Relay 3A, 3B	16,17	In B+, In B-
7,8	Out Relay 4A, 4B	18,19	In C+, In C-
9,10	Out Relay 5A, 5B	20,21	In D+, In D-
11,12	Out Relay 6A, 6B	22,23	Ground
		24,25	+24 VDC FUSED 0.5 A

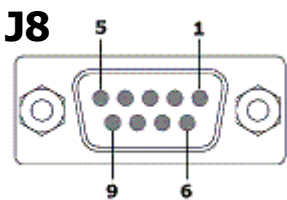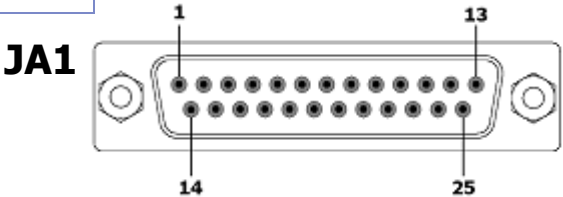

J8 - Warning Tower	
PIN	Pin Description
1, 3	Ground
2	Aux Input (NPN)
4	Red (Ground Switched)
5	Yellow (Ground Switched)
6, 9	+ 24 VDC Supply
7	Green (Ground Switched)
8	Aux Output (Sinking)

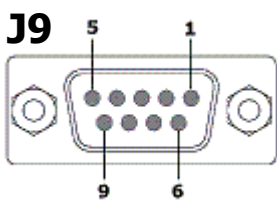

J9 - Product Detector(s)	
PIN	Pin Description
1, 2, 5	N/C
3	Ground
4	Product Detect Input 2 (NPN)
6	+ 24 VDC Supply
7,9	N/C
8	Product Detect Input 1 (NPN)

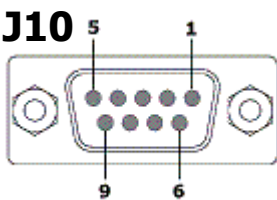

J10- Serial Communication	
PIN	Pin Description
1, 4, 6	N/C
2	RS232 TX (to PC/PLC)
3	RS232 RX (from PC/PLC)
5	Ground
7	RS232 CTS
8	RS232 RTS
9	+5 VDC

9.0 Maintenance Schedule



These are average maintenance and repair/replace periods. Applications running higher throughputs will require attention more often.

Area	Daily	Monthly	Two Years	Description
Clean Drive Module Feed Rollers		√		Use isopropyl alcohol and soft lint-free cloth to wipe all adhesive and paper dust free.
Replace Drive Module Feed Rollers			√	Use isopropyl alcohol and soft lint-free cloth to wipe all dust and contaminants free.
Replace Drive Module Peel Blade			√	Use isopropyl alcohol and soft lint-free cloth to wipe all adhesive and paper dust free.
Clean Gap Sensor, Label Present and Auto-Retract Sensors (if installed)	√			Use isopropyl alcohol and soft lint-free cloth to wipe all dust and contaminants free.
Clean Label Low Sensor (if present)		√		Use isopropyl alcohol and soft lint-free cloth to wipe all dust and contaminants free.
Clean Product Detector Sensor(s)		√		Use a soft lint-free cloth to wipe all dust and contaminants free. Be careful not to damage the plastic lens with alcohol-based solvents.
Inspect Rewind Belt		√		Check for frayed edges and exposed reinforcement fibers.
Replace Rewind Belt			√	Remove Rewind disk by taking off E-clip. Keep belt loose by holding up on the spring-loaded belt tensioner. Replace belt and reinstall the Rewind disk.
Replace Unwind Dancer Spring			√	Unwind spring can be accessed through the slots of the Unwind disk.
Clean Tamp Pad	√			Use compressed air and a hard bristle brush to clean any contaminants in the pad face. Isopropyl alcohol can be used to wipe the pad clean. DO NOT SPRAY CHEMICALS INTO THE FANS!
Clean Vacuum and Air Assist Fan	√			Use clean compressed air (computer cleaner aerosol can) to clean any contaminants in the Air Assist or Vacuum fan. DO NOT SPRAY CHEMICALS INTO THE FANS!
Clean Actuator Rod		√		Clean the actuator rod with a cleaning cloth. Use a light amount of isopropyl alcohol on cloth to remove build-ups. DO NOT USE OIL OR GREASE ON ACTUATOR ROD!
Inspect Actuator Drive Belt		√		Check for frayed edges and exposed reinforcement fibers.
Replace Actuator Drive Belt and Bearing Pads			√	Follow replacement procedures contained with new components.
Clean Baseplate Spindle(s)		√		Use isopropyl alcohol and soft lint-free cloth to wipe all dust and contaminants free.
Replace Baseplate Spindle(s)			√	Replace by unscrewing the old spindle and replace with new spindle and some service-removable Loc-tite.



10.0 Diagnostics

Overview

The Diagraph labeler employs a built-in diagnostic testing system to allow most problems to be identified and corrected without need for more sophisticated test equipment. This is an inherent characteristic of the LA/4700 labelers, and should be used to save time and efforts. The sections below list the capabilities and how to access them.

Heartbeat Light

As simple as this indicator is, it can help identify a problem with the circuit boards in the labeler. All boards that contain firmware have a flashing blue LED light that indicates a normal, working module. The MCA, Discrete I/O Module, and MCM contain this heartbeat indicator.

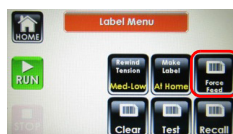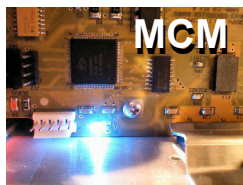

Won't Feed a Label

- Is the Drive Module nip lever closed?
- Is the Gap Sensor calibrated?
- Is system set to Make Label on a Product Sensor?
- Is there already a label on the pad?
- Is the Label Present sensor blocked or active?
- Try using the **Force Feed** button on the Label Menu to bypass the internal feed logic

Won't Apply


- Label is not present on the pad at the time the Apply Duration expires
- MCM settings not finalized (not showing the scrolling eyes)
- Actuator is not home - bent rod, broken tooth belt, home sensor not in proper position
- Using demand mode (Make Label on Product Sensor 1 or 2) and label is not ready in time

Failure modes leading to missed or no application can be narrowed to the product detection trigger (input) and the extension of the actuator signal (output). The Product Trigger can be viewed on the green LED inside the MCA MCU Board (D2, PD1). It can also be viewed on the Diagnostic screen of the MCA display in the **Diag** screen. The Diagnostic menu allows for the Tamp signal to be exercised.

Electric Actuator Test

The E-Series actuator can be tested off-system or on-system, but independent of the MCA. This is done by pressing and holding the Set button on the MCM while turning power on. The display will initially show "Pb", indicating a stuck push button. Release the Set button, and the display will show "dG" for diagnostics. The Set button can now be pressed to extend the actuator. The power must be cycled to exit the diagnostic mode.

There are diagnostic LED's dedicated to showing the actuator operation internal to the MCM. These are noted in the image below:

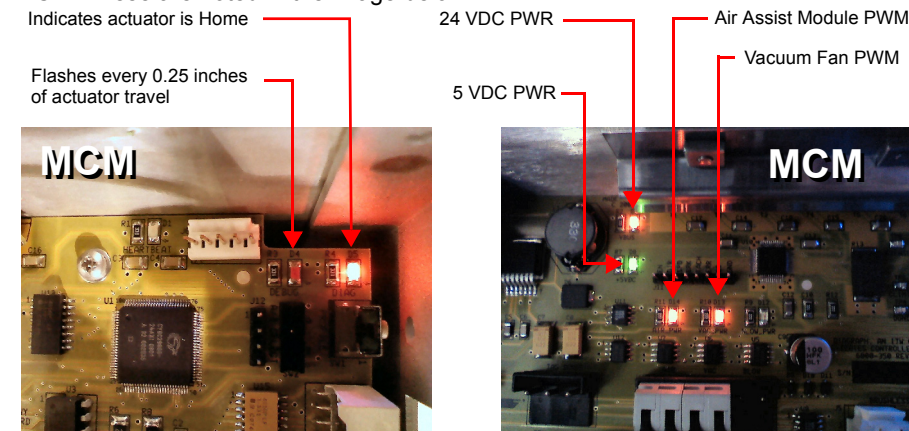

The LED's for Air Assist and Vacuum Fan will show a slight flicker since they are modulated to control speed. Most visible will be the Vacuum Fan LED, which will flicker more noticeable at the lower settings of the "F" fan speed on the MCM. When a label is on the tamp pad, the Vacuum Fan spins up to the set speed. After a label has been on the pad, and then take away without a new label taking its place, the fan will slow down to an idle speed after 5 seconds. The flicker rate of the LED will show this difference in speeds between label in place and removed.



12.0 Spare Parts List - System



Part Number	Recm'd. Spare Part	Apply Module	Description
DOCUMENTATION			
4700-010		ALL	LA/4700 User Manual
LA/4700			
4600-522		ALL	MCA Power Supply (Auto-Ranging, 24 VDC Output)
4600-511		ALL	AC Power Cord
4600-643		ALL	Unwind Dancer Arm Spindle
6000-200		ALL	MCA IV User Interface Touch Screen LCD
6000-300		ALL	Main MCU PCB Assembly
6000-500	√	ALL	Main Controller Assembly IV (MCA IV) Includes: MCU Board, Color LCD w/touchscreen, E-Stop, Enclosure
6000-350T	√	E-TAMP	MCM Motor Controller PCB Assembly
6000-350F	√	E-FASA	MCM Motor Controller PCB Assembly
6000-550		ALL	MCM Assembly Includes: MCM Motor Controller PCB, Power Supply, Enclosure
4600-503		ALL	Rewind BLDC Motor
4600-647		ALL	Rewind Clasp
6000-518		ALL	Product Detector Y-Cable
2806-480		ALL	Serial Cable 25 ft DB9M to DB9F Straight Pinout
4600-950	√	ALL	MAINTENANCE KIT: Wear Items Set Includes: (2) Rewind Belts, (3) Spindles, (2/ea.) Springs, (3) Unwind Fins, (3) Web guides
6000-950	√	E-TAMP	E-TAMP MAINTENANCE KIT: Wear Items Set Includes: Actuator Belts, Bearing Pads, Idler Rollers, Belt Clamp, Bumper, Springs, Motor Dust Cap


Part Number	Recm'd. Spare Part	Apply Module	Description
6000-951	√	E-FASA	E-FASA MAINTENANCE KIT: Wear Items Set Includes: Motor Drive Belt, Swing Arm Belt, Shock Absorber Bumper, Cable Ties, Springs, UHMW
6000-952	√	E-WASA	E-WASA MAINTENANCE KIT: Wear Items Set Includes: Springs, UHMW Rollers, Fan Assembly, Nylon Brushes
6000-520		E-TAMP/ BLOW	Motor and Cable Assembly
6000-521		E-TAMP/ BLOW	Fan Assembly, E-Tamp/Blow
6000-620x10		E-TAMP	E-TAMP Actuator Module, 10 inch stroke
6000-620x20		E-TAMP	E-TAMP Actuator Module, 20 inch stroke
6000700x10		E-FASA	10 inch E-FASA Actuator Assembly ONLY - Side Apply (no MCM)
6000700x10ND		E-FASA	10 inch E-FASA Actuator Assembly ONLY - Nose Up/Down (no MCM)
6000700x20		E-FASA	20 inch E-FASA Actuator Assembly ONLY - Side Apply (no MCM)
6000700x20ND		E-FASA	20 inch E-FASA Actuator Assembly ONLY - Nose Up/Down (no MCM)
6000-666	√	ALL	Air Assist Module
6000-516	√	ALL	Vacuum Fan Assy.
4600-900		ALL	Product Detector - Diffused Light
OPTIONS			
6000-828		ALL	LED Warning Tower Assembly
6000-401		ALL	Discrete I/O Board (Optional Device)
6000-903	√	ALL	Auto-Retract, Label low, or Label Present Sensor and PUR cable (1 sensor/cable/cover per kit)

12.1 Spare Parts List -


Part Number	Recomm ended Spare Part	Description
LA/4700 DRIVE MODULE		
4700-500		Servo Assembly Narrow Web (Either Handed (R & L))
4700-500W		Servo Assembly Wide Web (Either Handed (R & L))
4700-630	YES	Narrow Web (5 in.) Drive Roller
4700-630W	YES	Wide Web (9 in.) Drive Roller
4700-520		Brushless DC Servo Motor
4700-510		Drive Module Power Supply
4700-505		Drive Module Power Capacitor
6146-617	YES	Peel Blade Narrow Web
6146-617W	YES	Peel Blade Wide Web
NIP ROLLER ASSEMBLIES		Narrow and Wide Versions Contain: <ul style="list-style-type: none"> • Nip Roller • Nip Roller Shaft • Nip Lever • Nip Pivot Housing
4700-952		Nip Roller Assembly Kit Narrow Web (5 in.)
4700-952W		Nip Roller Assembly Kit Narrow Web (9 in.)

Part Number	Recomm ended Spare Part	Description
SNORKEL ASSEMBLIES		Narrow and Wide, Left and Right Versions Contain: <ul style="list-style-type: none"> • Support Ends • Snorkel Arms • Peel Blade • Peel Blade Support • Gap Sensor • Hold-down Plate
4700-950-RH		Snorkel Assembly - Right Hand - Narrow Web (5 in.)
4700-950-LH		Snorkel Assembly - Left Hand - Narrow Web (5 in.)
4700-950W-RH		Snorkel Assembly - Right Hand - Wide Web (9 in.)
4700-950W-LH		Snorkel Assembly - Left Hand - Wide Web (9 in.)
TAMP PEEL BLADE ASSY.		Narrow and Wide Versions Contain: <ul style="list-style-type: none"> • Peel Blade Support • Peel Blade • Hold-Down Plate • End Plate • Gap Sensor
4700-951		Tamp Peel Blade Assembly - Narrow Web (L&R)
4700-951W		Tamp Peel Blade Assembly - Wide Web (L&R)
LA/4700 SYSTEM		
4700-950	YES	LA/4700 Wear-Items Maintenance Kit





13.0 System Drawings

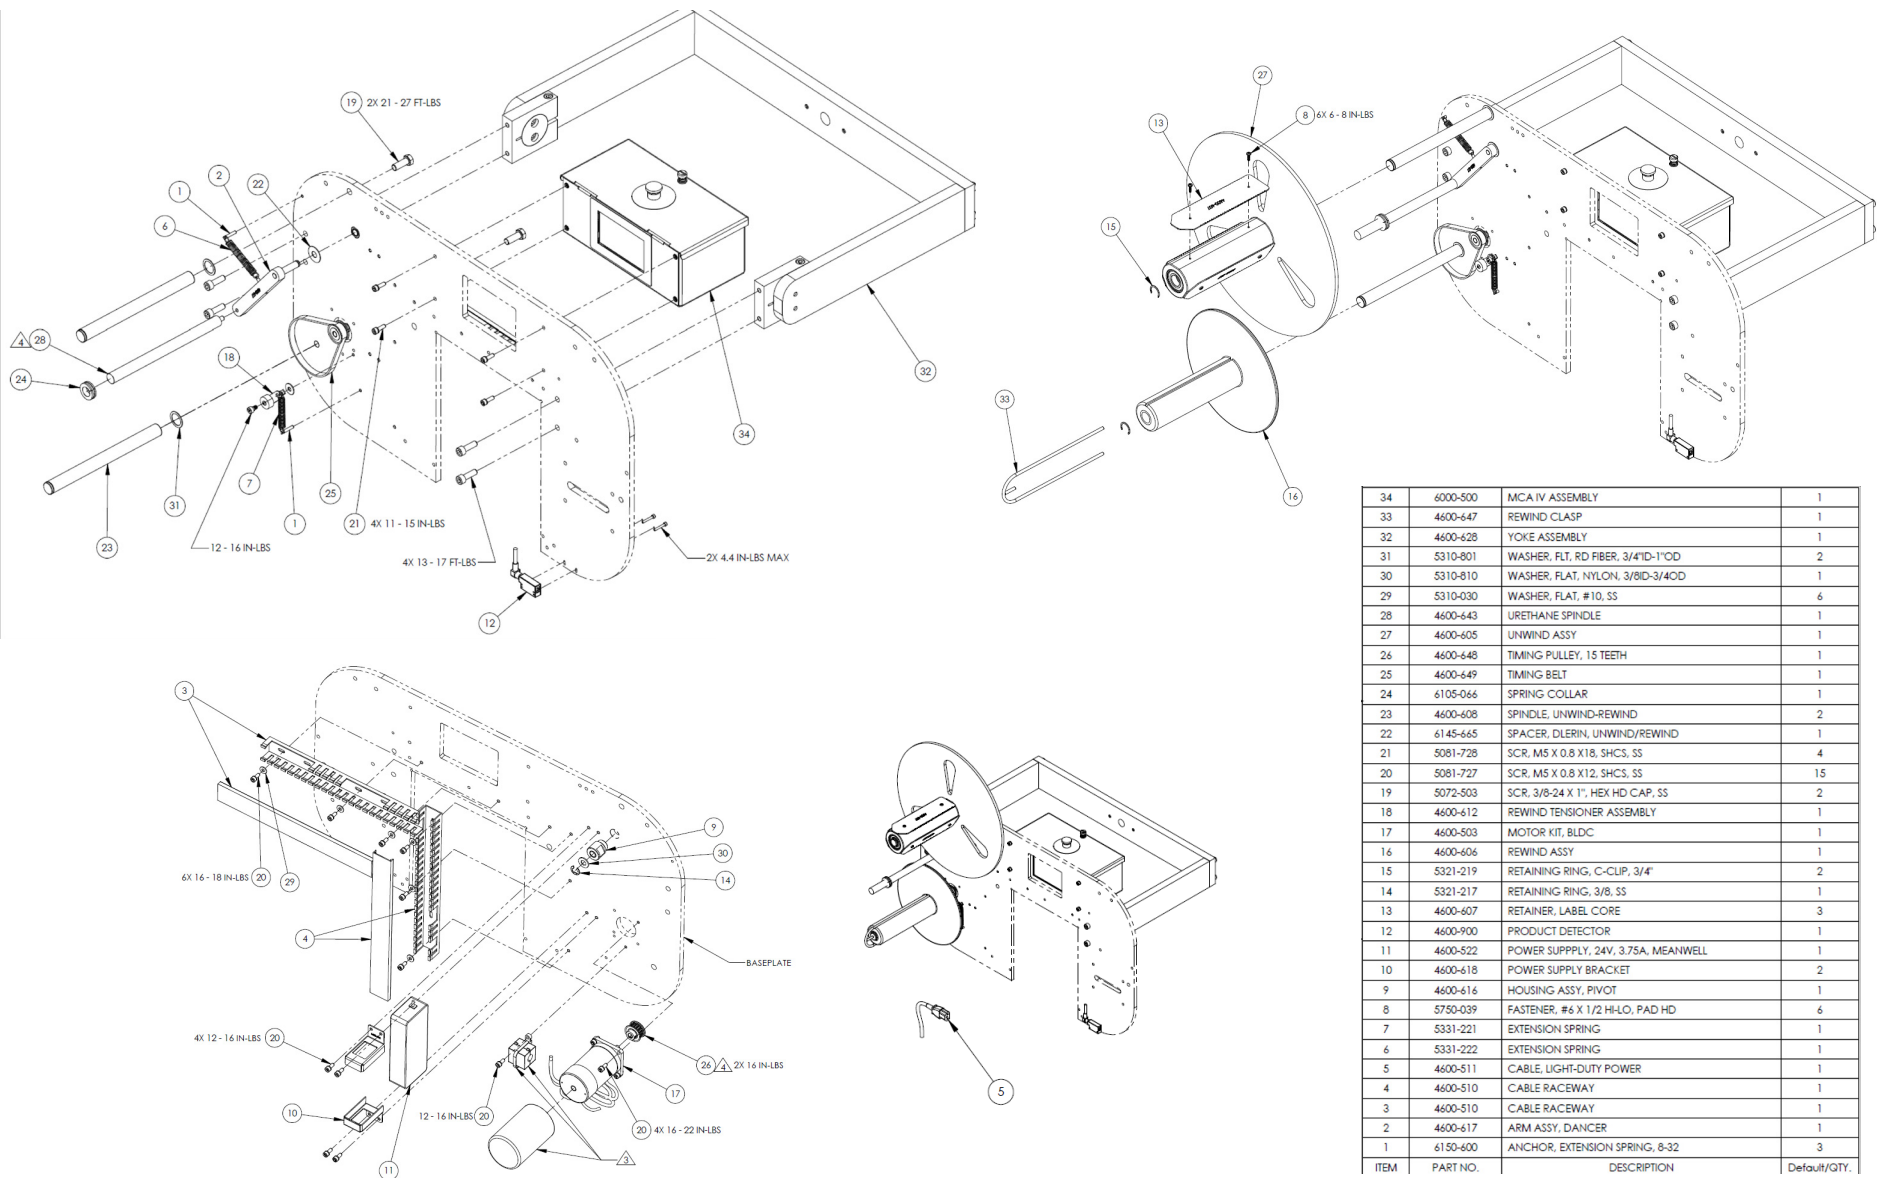


13.1 System Drawings - Drive Module

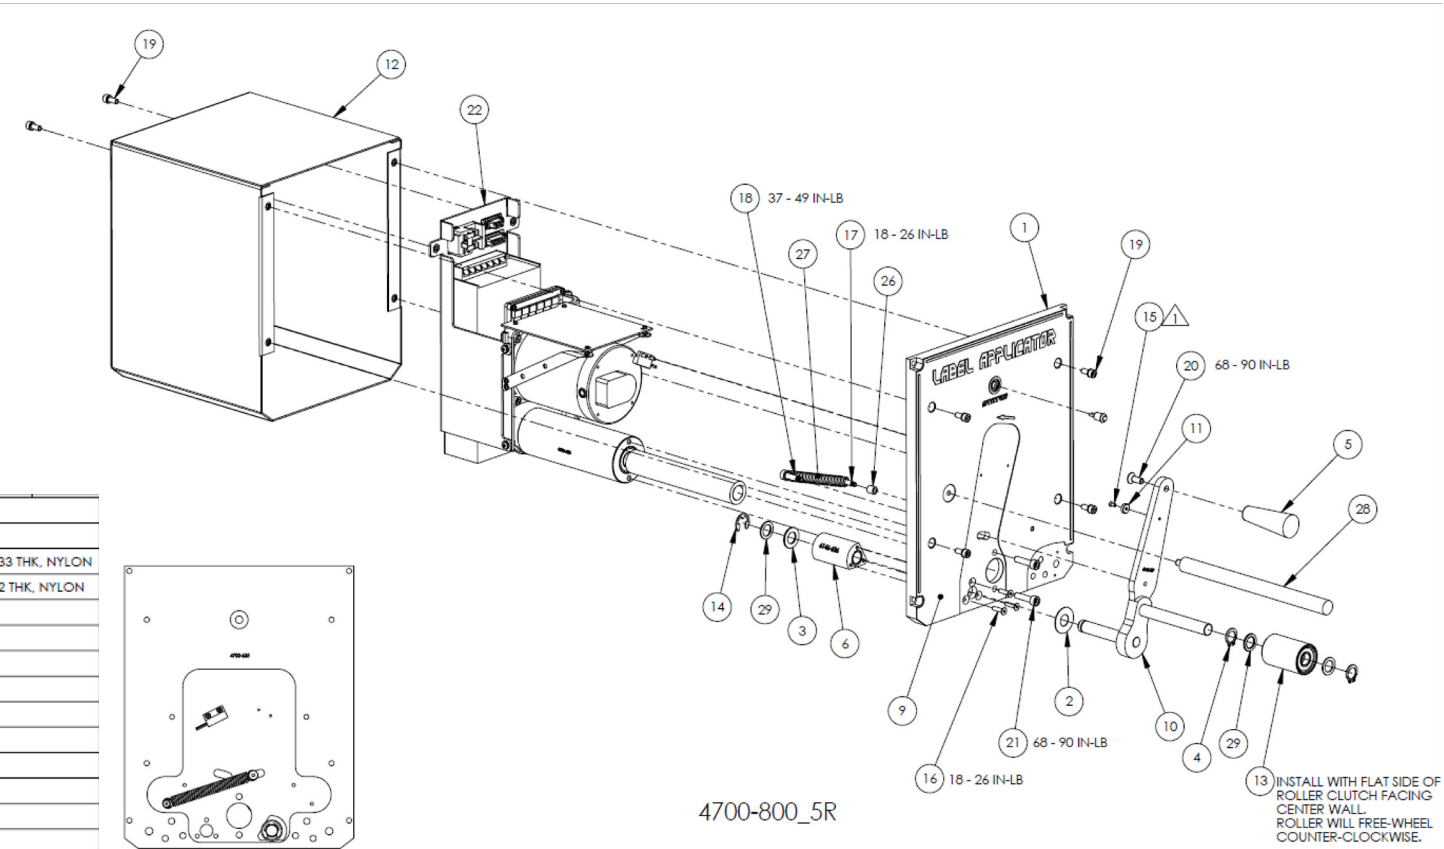




ITEM	PART NO.	DESCRIPTION
1	4700-625	CENTER WALL, LA/4700, SYMMETRIC
2	6146-650	FLAT WASHER, .503 I.D. X 1.120 O.D. X .033 THK, NYLON
3	6146-649	FLAT WASHER, .515 I.D. X .885 O.D. X .062 THK, NYLON
4	5321-401	GRIP RING, 1/2" EXTERNAL, SS
5	4700-640	HANDLE
6	6146-636	HOUSING ASSY, PIVOT
7	6146000C	LA TAMP MODULE FINALS
7	6146000C	LA TAMP MODULE FINALS
8	4700-852	LABEL APPLICATOR LH OVERLAY
9	4700-851	LABEL APPLICATOR RH OVERLAY
10	6146-637	LEVER ASSEMBLY
11	6145-667	MAGNET, RARE EARTH
12	4700-601	MODULE ENCLOSURE
13	6146-638	NIP ROLLER ASSY
14	5321-212	RETAINING RING, 1/2" EXT, E-STYLE, SS
15	5101-101	SCR, 4-40 X 1/4, FL HD PH, SS
16	5091-711	SCR, M4 X 0.7 X 1.6, FL HD SOC, SS
17	5250-025	SCR, M4 X 0.7 X 5 X 10, SHLDR, SOC HD, SS
18	5250-026	SCR, M5 X 0.8 X 6 X 16, SHLDR, SOC HD
19	5081-727	SCR, M5 X 0.8 X 12, SHCS, SS
20	5091-713	SCR, M6 X 1 X 1.6, FL HD SOC, SS
21	5081-729	SCR, M6 X 1 X 2.5, SHCS, SS
22	4700-500	SERVO ASSEMBLY
23	4700-500	SERVO ASSEMBLY
24	6146000A-RH	SNORKEL ASSY, LA MODE
25	6146000A-LH	SNORKEL ASSY, LA MODE
26	6146-651	SPACER, SPRING
27	6145-684	SPRING, EXTENSION, 2.50", SS
28	4600-643	URETHANE SPINDLE
29	5310-047	WASHER, SHIM, .501 x.750 x.06, SS

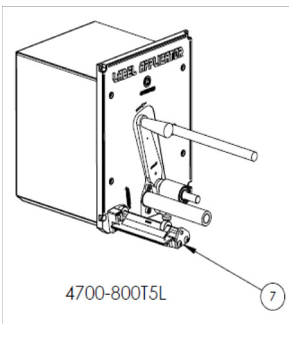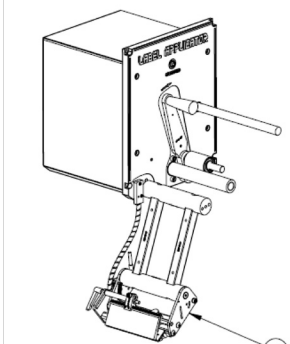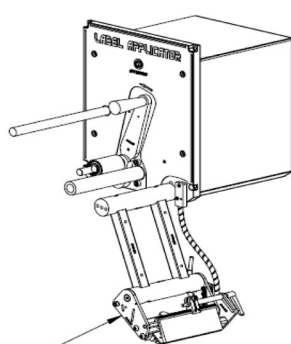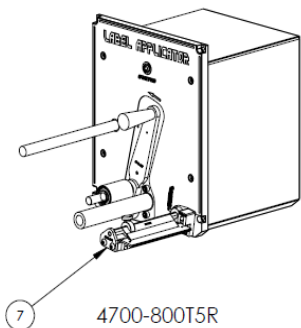

13.2 System Drawings - E-TAMP Actuator

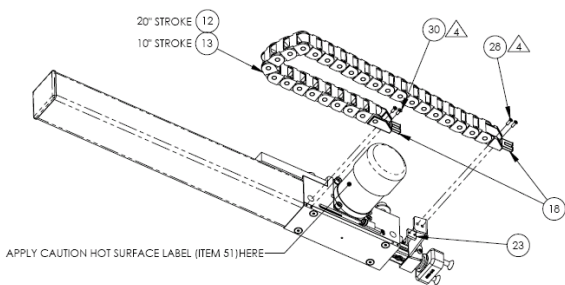


- 1. THIS DRAWING DEFINES THE 6000-620X10 AND 6000-620X20 ACTUATORS. SEE BOM FOR APPLICABLE COMPONENTS.
- 2. THE ACTUATOR CAN BE CONFIGURED TWO WAYS. CONFIGURATION "A" IS SHOWN AND IS APPLICABLE TO RIGHT-HANDED MACHINES WITH TAMP PAD LENGTHS LESS THAN 6.75 INCHES AND FOR LEFT-HANDED MACHINES WITH TAMP PAD LENGTHS OF 6.75 INCHES AND GREATER. CONFIGURATION "B" IS ACHIEVED BY SWAPPING THE POSITIONS OF THE TAMP PAD MOUNT ASSEMBLY AND MAGNET COMPONENTS WITH THE BELT TENSIOER COMPONENTS. CONFIGURATION "B" IS APPLICABLE TO LEFT-HANDED MACHINES WITH TAMP PAD LENGTHS LESS THAN 6.75 INCHES AND FOR RIGHT-HANDED MACHINES WITH TAMP PAD LENGTHS OF 6.75 INCHES AND GREATER.
- △ INSERT AND REMOVE PINS ONLY FROM SIDE OPPOSITE OF MOTOR MOUNT.
- △ APPLY LOCTITE 242 TO SCREW PRIOR TO ASSEMBLY.
- △ CUT TIMING BELT TO LENGTH DURING ASSEMBLY.
- △ TIGHTEN SCREW UNTIL LOCK WASHER COLLAPSES, THEN TIGHTEN ONE MORE TURN.
- 7. TIGHTEN SCREWS TO TORQUE VALUES SPECIFIED ON THE DRAWING.
- △ USE 6000-625-BLUE FOR TAMP PADS UNDER 6". USE 6000-625-RED FOR TAMP PADS OVER 6".

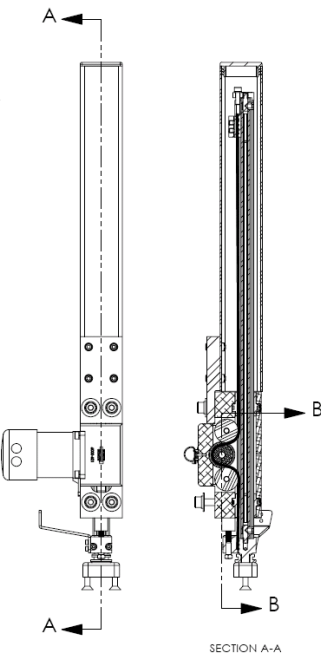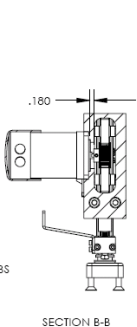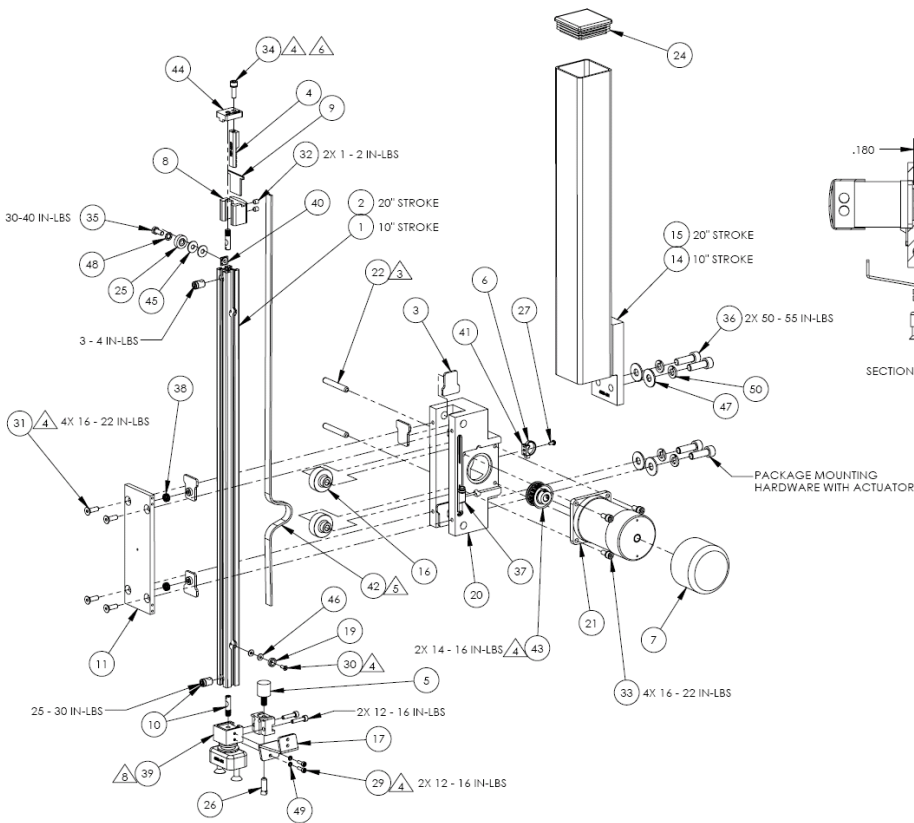



51	6000-643	LABEL, CAUTION HOT SURFACE	1	1
50	5310-308	WASHER, SPLIT-LOCK, 5/16", SS	4	4
49	5310-315	WASHER, SPLIT-LOCK, #4, SS	2	2
48	5310-409	WASHER, LOCK, #10 INT TOOTH	1	1
47	5310-041	WASHER, FLAT, 5/16", SS	4	4
46	5310-037	WASHER, FLAT, #4, SS	2	2
45	5310-030	WASHER, FLAT #10, SS	2	2
44	6000-627	TOP PLATE, ACTUATOR	1	1
43	4600-648	TIMING PULLEY, 15 TEETH	1	1
42	6000-633	TIMING BELT, XL, 240 GROOVES X .375" W	1/2	1
41	6105-423	TIE MOUNT, #4 SCREW	1	1
40	6000-636	THREADED PLATE, MS, MAYTEC	1	1
39	6000-625	TAMP PAD MOUNT ASSY, 6-TAMP	1	1
38	5331-002	SPRING, WAVE, .375 O.D. X .15 L, SS	2	2
37	4600-906, ITEM-1	SENSOR, CYLINDER HOME	1	1
36	5081-730	SCR, M8 X 1.25 X 25, SHCS, SS	4	4
35	5073-602	SCR, M5 X 8 X 12, HD HD CAP, SS	1	1
34	5081-728	SCR, M5 X 0.8 X 18, SHCS, SS	1	1
33	5081-727	SCR, M5 X 0.8 X 12, SHCS, SS	4	4
32	5030-712	SCR, M5 X 0.8 X 6, SOCSSET, CUP PT, SS	2	2
31	5091-712	SCR, M5 X 0.8 X 16, R, LD SOC, SS	4	4
30	5101-601	SCR, M3 X 0.5 X 8, FL HD PH, SS	3	3
29	5081-003	SCR, M3 X 0.5 X 10MM, SHCS, SS	2	2
28	2460-147	SCR, 4-40 X 3/8, PH FH, SS	2	2
27	5152-006	SCR, 4-40 X 1/4, PAN HD, SEMS, PH	1	1
26	6000-637	SCR, 1/4-20 X 5/8", SET, SG HD, CUP PT, SS	1	1
25	6000-638	ROLLER / BUMPER	1	1
24	6000-632	FLUIG, 2-INCH SQUARE	1	1
23	4600-658	PLATE, IGUS MOUNT	1	1
22	5315-105	PIN, DOWEL, 250 X 1.75 L, SS	2	2
21	4600-603, ITEM-1	MOTOR, BRUSHLESS DC	1	1
20	6000-621	MAIN BODY, ACTUATOR	1	1
19	6145-667	MAGNET, RARE EARTH	1	1
18	4600-514	IGUS MOUNTING BRACKETS (SET)	1	1
17	4600-611	IGUS MOUNT, TAMP CYLINDER	1	1
16	6000-623	IDLER ROLLER	2	2
15	6000-631L	GUARD ASSY	1	1
14	6000-631	GUARD ASSY	1	1
13	4000-615, 27	ENERGY CHAIN, IGUS	22'	-
12	4000-615, 41	ENERGY CHAIN, IGUS	-	33'
11	6000-622	COVER PLATE, ACTUATOR	1	1
10	6000-635	CONNECTOR ASSY, MAYTEC	2	2
9	6000-629	CLAMP PLATE	1	1
8	6000-628	CLAMP	1	1
7	6000-634	CAP, VINYL, ROUND	1	1
6	6150-580	CABLETIE, 87" DIA, BLK NYLON	1	1
5	6150-601	BUMPER, 5/8" MALE, POLYURETHANE	1	1
4	6000-626	BELT TENSIOER	1	1
3	6000-624	BEARING PAD	8	8
2	6000-630L	ACTUATOR EXTRUSION	-	1
1	6000-630	ACTUATOR EXTRUSION	1	-
ITEM	PART NO.	DESCRIPTION	6000-620X10/QTY.	6000-620X20/QTY.

13.3 System Drawings - E-FASA Actuator

0 Degrees Mount (Side Apply)

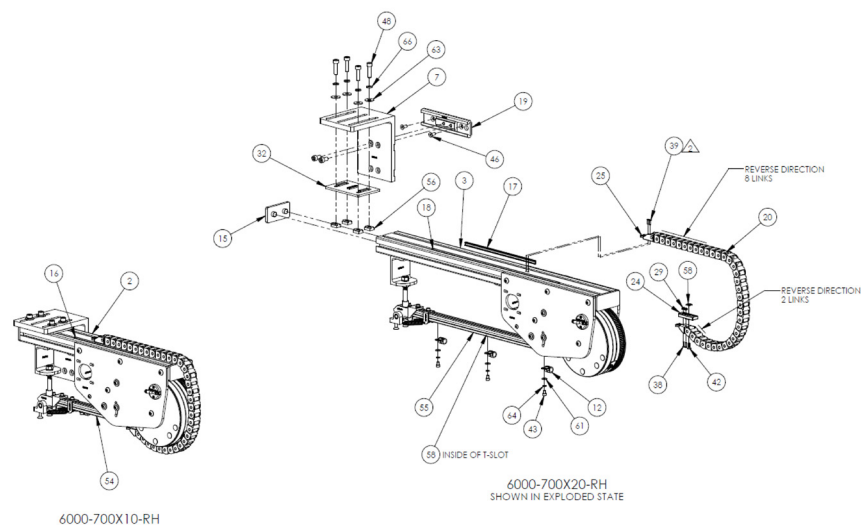

90 Degrees Mount (Nose-Up/Nose-Down)

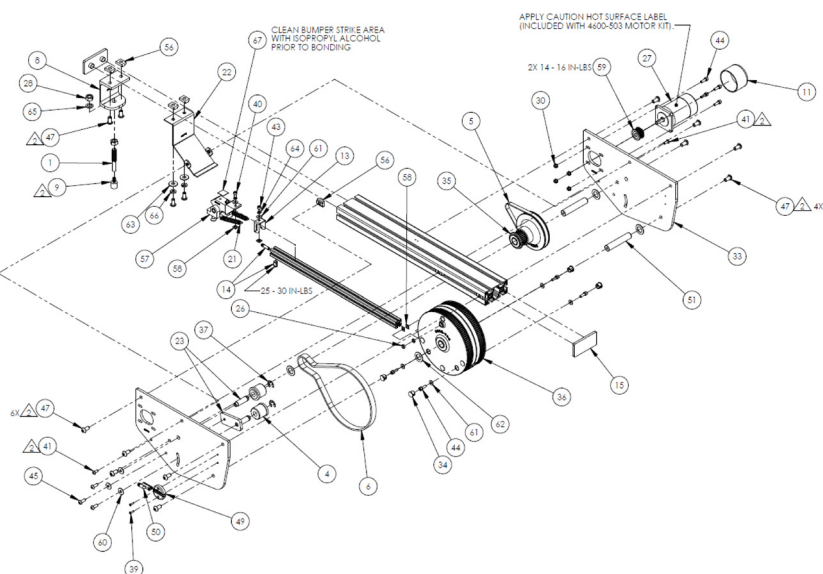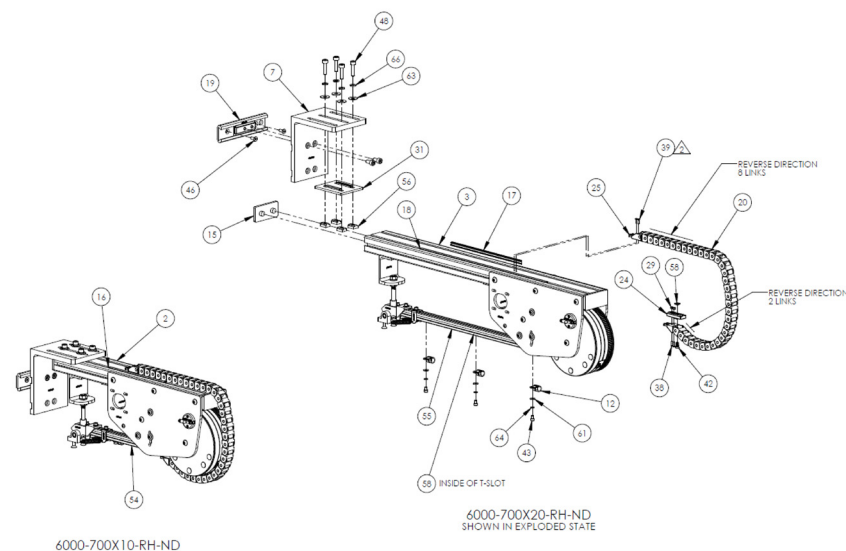[illegible]

REVISIONS					
REV	ECN	DESCRIPTION	DATE	APPROVED	
1		NEW DRAWING - PRE-RELEASE	3/12/2010		

NOTES:

1. THIS DRAWING DEFINES THE 6000-700A ASSEMBLY. ONLY RIGHT-HAND CONFIGURATIONS ARE SHOWN. EACH LEFT-HAND CONFIGURATION IS A MIRRORED VERSION AND UTILIZES THE SAME PARTS AS ITS CORRESPONDING RIGHT-HAND CONFIGURATION. SEE BOM FOR APPLICABLE COMPONENTS.
- △ APPLY LOCITITE 242 TO SCREW PRIOR TO ASSEMBLY.
3. TIGHTEN SCREWS TO TORQUE VALUES SPECIFIED ON THE DRAWING.
- △ COMPONENT(S) INCLUDED WITH 4800-503 REWIND MOTOR ASSEMBLY.
- △ COMPONENT(S) INCLUDED WITH 6000-719 EXTRUSION KIT, E-FA5A, 10".
- △ COMPONENT(S) INCLUDED WITH 6000-720 EXTRUSION KIT, E-FA5A, 20".
- △ COMPONENT(S) NOT SHOWN ON FIELD OF DRAWING.

[illegible]

CONFIDENTIAL

THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION OF DIAGRAM - AN INW COMPANY AND IS NOT TO BE COPIED, USED, OR DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN CONSENT OF DIAGRAM - AN INW COMPANY.	ALL DIMENSIONS ARE SHOWN IN INCHES. ALL DIMENSIONS APPLY AFTER FINISH REMOVE BURRS	QTY: R BOXEN	3/
	TOLERANCES: LINE 2 PLACE (.XX) 3 PLACE (.XXX) HOLE DIAMETERS	FINISH: XX REMOVE BURRS	PART:
		COST PRICE:	2/
		SHOP PRICE:	3/

 **Diagraph**
An ITT Company

E. FASA ASSEMBLY

E-FASA ASSEMBLY

TYPE	CHRG NO
------	---------


B	6000-700
---	----------

13.4 System Drawings - E-WASA

39	6170-581	WASHER, FLAT, NYLON, M6	3
38	5310-308	WASHER, SPLIT-LOCK, 5/16", SS	3
37	5310-318	WASHER, SPLIT LOCK, #10, SS	2
36	5310-041	WASHER, FLAT, 5/16, SS	2
35	6170-567	TERMINAL BLOCK, 2 CIRCUIT	1
34	4600-642	TAMP APPLICATOR MOUNTING BRACKET	1
33	SEE TABLE	STAND OFF, FEMALE, 10MM	1
32	SEE TABLE	SPRG, EXT	1
31	SEE TABLE	SHAFT, PIVOT	1
30	5081-738	SCR, M8 X 1.25 X 30, SHCS, SS	2
29	5250-033	SCR, MSX.8X6X10, SHLDR, SOC HD, SS	3
28	5250-034	SCR, MSX 0.8X30, SHLDR, SOC HD, SS	1
27	5241-725	SCR, MSX 0.8 X 20, BUT HD CAP, SS	2
26	5250-027	SCR, M5 X.8 X6 X20, SHLDR, SOC HD, SS	1
25	5030-711	SCR, M4 X 0.7 X 6, SOCSET, CUP PT, SS	3
24	5151-104	SCR, 4-40 X 3/4, PAN HD PH, SS	1
23	6170-583	ROLLER, UHMW, .25"ID, .625"OD	1
22	SEE TABLE	ROLLER, DELRIN	1
21	6170-572	RIVET NUT, 8-32	4
20	5309-320	NUT, NYLON INSERT, M5 X 0.8	2
19	5305-029	NUT, JAM, M8 X 1.25, SS	2
18	5305-031	NUT, JAM, 5/16-24	1
17	6170-521	LINKAGE, CURVED	1
16	6170-520	LINKAGE, CAM	1
15	6170-516	LINKAGE, BALL JOINT	1
14	6000-623	IDLER ROLLER	1
13	6146-650	FLAT WASHER, .503 I.D. X 1.120 O.D. X .033 THK, NYLON	1
12	SEE TABLE	FAN BOX, E-WASA	1
11	SEE TABLE	E-WASA MOUNT	1
10	4600-630	DOVETAIL MOUNTING HARDWARE	1
9	6170-515	CYLINDER, ADJUSTABLE	1
8	6170-510	CABLE, WASA	1
7	6170-573	CABLE CLAMP	1
6	6170-509	FAN ASSEMBLY, WASA	1
5	5312-113	BUSHING, FLANGED, PLAS, SW5921	3
4	SEE TABLE	BRUSH, NYLON	1
3	5312-117	BEARING, FLANGED 3/8 ID	6
2	SEE TABLE	ARM, E-WASA	1
1	6150-600	ANCHOR, EXTENSION SPRING, 8-32	2
ITEM NO.	PART NUMBER	DESCRIPTION	Default/Qty.

NOTES:

- ASSEMBLE AS SHOWN.
- APPLY LOCTITE 242 TO THREADS PRIOR TO ASSEMBLY.
- RED WIRE AND BLUE WIRE TO BE PARALLEL AT END OF TERMINAL BLOCK. THE BROWN WIRE TO BE CONNECTED ON THE OPPOSITE END OF THE RED WIRE AND THE WHITE WIRE TO BE CONNECTED ON THE OPPOSITE END OF BLUE WIRE.
- REFERENCE TABLE FOR PARTS THAT CHANGE PER SIZE AND IF RIGHT HAND OR LEFT HAND.
- CUT SLIT IN WASHER 6146-650 ON ONE SIDE, TO BE ABLE TO FIT ON BOTTOM SIDE OF CYLINDER PIVOT PIECE.
- INCLUDED WITH (6170-509) FAN ASSEMBLY, WASA.
- NOT A FULL SIZE REPRESENTATION OF 6170-510 ON DRAWING.

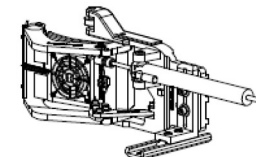

REFERENCE TABLE

ITEM #	6170-500-4X6RH E-WASA, 4X6 RH, ASSY	6170-500-4X6LH E-WASA, 4X6 LH, ASSY	6170-500-4X8RH E-WASA, 4X8 RH, ASSY	6170-500-4X8LH E-WASA, 4X8 LH, ASSY	6170-500-4X10RH E-WASA, 4X10 RH, ASSY	6170-500-4X10LH E-WASA, 4X10 LH, ASSY	6170-500-4X12RH E-WASA, 4X12 RH, ASSY	6170-500-4X12LH E-WASA, 4X12 LH, ASSY
2	6170-505-4X6	6170-505-4X6	6170-505-4X8	6170-505-4X8	6170-505-4X10	6170-505-4X10	6170-505-4X12	6170-505-4X12
4	6146-653	6146-653	6146-653	6146-653	6146-653	6146-653	6146-653	6146-653
11	6170-501-4X6RH	6170-501-4X6LH	6170-501-4X8RH	6170-501-4X8LH	6170-501-4X10RH	6170-501-4X10LH	6170-501-4X12RH	6170-501-4X12LH
12	6170-502-4X6RH	6170-502-4X6LH	6170-502-4X8RH	6170-502-4X8LH	6170-502-4X10RH	6170-502-4X10LH	6170-502-4X12RH	6170-502-4X12LH
22	6170-518X4	6170-518X4	6170-518X4	6170-518X4	6170-518X4	6170-518X4	6170-518X4	6170-518X4
31	6170-576	6170-576	6170-576	6170-576	6170-576	6170-576	6170-576	6170-576
32	5331-226	5331-226	5331-220	5331-220	5331-220	5331-220	5331-220	5331-220
33	6170-568	6170-568	6170-568	6170-568	6170-568	6170-568	6170-568	6170-568

ITEM#	6170-500-6X6RH E-WASA, 6X6 RH, ASSY	6170-500-6X6LH E-WASA, 6X6 LH, ASSY	6170-500-6X8RH E-WASA, 6X8 RH, ASSY	6170-500-6X8LH E-WASA, 6X8 LH, ASSY	6170-500-6X10RH E-WASA, 6X10 RH, ASSY	6170-500-6X10LH E-WASA, 6X10 LH, ASSY	6170-500-6X12RH E-WASA, 6X12 RH, ASSY	6170-500-6X12LH E-WASA, 6X12 LH, ASSY
2	6170-505-6X6	6170-505-6X6	6170-505-6X8	6170-505-6X8	6170-505-6X10	6170-505-6X10	6170-505-6X12	6170-505-6X12
4	6170-582	6170-582	6170-582	6170-582	6170-582	6170-582	6170-582	6170-582
11	6170-501-6X6RH	6170-501-6X6LH	6170-501-6X8RH	6170-501-6X8LH	6170-501-6X10RH	6170-501-6X10LH	6170-501-6X12RH	6170-501-6X12LH
12	6170-502-6X6RH	6170-502-6X6LH	6170-502-6X8RH	6170-502-6X8LH	6170-502-6X10RH	6170-502-6X10LH	6170-502-6X12RH	6170-502-6X12LH
22	6170-518X6	6170-518X6	6170-518X6	6170-518X6	6170-518X6	6170-518X6	6170-518X6	6170-518X6
31	6170-577	6170-577	6170-577	6170-577	6170-577	6170-577	6170-577	6170-577
32	5331-226	5331-226	5331-220	5331-220	5331-220	5331-220	5331-220	5331-220
33	6170-580	6170-580	6170-580	6170-580	6170-580	6170-580	6170-580	6170-580

CONFIDENTIAL

THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION OF DIAGRAPH - AN ITW COMPANY AND IS NOT TO BE COPIED, USED OR DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN CONSENT OF DIAGRAPH - AN ITW COMPANY.

UNLESS OTHERWISE SPECIFIED:

ALL DIMENSIONS ARE SHOWN IN INCHES.
ALL DIMENSIONS APPLY AFTER FINISH.
REMOVE BURRS

TOLERANCES:
LINEAR: 2 PLACE (XX) ±0.05
3 PLACE (XXX) ±0.005
HOLE DIAMETERS
ANGULAR
MACHINE SURFACE

NEXT ASSEMBLY

MODEL

MATERIAL SPEC

FILE NAME: 6170-500-4X8RH

DWN: KROEPEL 05/04/10

APP: RBIXEN 7/26/10

APP: JXX JXX

ASSY PROC:

INSP PROC:

CAGE CODE

SCALE: 1:4

SHEET 1 OF 3



Diagraph.
An ITW Company

TITLE:

E-WASA ASSEMBLY

SIZE


B


DWG NO

6170-500

REV

A

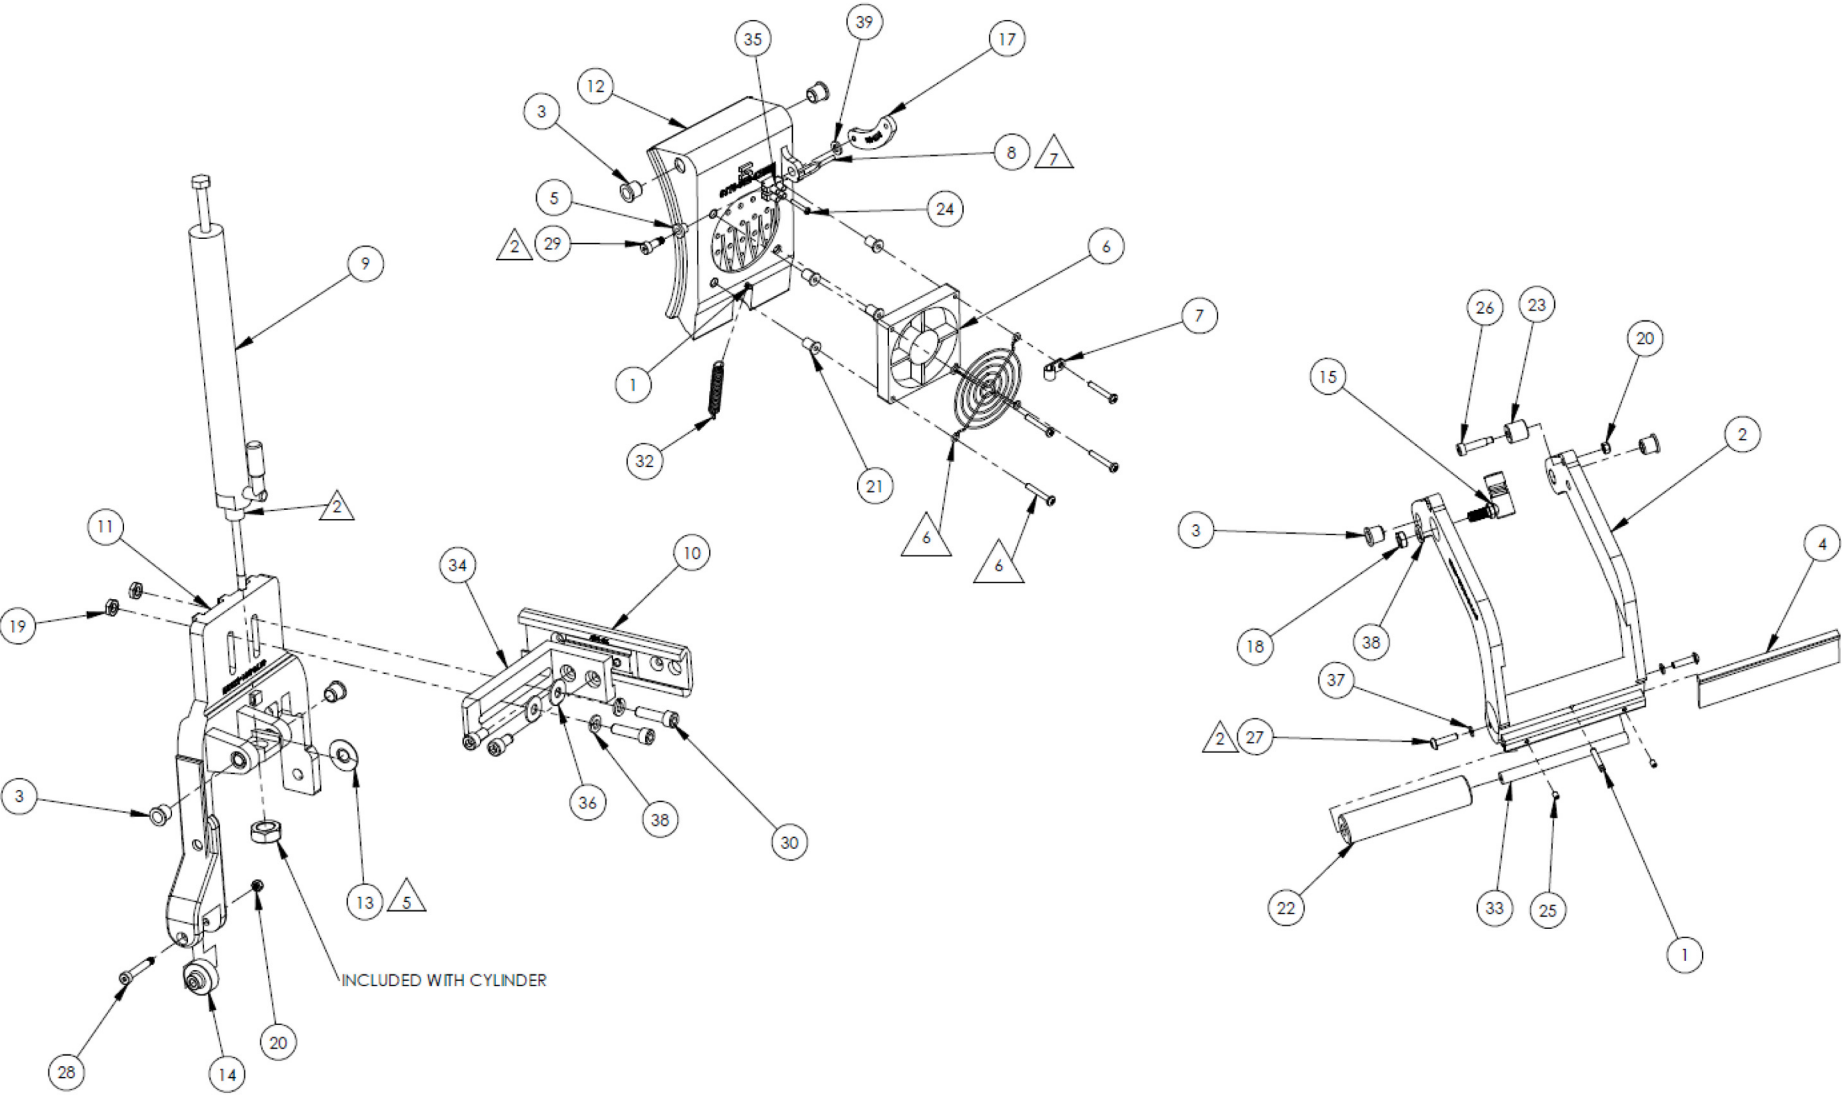

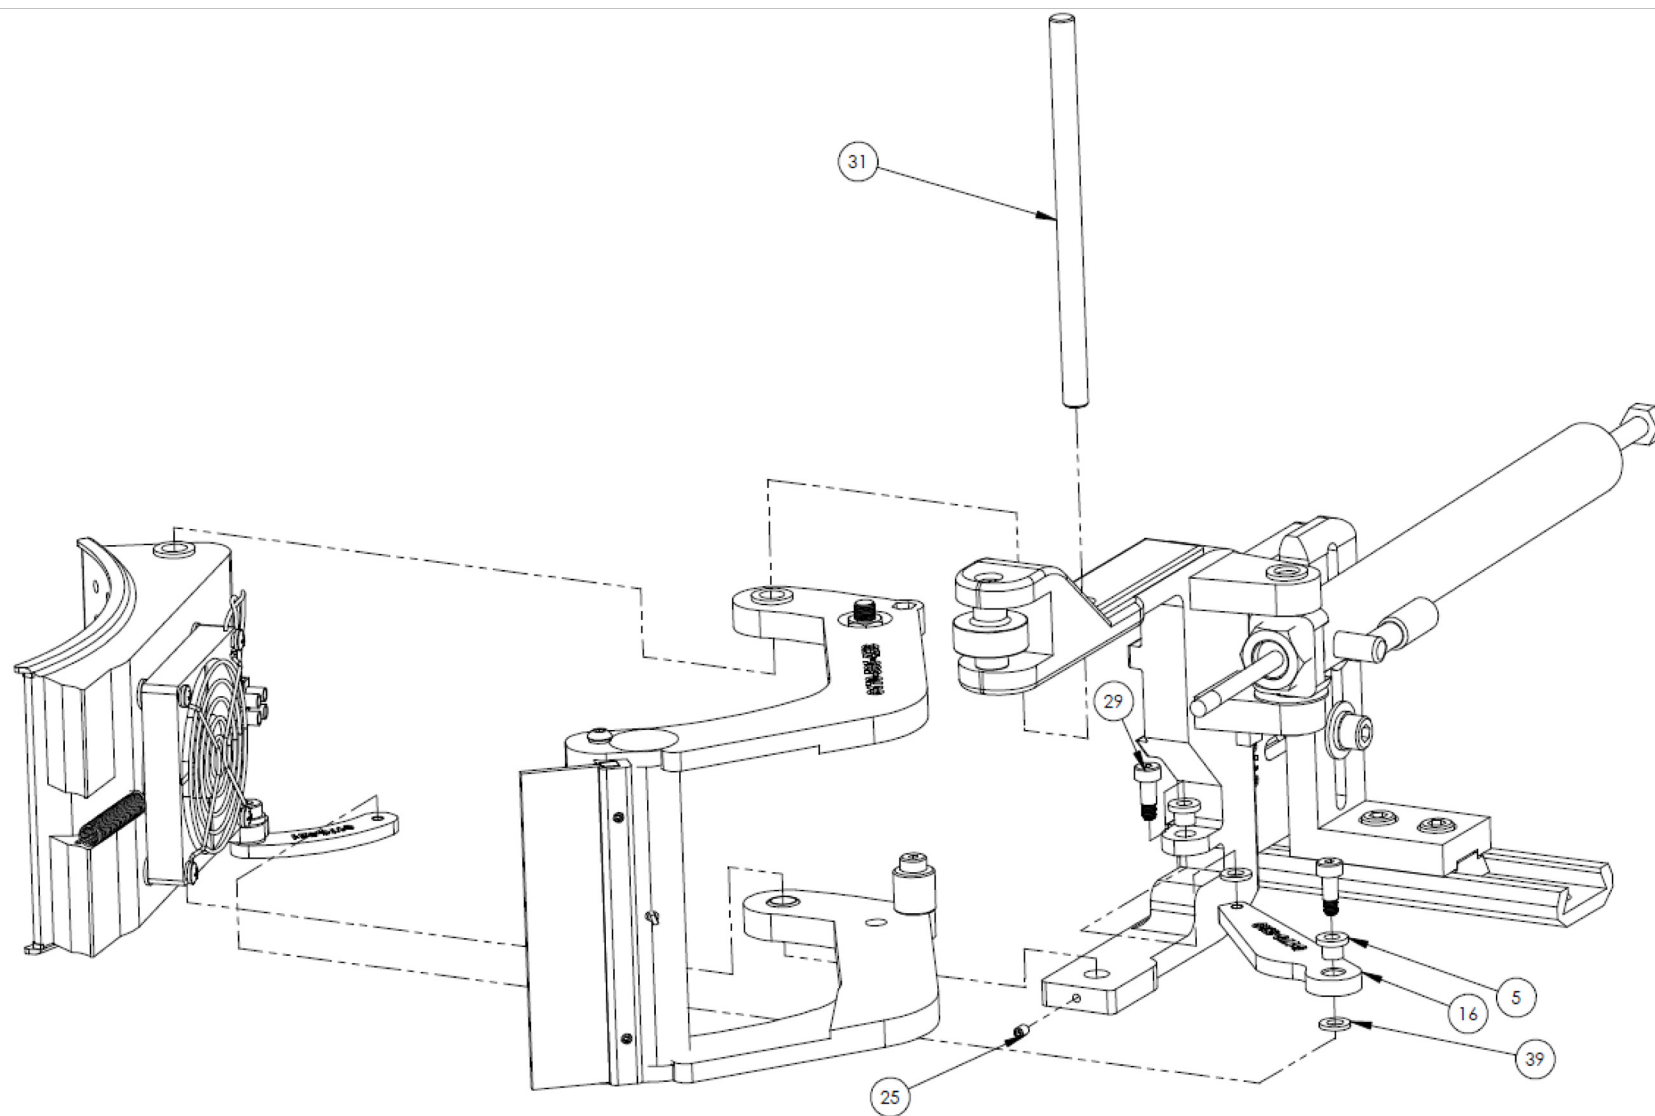

13.5 System Drawings - E-Tamp/Blow





NOTES:

- 1 THIS DRAWING REPRESENTS SEVERAL DIFFERENT ASSEMBLY CONFIGURATIONS THAT DIFFER BY ONLY THE HOUSING COMPONENT (ITEM 13). REFER TO TABLE "A" FOR DETAILS.
- 2 ORIENTATE OPEN ENDS OF RETAINING RINGS OPPOSITE THE FLAT ON THE SHAFT.
- 3 ADJUST THE TOP VALVE BY PLACING THE VALVE IN ITS BLOW POSITION AND ALIGNING THE EDGE OF THE UPPER VALVE ARM SLIGHTLY BEYOND PARALLEL WITH THE TOP SURFACE OF THE HOUSING. TIGHTEN SETSCREWS IN UPPER VALVE.
- 4 ADJUST THE LOWER VALVE BY POSITIONING THE VALVE SUCH THAT IT CAN ACHIEVE ITS FULL RANGE OF MOTION RELATIVE TO THE EXTREME POSITIONS OF THE UPPER VALVE. TIGHTEN THE SETSCREWS IN THE LOWER VALVE.
- 5 PORT LABEL REGION OF PAD USING 5/32" DRILL. ANY OTHER MODIFICATIONS OF PORTING SHALL BE DOCUMENTED IN AN "NSL" DRAWING.
- 6 HOLES SHOWN UNPORTED.
- 7 COMPONENT IS ONLY USED ON THE 6000-750-4X6 ASSEMBLY AND IS NOT SHOWN ON FIELD OF DRAWING.

TABLE A


ASSEMBLY PART NUMBER	CONFIGURATION	HOUSING PART NUMBER
6000-750-4X2	4" X 2"	6000-750-4X2-1
6000-750-4X4	4" X 4"	6000-750-4X4-1
6000-750-4X6	4" X 6"	6000-750-4X6-1

28	6000-762-4X6	7	IMPACT PLATE, E-TAMP-BLOW, 4" X 6"	1
27	5310-417		WASHER, LOCK, #6, INT TOOTH, SS	2
26	6000-751		VALVE	2
25	6000-755		TIE ROD	1
24	6000-821		TAPE, UHMW, 3/4" SQ. X .012" THK	2
23	6000-752		SHAFT	2
22	5030-711		SCR, M4 X 0.7 X 6, SOCSET, CUP PT, SS	5
21	5151-524		SCR, M2 X 0.4 X 5, PAN HD PH, SS	2
20	5151-126		SCR, 6-32 X 3/8, PAN HD PH, SS	4
19	5092-213		SCR, 1/4-20 X 2, FL HD SOC, SS	2
18	5260-602		SCR, #4 X 3/8L, HI-LO, PAN HD PH, SS	4
17	5321-011		RETAINING RING, EXTERNAL, 3/16, ZN	4
16	6170-573		NYLON CABLE CLAMP, 1/8"	1
15	6000-520		MOTOR/CABLE ASSEMBLY	1
14	6000-757		MOTOR MOUNT	1
13	6000-750-X_1	1	HOUSING, E-TAMP-BLOW MODULE	1
12	6000-760		FAN RETAINER	1
11	6000-761		FAN GUARD	2
10	6000-521		FAN ASSY, E-TAMP-BLOW	1
9	5331-227		EXTENSION SPRING	1
8	6000-756		DRAG LINK	1
7	6000-763		COVER, LINKAGE	1
6	6000-758		COVER PLATE	1
5	5312-123		BEARING, FLANGED SLEEVE, 3/16 ID X 5/16 OD X 1/4 L	4
4	6000-753		ARM, UPPER VALVE	1
3	6000-759		ARM, MOTOR	1
2	6000-754		ARM, LOWER VALVE	1
1	6146-648		ANCHOR, EXTENSION SPRING, 6-32	1
ITEM	PART NO.		DESCRIPTION	Default/QT.

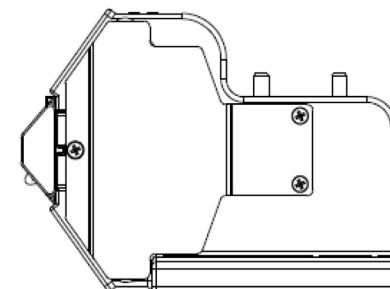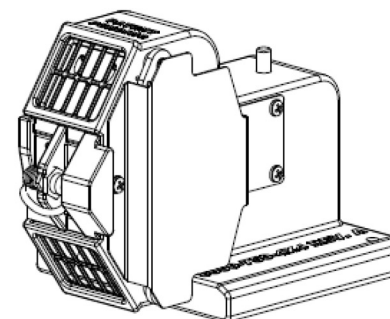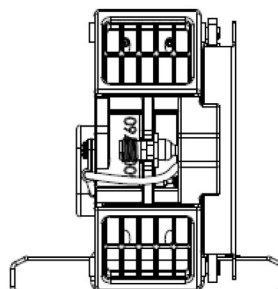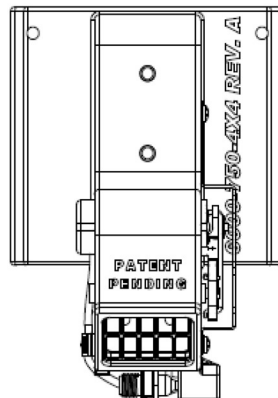


CONFIDENTIAL		UNLESS OTHERWISE SPECIFIED:		FILE NAME			
THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION OF DIAGRAPH - AN ITW COMPANY AND IS NOT TO BE COPIED, USED OR DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN CONSENT OF DIAGRAPH - AN ITW COMPANY.		ALL DIMENSIONS ARE SHOWN IN INCHES. ALL DIMENSIONS APPLY AFTER FINISH. REMOVE BURRS		6000-750			
		TOLERANCES:		DWN	R BIKEN	12/14/2010	 Diagraph. An ITW Company
		LINEAR 2 PLACE (XXX) ±.015		APP	R BIKEN	8/12/2011	
		3 PLACE (XXX) ±.005		APP	E KROEPEL	8/12/2011	
		HOLE DIAMETERS ±.005		APP	E KROEPEL	8/12/2011	
		ANGULAR ±1°		APP	E KROEPEL	8/12/2011	ELECTRIC TAMP-BLOW MODULE
		MACHINE SURFACE		APP	E KROEPEL	8/12/2011	
				APP	E KROEPEL	8/12/2011	
				APP	E KROEPEL	8/12/2011	
NEXT ASSEMBLY	MODEL	MATL SPEC	SCALE: 1:2	SHEET 1 OF 7		SIZE	REV
						B	A
						DWG NO	
						6000-750	

13.6 System Drawings - E-Tamp/Blow

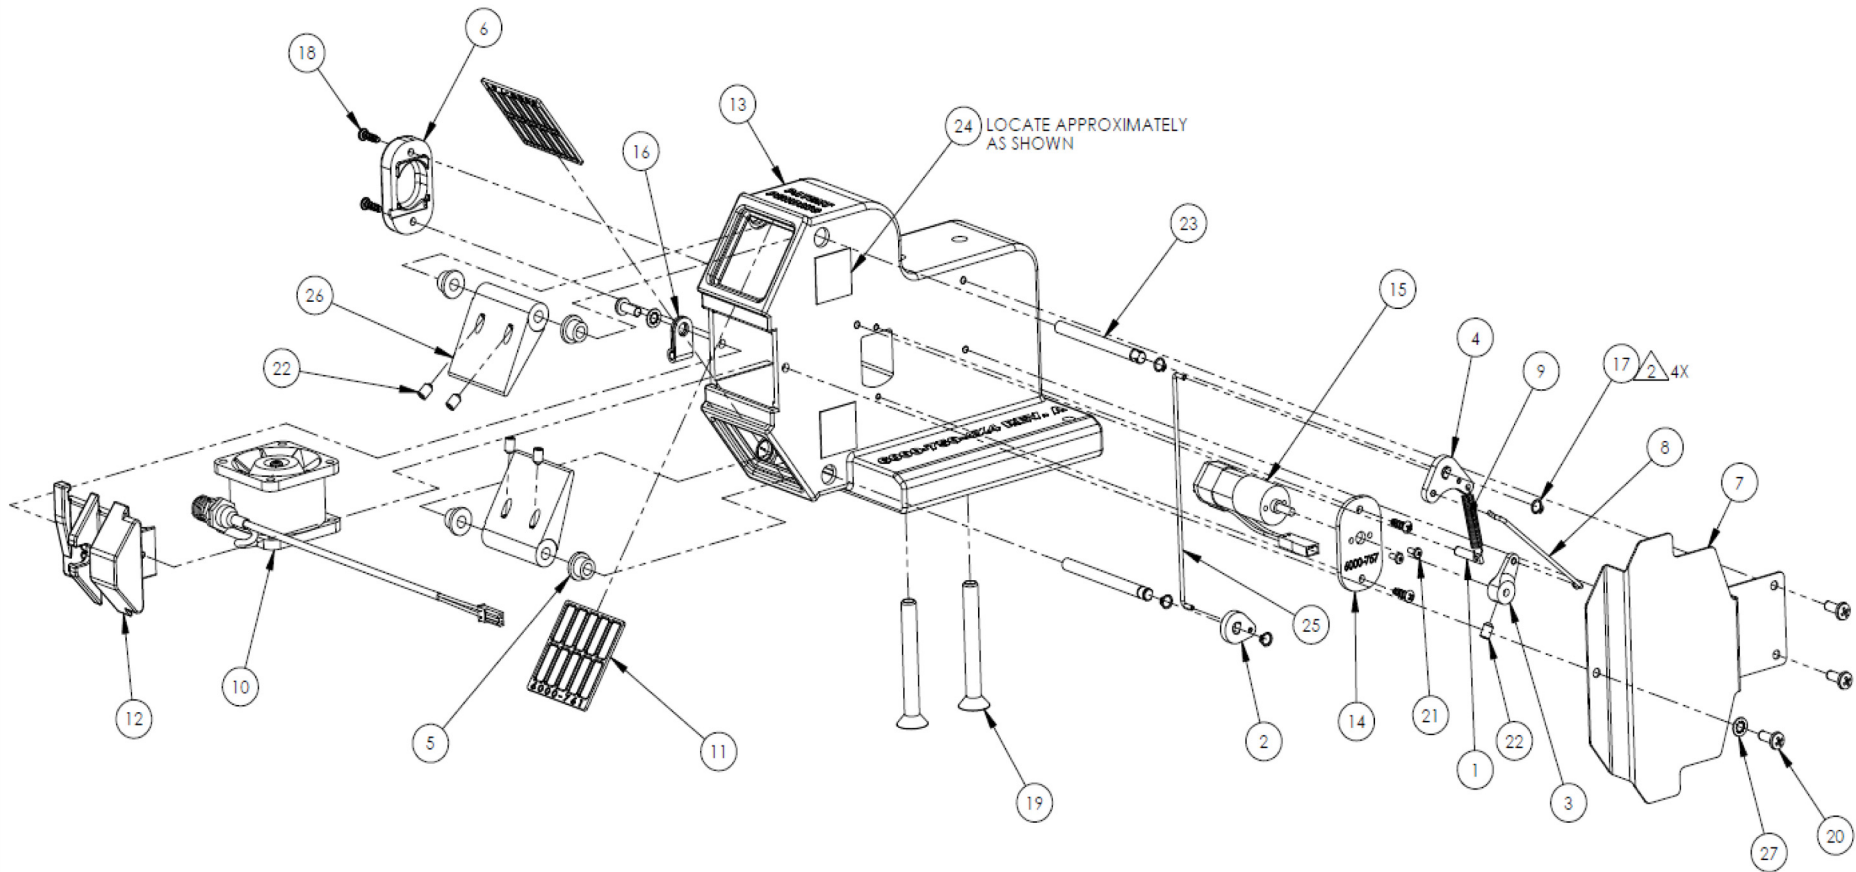


13.7 System Drawings - E-Series Components

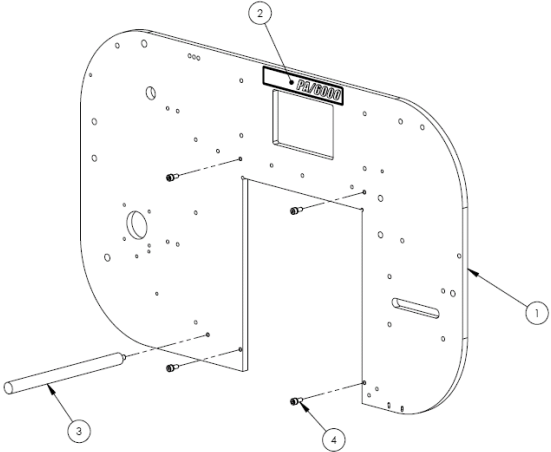


4	5081-727	SCR, M5 X 0.8 X12, SHCS, SS		4
3	4600-643	URETHANE SPINDLE		1
2	6000-550	PA/6000 NAMEPLATE DECAL		1
1	6000-600	PA/6000 BASEPLATE		1
ITEM	PART NO.	DESCRIPTION	MFR. / VENDOR	QTY.

19	6000-642	OVERLAY, MOTOR CONTROL MODULE	1	
18	6000-513	CABLE, VACUUM FAN	1	
17	6000-512	CABLE, AC POWER, 3-BRANCH	1	
16	6000-510	CABLE ASSY, E-TAMP CONTROL	1	
15	6000-509	CABLE, HOME SENSOR INTERFACE	1	
14	5310-313	WASHER, SPRING, 1/4", SS	2	
13	5310-030	WASHER, FLAT, #10, SS	2	
12	4600-642	TAMP APPLICATOR MOUNTING BRACKET	1	
11	5350-007	STANDOFF, 4-40 X 5/16, 1/4" OD, HEX	2	
10	5091-713	SCR, M6 X 1 X 16, FL HD SOC, SS	2	
9	5241-717	SCR, M6 X 1 X 16, BUT HD CAP, SS	2	
8	5081-727	SCR, M5 X 0.8 X12, SHCS, SS	2	
7	5151-508	SCR, 4-40 X 2-1/2", PAN HD PH, SS	2	
6	6000-550	MOTOR CONTROL MODULE	1	
5	6000-654	FAN GUARD	1	
4	6000-507	FAN ASSY, 2-STAGE	1	
3	4600-630	DOVETAIL MOUNTING HARDWARE	1	
2	6000-508	BLOWER ASSY	1	
1	6000-650R	AIR ASSIST MOUNT ASSY, RIGHT	1	
ITEM	PART NO.	DESCRIPTION	Default/ QTY.	

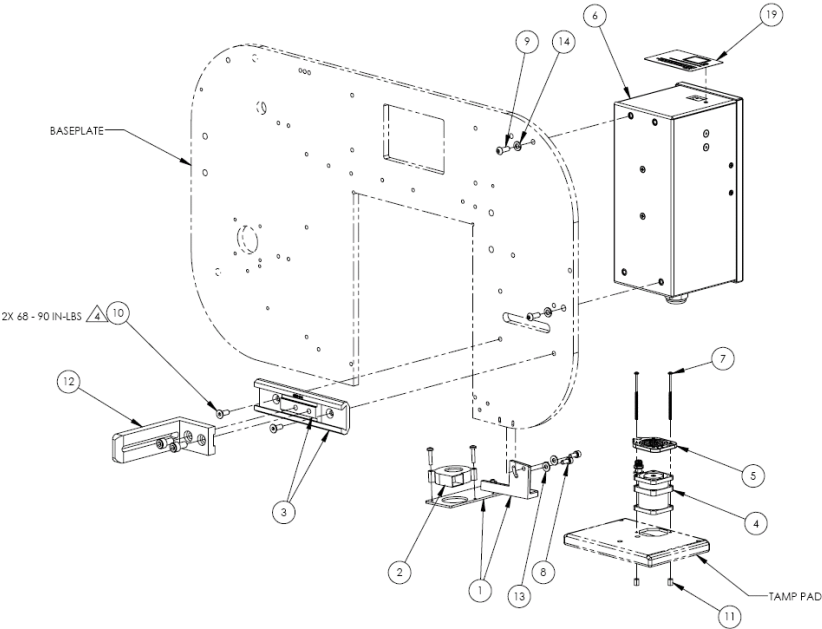

13.8 System Drawings - Optional "Chi" Stand

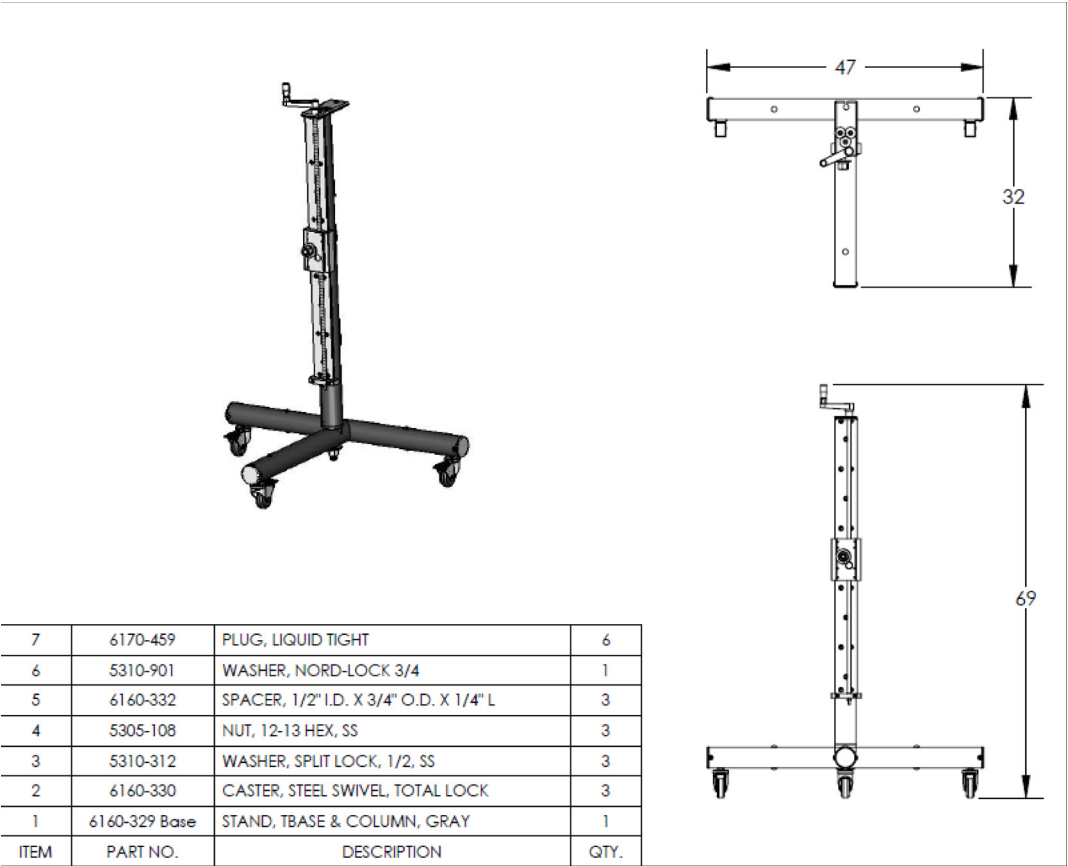

Recorded By: Shad Schoen	Date: 10/12/06	Title: Stand, Universal, Gray, ALP	REV. B
Checked By:	Date:		
Checked By:	Date:	Drawing No: 6160-329	

14.0 Declaration of Conformity

DECLARATION OF CONFORMITY

Diagraph, an ITW Company, hereby declares that the equipment specified below has been tested and found compliant to the following directives and standards-

Directives:


- EMC 89/336/ECC
- Low Voltage 73/23/EEC

Equipment Type:

Label / Applicator

Model Number:

LA/4700

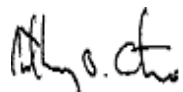

Bruce Castro
Quality/Safety Manager
Diagraph, an ITW Company
1 Missouri Research Park Dr.
St. Charles, MO 63304
USA

Standards:

- Conducted Emissions (EN55 011)
- Harmonics (EN 61000-3-2)
- Flicker (EN 61000-3-3)
- Radiated Emissions (EN55 011)
- Electrostatic Discharge (ESD) (EN 61000-4-2)
- Radiated Immunity (EN 61000-4-3)
- Fast Transient Burst (EN 61000-4-4)
- Surges (EN 61000-4-5)
- Conducted Immunity (EN 61000-4-6)
- Power Frequency Magnetic Field (EN 61000-4-8)
- Voltage Dips and Interrupts (EN 61000-4-11)
- Information Technology (EN60950-1:2001)

